

hohem hohem iSteady Q Black

# hohem iSteady Q Gimbal Stabilizer User Manual

MODEL: HOHEM iSTEADY Q BLACK

## Product Overview

The hohem iSteady Q is an innovative 4-in-1 device designed to enhance your smartphone photography and videography. It functions as a 1-axis gimbal stabilizer, an extendable selfie stick, a stable tripod stand, and a desktop gimbal with 360° face tracking. Its compact and lightweight design, combined with a detachable wireless remote, offers unparalleled versatility for capturing smooth, professional-looking content.



Figure 1: hohem iSteady Q showcasing its multi-functional design and detachable remote.

## Setup Guide

### 1. What's in the Box

- hohem iSteady Q Gimbal Stabilizer with built-in tripod and remote
- USB Charging Cable
- Storage Bag
- User Manual

### 2. Unfolding and Powering On

Unfold the gimbal and extend the phone clamp. Ensure the lock switch is in the unlocked position (stabilizer mode) for motorized stabilization. For selfie stick mode without stabilization, keep the lock switch engaged.

Video 1: Demonstrates the unboxing and initial setup of the hohem iSteady Q.

### 3. Phone Mounting and Balancing

Mount your smartphone securely in the phone clamp. For optimal performance, ensure the phone is centered and balanced. The Hohem logo on the clamp should face the same direction as your phone's camera. The 1-axis anti-shake function provides stability even if not perfectly balanced, but proper mounting is recommended.



Figure 2: The iSteady Q's anti-shake performance ensures stable shooting even during movement.

Video 2: Step-by-step guide on how to mount and balance your smartphone on the gimbal stabilizer.

### 4. Bluetooth Connection (Hohem Joy App)

Download the 'Hohem Joy' app from your device's app store. Enable Bluetooth on your smartphone and open the app. The gimbal should automatically be detected. Select the device and pair it via Bluetooth. The indicator



light on the gimbal will confirm a successful connection.

Video 3: Instructions on downloading the Hohem Joy app and connecting via Bluetooth.

## Operating Modes

The hohem iSteady Q offers four primary operating modes to suit various shooting scenarios:



### **Anti-shake for Stable Shooting**

Never post a shaky video again



Figure 3: The 4-in-1 professional usages of the iSteady Q.

## 1. Handheld Gimbal Mode

In this mode, the iSteady Q actively stabilizes your phone, reducing shakes and jitters for smooth video footage. Ideal for walking, running, or capturing dynamic shots.

Video 4: Demonstrates handheld and desktop use of the hohem iSteady Q.

## 2. Extendable Selfie Stick Mode

Extend the stick up to 19.6 inches for wider angles and group shots. The detachable remote allows you to capture photos or start/stop video recording from a distance.



## Lightweight and Extendable

Selfie Stick for Hassle-free Shooting





Figure 4: The iSteady Q extends for versatile selfie and group shots.

### 3. Tripod Stand Mode

Unfold the integrated tripod legs to set the iSteady Q on a flat surface for stable, hands-free shooting. Perfect for time-lapses, long exposures, or video calls.

## 4 in 1 Professional Usages



• Extendable Selfie Stick



• Handheld Gimbal



• Phone Tripod



• 360° Table Follow Mode

Figure 5: The iSteady Q in 360° face tracking mode, ideal for desktop use.

### 4. 360° Table Follow Mode

When connected to the Hohem Joy app and placed on a surface using its tripod, the iSteady Q can automatically track your face and rotate 360° to keep you in frame. This is excellent for live streaming, video

conferencing, or recording dynamic content where you move around.

Video 5: Overview of multiple app functions including face tracking and moment modes.

## Remote Control Functions

The detachable remote control provides convenient access to key functions:

- **Shutter Button (Single Press):** Takes a photo or starts/stops video recording.
- **Shutter Button (Double Press):** Switches between photo and video modes.
- **Shutter Button (Triple Press):** Switches between front and rear cameras.
- **Navigation Buttons (Long Press Left/Right):** Controls the rotation of the stabilizing stick.
- **Navigation Buttons (Long Press Up/Down):** Zooms in or out.
- **Function Button (Single Press):** Switches between landscape and portrait modes.
- **Function Button (Double Press):** Recenters the gimbal.
- **Function Button (Triple Press):** Initiates horizontal auto-rotation (e.g., for inception mode).



## 360° Face Tracking Go Hands-free

Always Keep you Stay in frame



Figure 6: The wireless remote control allows for convenient operation from a distance.

Video 6: Full tutorial on using the hohem iSteady Q's remote control.

### Maintenance

- Keep the device clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Store the iSteady Q in its provided storage bag when not in use to protect it from scratches and impacts.



- Charge the device regularly, even if not in frequent use, to maintain battery health.

### Troubleshooting

- **Gimbal not stabilizing:** Ensure the lock switch is in the unlocked position. Check phone mounting and balance.
- **Bluetooth connection issues:** Ensure Bluetooth is enabled on your phone and the gimbal is powered on. Try restarting both devices. If the remote control is not working properly, press its power button 7 times, then turn it on again to re-pair.
- **App features not working:** Ensure the Hohem Joy app is updated to the latest version.

For more detailed troubleshooting or specific app features like Motion Time-lapse, CloneMe, or Face Tracking, please refer to the tutorial videos within the Hohem Joy app or the comprehensive user manual PDF.

### Specifications

Feature	Detail
Product Dimensions	5.52 x 1.42 x 2.13 inches
Item Weight	6.9 ounces
Item Model Number	hohem iSteady Q Black
Batteries	1 Lithium Ion batteries required.
Compatible Devices	Huawei P50Pro/P50/P40Pro/Mate50Pro+/Mate40Pro/Mate40/Mate30, Oneplus 7tpro/8/9 Pro/9/10, Google Pixel 5/5XL, iPhone 14/13 Pro Max/12 Pro/12 Mini/SE2/11 Pro Max/XS MAX, Samsung S22Ultra/S22/GalaxyS22+/Note20/Note10+/S10e/S10+, and other Android smartphones.
Maximum Weight Recommendation	9.92 ounces
Folded Size	5.52 X 2.13 X 1.42 inches

### Warranty and Support

For warranty information, technical support, or further assistance, please refer to the official hohem website or the full User Manual PDF available at: [User Manual \(PDF\)](#).

hohem is dedicated to providing high-quality products and support to ensure a stunning, professional shooting experience.

