

[Manuals.plus](#) /

› [Juboos](#) /

› [Juboos Kids Digital Watch MR-2206 User Manual](#)

Juboos MR-2206

Juboos Kids Digital Watch User Manual

Model: MR-2206

Brand: Juboos

INTRODUCTION

Thank you for choosing the Juboos Kids Digital Watch, Model MR-2206. This watch is designed for children aged 5-18, offering multiple functions including time display, date, day of the week, alarm, stopwatch, and a 7-color LED backlight. Its durable and 5 ATM water-resistant design makes it suitable for various outdoor activities. Please read this manual carefully to understand how to operate and maintain your watch.



Image: Juboos Kids Digital Watch (Model MR-2206)

WATCH COMPONENTS AND FUNCTIONS

Familiarize yourself with the buttons and display areas of your Juboos Digital Watch:



Image: Watch button and display element diagram

- **LIGHT Button (Top Left):** Activates the backlight and changes its color.
- **MODE Button (Bottom Left):** Cycles through display modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop stopwatch, adjust values during setting.
- **RESET Button (Bottom Right):** Used to reset stopwatch, adjust values during setting.

SETUP INSTRUCTIONS

1. Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to return to the normal time display.

2. Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **START** button to adjust the alarm hour.
3. Press the **RESET** button to switch to minute setting. The minute digits will flash.

4. Press the **START** button to adjust the alarm minute.
5. Press the **MODE** button to exit alarm setting mode.

3. Activating/Deactivating Alarm and Hourly Chime

- From the normal time display, press and hold the **RESET** button, then press the **START** button to toggle the alarm ON/OFF. An alarm icon will appear/disappear on the display.
- From the normal time display, press and hold the **RESET** button, then press the **MODE** button to toggle the hourly chime ON/OFF. All day-of-week indicators will appear/disappear.

OPERATING INSTRUCTIONS

1. Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. Press the **MODE** button to return to the normal time display.

2. Changing the LED Backlight Color

The watch features a 7-color LED backlight.



Image: LED backlight color options

- Press the **LIGHT** button (top left) to activate the backlight.
- Press and hold the **LIGHT** button for approximately 3 seconds to cycle through the 7 available LED colors. Release the button on your desired color.

WATER RESISTANCE GUIDELINES

The Juboos Kids Digital Watch is rated 5 ATM (50 meters / 164 feet) water resistant. This means it is suitable for daily use, hand washing, showering, and swimming in shallow water.



Image: Watch in use during hand washing, demonstrating water resistance

Important Precautions:

- **DO NOT** press any buttons while the watch is submerged in water.
- **DO NOT** wear the watch during long underwater activities such as diving or snorkeling.
- Avoid exposing the watch to hot water or steam, as this can compromise the water-resistant seals.

MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** The watch uses 1 Lithium Metal battery. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.
- **Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can

damage the watch case and strap.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low. Consider replacing the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not specify one). Try pressing the buttons firmly. If the issue persists, a battery replacement might resolve it.
- **Time is incorrect:** Re-set the time and date following the instructions in the 'Setup' section. Ensure you are not accidentally pressing buttons that change the time.
- **Alarm not sounding:** Check if the alarm function is activated (alarm icon visible on display). Ensure the alarm time is set correctly.
- **Water inside the watch:** If water appears inside the watch, stop using it immediately and seek professional repair to prevent further damage.

SPECIFICATIONS

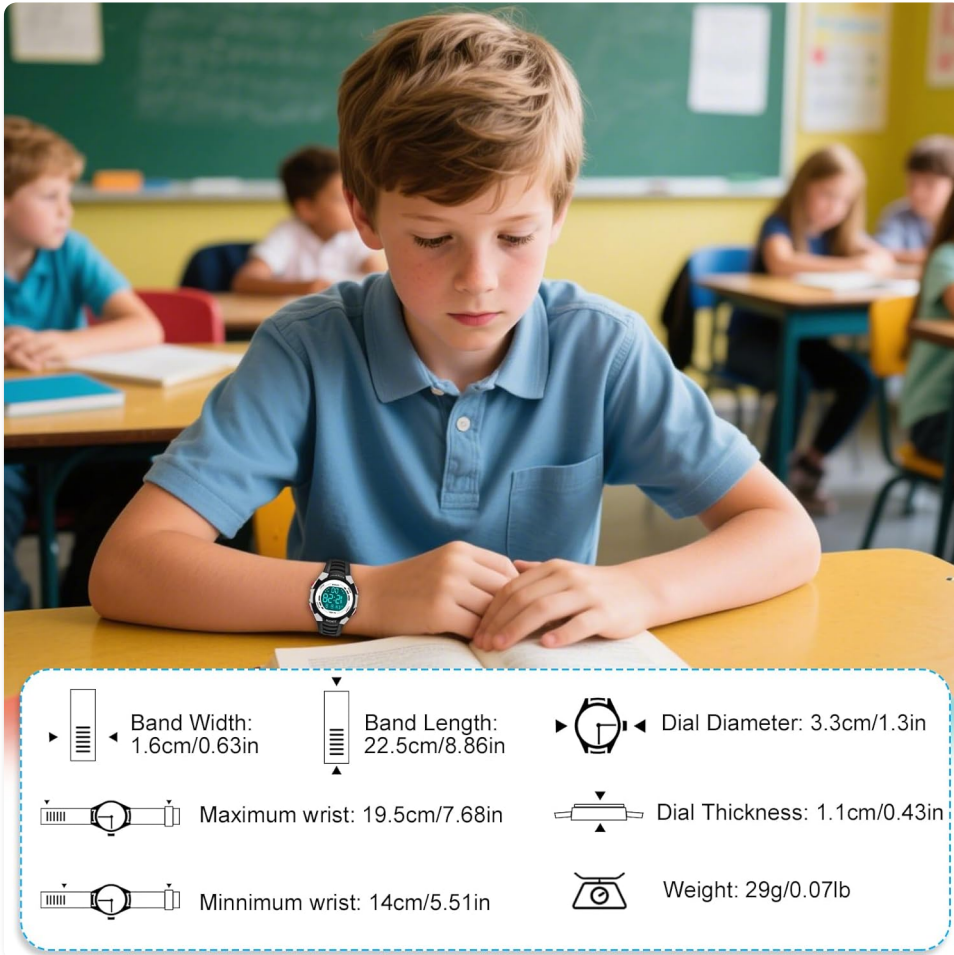


Image: Watch dimensions and weight

Feature	Detail
Model Number	MR-2206
Product Dimensions	8.86 x 0.63 x 1.3 inches (22.5 x 1.6 x 3.3 cm)

Item Weight	0.92 ounces (29 grams)
Water Resistance	5 ATM (50 meters / 164 feet)
Clasp Type	Buckle
Battery Type	1 Lithium Metal battery (required)
Manufacturer	Juboos

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or contact Juboos directly through their official channels. General return policies may vary by retailer. You can visit the [Juboos Store on Amazon](#) for more product information and to contact the seller.

© 2025 Juboos. All rights reserved.