

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Yealink](#) /

> [Yealink W73H Handset Instruction Manual](#)

Yealink W73H

Yealink W73H Handset Instruction Manual

Model: W73H

1. PRODUCT OVERVIEW

The Yealink W73H is a new-generation wireless DECT handset designed for business communication. It offers a sleek, modern design, enhanced portability, and improved battery life, combined with high-quality voice communication and secure DECT encryption technology. This handset is compatible with Yealink W70B DECT IP base stations and W90 multi-cell systems, providing flexible options for office communication needs.



Image: Yealink W73H Handset placed in its charging cradle.

Key Features:

- Modern, compact design for easy portability.
- Extended talk time of up to 35 hours (under ideal conditions).
- Long standby time of up to 400 hours.
- High-Definition (HD) voice quality with noise cancellation.
- 3.5 mm jack for headset connection.

- Durable and reliable belt clip for convenient carrying.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- W73H Handset
- Charger Cradle
- Rechargeable Battery (2 AAA batteries included)
- Belt Clip
- Power Adapter

If any item is missing or damaged, please contact your vendor.

3. GETTING STARTED

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards and remove it.
3. Insert the two AAA rechargeable batteries, ensuring correct polarity (+ and -).
4. Replace the battery compartment cover and slide it upwards until it clicks into place.

3.2 Charging the Handset

1. Connect the power adapter to the charger cradle and then to a power outlet.
2. Place the W73H handset into the charger cradle. Ensure the charging contacts on the handset align with those on the cradle.
3. The battery icon on the handset display will indicate charging status. For first-time use, charge the handset for at least 10 hours.

3.3 Registering the Handset

The W73H handset must be registered to a Yealink DECT IP base station (e.g., W70B) to function. Refer to your base station's manual for specific registration instructions. Generally, the process involves:

1. Put the DECT base station into registration mode (usually by pressing and holding a button on the base).
2. On the W73H handset, navigate to the registration menu (e.g., *Menu > Settings > Registration > Register Handset*).
3. Select the base station and enter the system PIN (default is usually 0000 or 1234).
4. Once successfully registered, the handset display will show the base station name or an active line indicator.

4. BASIC OPERATIONS

4.1 Making Calls

- **Dialing Directly:** Enter the phone number and press the **Call** key.
- **From Call History:** Press the **History** key, navigate to the desired entry, and press the **Call** key.
- **From Directory:** Press the **Directory** key, navigate to the desired contact, and press the **Call** key.

4.2 Answering Calls

When the phone rings, press the **Call** key or any soft key (e.g., *Answer*) to answer the call.

4.3 Ending Calls

During a call, press the **End Call** key to terminate the conversation.

4.4 Volume Adjustment

During a call, use the **Up** and **Down** navigation keys to adjust the earpiece or speaker volume.

4.5 Mute Function

During a call, press the **Mute** soft key to mute your microphone. Press it again to unmute.

5. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the handset and charger cradle. Do not use liquid or aerosol cleaners.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If the handset will not be used for an extended period, remove the batteries.
- **Environment:** Keep the handset away from excessive heat, direct sunlight, and moisture.
- **Handling:** Avoid dropping the handset or subjecting it to strong impacts.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Yealink W73H handset.

Problem	Possible Cause	Solution
Handset does not power on.	Battery is not charged or incorrectly installed.	Ensure batteries are correctly installed and charge the handset for several hours.
Cannot make or receive calls.	Handset is not registered to a base station or out of range.	Register the handset to the base station. Move closer to the base station. Ensure the base station is powered on and connected to the network.

Problem	Possible Cause	Solution
Poor audio quality.	Interference or weak signal.	Move away from other electronic devices that may cause interference. Move closer to the base station.
Handset display is blank.	Handset is off or battery is depleted.	Press and hold the Call key to power on. Place the handset in the charger cradle.

If the problem persists after attempting these solutions, please contact your service provider or Yealink support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	W73H
Product Dimensions	7.3 x 4.4 x 3.6 inches
Item Weight	11.2 ounces
Batteries	2 AAA batteries (included)
Color	Black
Material	Acrylonitrile Butadiene Styrene (ABS)
Telephone Type	Cordless
Power Source	Battery Powered
Dialer Type	Single Keypad
Answering System Type	Digital
Visible Screen Diagonal	2 inches / 5 cm

8. WARRANTY AND SUPPORT INFORMATION

For warranty details and technical support, please refer to the official Yealink website or contact your authorized Yealink reseller. Keep your purchase receipt as proof of purchase for warranty claims.

Yealink Official Website: www.yealink.com

