

BYDIFFER LKS-WF-US-B

BYDIFFER Cordless Water Flosser LKS-WF-US-B Instruction Manual

Model: LKS-WF-US-B

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your BYDIFFER Cordless Water Flosser, Model LKS-WF-US-B. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical products, especially when children are present. This product is designed for oral hygiene. Use only as directed in this manual.

- Do not immerse the charging base in water or other liquids.
- Ensure the charging port cover is securely closed when not charging to maintain IPX7 waterproof rating.
- Do not use if the product or charging cable is damaged.
- Keep out of reach of children.
- Consult a dentist before use if you have any oral health concerns.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- BYDIFFER Cordless Water Flosser Unit
- Standard Jet Tips (2)
- Periodontal Jet Tip (1)
- Tongue Cleaning Tip (1)
- Orthodontic Tip (1)
- USB Charging Cable
- Instruction Manual

Large Capacity Battery Anti-lost Design



20 Days

Charging 4 Hours



5 Jet Tips



Anti-lost Charging
Port Cover



Anti-lost Water
Tank Lid

Image: The BYDIFFER Cordless Water Flosser unit shown with its five interchangeable jet tips and charging cable.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your water flosser:

- **Power Button:** Turns the device on/off.
- **Mode Button (M):** Cycles through the five cleaning modes.
- **Mode Indicators:** LEDs for Low, Mid, High, Pulse, and DIY modes.
- **Water Tank:** 300ml capacity, detachable for easy cleaning and refilling.
- **Jet Tip Release Button:** Releases the attached jet tip.
- **360° Rotatable Tip:** Allows for easy access to all areas of the mouth.
- **Charging Port:** Located at the bottom, with an anti-lost cover.
- **Anti-skid Design:** Textured surface on the back for secure grip.

5 Adjustable Clean Modes

Removes and clean 99% of residue offectively



Tip Button



Charging Port



LOW

For Sensitive Gums



MID

For Daily Cleaning



HIG

For Teeth Polishing



PULSE

For Tongue
and Gum Massage



DIY

Choose Your
Desired Pressure

Image: Close-up of the water flosser's control panel, highlighting the power button, mode button, and LED indicators for different cleaning modes.



Image: Detail of the anti-lost charging port cover and the water tank lid, designed to prevent misplacement.

5. SETUP

5.1 Charging the Device

Before first use, fully charge the water flosser. A full charge typically takes approximately 4 hours and provides up to 20 days of use.

1. Open the anti-lost charging port cover at the bottom of the device.
2. Connect the USB charging cable to the charging port and a suitable USB power adapter (not included).
3. The mode indicators will light up sequentially during charging. All indicators will remain lit when fully charged.
4. Once charging is complete, disconnect the cable and securely close the charging port cover.

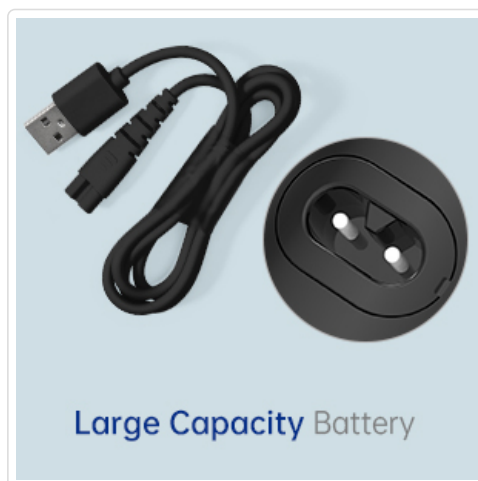


Image: Illustration of the water flosser's battery life, indicating 20 days of use from a 4-hour charge.

5.2 Attaching a Jet Tip

1. Select the desired jet tip (Standard, Periodontal, Tongue Cleaning, or Orthodontic).
2. Insert the stem of the jet tip into the opening at the top of the flosser unit until it clicks into place.
3. To remove, press the jet tip release button and pull the tip out.

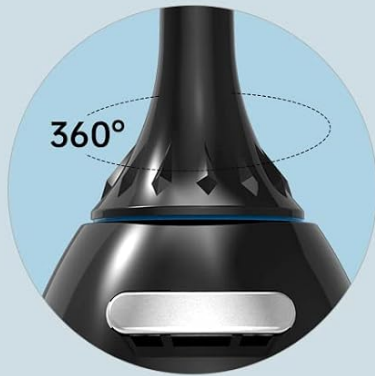


Image: A selection of five different jet tips for the water flosser, including standard, periodontal, tongue cleaning, and orthodontic tips.

5.3 Filling the Water Tank

1. Open the water tank lid at the back of the unit.
2. Fill the 300ml tank with lukewarm water. You may also use mouthwash as recommended by your dental professional.
3. Close the water tank lid securely to prevent leakage.

Detachable Water Tank



Tip 360° Rotatable



Easy to Clean



Enlarge **300ML**



Easy to fill water



Image: Visual guide demonstrating the process of detaching and filling the 300ml water tank of the BYDIFFER Water Flosser.

6. OPERATING INSTRUCTIONS

The BYDIFFER Water Flosser features 5 adjustable cleaning modes to suit various oral care needs.

1. **Power On/Off:** Press the Power button to turn the device on or off.
2. **Select Mode:** With the device on, press the 'M' (Mode) button to cycle through the available modes:
 - **LOW:** Gentle pressure for sensitive gums or first-time users.
 - **MID:** Moderate pressure for daily cleaning.
 - **HIGH:** Strong pressure for deep cleaning and teeth polishing.
 - **PULSE:** Pulsating stream for gum massage and improved circulation.
 - **DIY:** Allows you to customize water pressure by holding the mode button.
3. **Flossing Technique:** Lean over a sink. Place the jet tip in your mouth, aiming the stream at the gumline at a 90-degree angle. Move the tip along the gumline, pausing briefly between teeth.

4. **Waterproof Design:** The device is IPX7 waterproof and can be used in the shower.



Image: Diagram illustrating the five distinct cleaning modes of the water flosser, detailing their intended uses.

IPX7 Waterproof



Image: The water flosser submerged in water, illustrating its IPX7 waterproof capability for safe use in wet environments.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your water flosser.

1. **Empty and Dry Tank:** After each use, empty any remaining water from the tank. Detach the tank and allow it to air dry to prevent mold and mildew.
2. **Clean Unit Surface:** Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners.
3. **Clean Jet Tips:** Rinse jet tips under running water. Replace jet tips every 3-6 months, or sooner if they show signs of wear.
4. **Storage:** Store the device in a cool, dry place away from direct sunlight.



Image: The detachable water tank, illustrating its design for easy removal and thorough cleaning.

8. TROUBLESHOOTING

If you encounter issues with your water flosser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Weak water pressure.	Water tank is low or empty; clogged jet tip.	Refill the water tank; clean or replace the jet tip.
Water leakage.	Water tank or charging port cover not securely closed.	Ensure all covers and connections are tightly sealed.
Device stops working after a short period.	Low battery; internal malfunction.	Recharge the device. If the problem persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	LKS-WF-US-B
Brand	BYDIFFER
Dimensions	3.35 x 2.83 x 8.58 inches
Weight	250 Grams (8.82 ounces)
Water Tank Volume	300 Milliliters
Power Source	Battery Powered (1 Lithium Ion battery included)
Waterproof Rating	IPX7
Charging Time	Approx. 4 hours
Operating Modes	Low, Mid, High, Pulse, DIY
Included Jet Tips	5 (2 Standard, 1 Periodontal, 1 Tongue Cleaning, 1 Orthodontic)

10. WARRANTY AND SUPPORT

BYDIFFER is committed to product quality. For warranty information, technical support, or assistance with your device, please contact BYDIFFER customer service. Refer to the packaging or official BYDIFFER website for contact details.
Note: Retain your proof of purchase for warranty claims.

© 2024 BYDIFFER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question