

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lights4fun](#) /

› [Lights4fun LL21079 Set of 4 Multicolor Battery-Operated Outdoor Garden Stakes User Manual](#)

Lights4fun LL21079

Lights4fun LL21079 Set of 4 Multicolor Battery-Operated Outdoor Garden Stakes User Manual

Model: LL21079 | Brand: Lights4fun

INTRODUCTION

Thank you for choosing the Lights4fun LL21079 Set of 4 Multicolor Battery-Operated Outdoor Garden Stakes. This manual provides essential information for the safe and efficient use of your new garden lights. Please read these instructions carefully before installation and operation, and retain them for future reference.



Image: The Lights4fun LL21079 set of four multicolor garden stakes, illuminated and placed in a snowy outdoor setting.

IMPORTANT SAFETY INFORMATION

- Ensure batteries are inserted with correct polarity (+/-). Incorrect insertion can cause damage.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for an extended period to prevent leakage.
- Keep batteries out of reach of children.
- This product is rated IP44 for outdoor use, meaning it is protected against solid objects over 1mm and splashing water from any direction. Do not submerge in water.
- Do not attempt to modify or repair the product. Contact customer support for assistance.
- Position stakes securely in the ground to prevent them from falling over.

PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package:

- 4 x Lights4fun Multicolor LED Garden Stakes (46 cm height each)
- Instruction Manual (this document)

Note: 3 x AA (LR06) batteries are required per stake and are not included in the package.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all garden stakes from their packaging.
2. **Install Batteries:**
 - Locate the battery compartment on each garden stake. This is typically at the base or within the stake assembly.
 - Open the battery compartment cover.
 - Insert 3 x AA (LR06) batteries into each stake, ensuring correct polarity (+ and -).
 - Securely close the battery compartment cover to maintain weather resistance.
3. **Placement:**
 - Choose a suitable outdoor location for your garden stakes. Ensure the ground is soft enough to insert the stakes without excessive force.
 - Gently push the pointed end of each stake into the ground until it is stable and upright. Avoid pushing on the light bulb housing directly.

OPERATING INSTRUCTIONS

The Lights4fun garden stakes feature a simple on/off switch and an integrated timer function.

1. **Power On/Off:** Locate the power switch, usually near the battery compartment. Slide the switch to the "ON" position to activate the lights. Slide to "OFF" to turn them off manually.
2. **Timer Function:**
 - When the lights are switched to the "ON" position, the integrated 6-hour timer will activate automatically.
 - The lights will illuminate for 6 hours, then automatically turn off for 18 hours.
 - This cycle will repeat daily at the same time the lights were initially switched "ON".
 - To reset the timer, switch the lights "OFF" and then "ON" again at your desired new start time.

MAINTENANCE

- **Cleaning:** Wipe the stakes and light housings with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the lights dim or stop working, it's time to replace the batteries. Follow the "Install Batteries" steps in the Setup section. Dispose of old batteries responsibly according to local regulations.
- **Storage:** If storing the lights for an extended period, remove all batteries to prevent leakage and store them in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or low. Batteries are inserted incorrectly. Power switch is in "OFF" position.	Replace with fresh AA batteries. Check battery polarity and reinsert correctly. Slide the power switch to "ON".
Lights are dim.	Batteries are low.	Replace with fresh AA batteries.
Timer function is not working as expected.	Timer needs to be reset.	Switch the lights "OFF" and then "ON" again at the desired time to reset the 6-hour cycle.

SPECIFICATIONS

Brand: Lights4fun

Model Number: LL21079

Product Dimensions (L x W x H): 6.5 x 6.5 x 46 cm (per stake)

Weight: 408 grams (total for 4 stakes)

Number of Items: 4

Style: Traditional

Color: Multicolor

Material: Plastic

Finish Type: Matte

Number of Bulbs: 4 (LEDs per stake)

Voltage: 4.5 Volts

Specific Uses: Decoration

Special Features: Timer (6-hour)

Shade Color: Multicolor

Shade Material: Plastic

Light Angle: LED

Power Source: Battery Powered

Switch Style: Push Button

Installation Type: Ground Mount

Batteries Required: Yes (3 x AA per stake, not included)

Bulb Type: LED

Energy Label: Energy Efficiency

Wattage: 5 Watts

IP Rating: IP44 (Outdoor Use)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact Lights4fun customer service directly. Keep your purchase receipt as proof of purchase.



Image: The official Lights4fun brand logo.

© 2023 Lights4fun. All rights reserved.

Related Documents - LL21079



①
Position all joints as shown. For each joint, line up and insert page into each side of the joint until the page is fully closed. Refer to instructions included with product for operation.

②
Positionen Sie alle Teile wie abgebildet. Richten Sie jedes Joint auf und stecken Sie die Seite in die entsprechenden Jointen ein, bis die Seite vollständig geschlossen ist. Weitere Anweisungen finden Sie im Produktbelehrungsblatt.

③
Coloque todas las partes como se muestra. Para cada parte, alinee y inserte la página en cada lado del joint. Los joints corresponden a la forma de los tornillos de tornillo que están completamente cerrados. Las instrucciones incluidas con el producto incluyen instrucciones para el funcionamiento.

④
Posizionare tutte i componenti come mostrati. Per ogni parte, allineare e inserire la pagina in entrambi i lati del joint. I joints corrispondono alla forma dei tornelli che sono completamente chiusi. Le istruzioni fornite con il prodotto includono informazioni sul funzionamento.

⑤
Posizionare tutte i componenti come mostrati. Per ogni parte, allineare e inserire la pagina in entrambi i lati del joint. I joints corrispondono alla forma dei tornelli che sono completamente chiusi. Le istruzioni fornite con il prodotto includono informazioni sul funzionamento.

lights4fun.
LIGHTS4FUN IS A TRADE MARK OWNED BY GAN THE COMPANY HOLDING LTD. TRADEMARKS AND TRADE NAMES OWNED BY GAN THE COMPANY HOLDING LTD. ARE REGISTERED TRADE MARKS AND TRADE NAMES OWNED BY GAN THE COMPANY HOLDING LTD.

[Lights4fun Wireframe Reindeer Decoration Assembly Guide](#)

Concise assembly instructions for the Lights4fun wireframe reindeer decoration, featuring multilingual guidance and product details.