

## Moulinex MASTERCHEF Delicio DFB Series

# Moulinex Food Processor Bowl Instruction Manual

For MASTERCHEF Delicio Series

## 1. INTRODUCTION

This manual provides essential information for the proper use, installation, and maintenance of your new original Moulinex replacement food processor bowl. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

This replacement bowl is designed for specific Moulinex MASTERCHEF Delicio food processor models, ensuring a perfect fit and optimal performance.

## 2. SAFETY INFORMATION

Always observe basic safety precautions when using any kitchen appliance accessory. This bowl is designed for use with compatible Moulinex food processors only.

- Ensure the food processor is unplugged before attaching or removing the bowl.
- Do not use the bowl if it is cracked, chipped, or damaged in any way.
- Keep hands and utensils away from moving parts when the food processor is operating.
- This bowl is **NOT** suitable for microwave use.
- Always ensure the bowl is securely locked onto the motor base before operation.
- Keep out of reach of children.

## 3. PRODUCT OVERVIEW

The Moulinex replacement food processor bowl is a transparent plastic container designed to hold ingredients during food preparation. It features a central shaft for attaching blades or other accessories and a sturdy handle for easy handling.



Figure 1: Moulinex Food Processor Bowl. This image shows the transparent plastic bowl from an angled top-down view, highlighting the integrated handle on the right side and the central shaft designed for accessory attachment. Measurement markings are visible on the side of the bowl.

The bowl is made from durable, food-grade plastic and includes measurement markings on its side for convenience.

## 4. COMPATIBILITY

---

This replacement bowl is compatible with the following Moulinex MASTERCHEF Delicio food processor models. Please verify your appliance's model number, typically found on a rating plate under the unit, to ensure compatibility.

### **Compatible Models:**

- DFB041
- DFB0B1
- DFB0C1
- DFB0D1
- DFB10841/700
- DFB10A41/700
- DFB112
- DFB141
- DFB142
- DFB143
- DFB144
- DFB145
- DFB146
- DFB147
- DFB148
- DFB14B
- DFB14C / 701
- DFB14D
- DFB1B1

- DFB1C1
- DFB241
- DFB242
- DFB243
- DFB244
- DFB245
- DFB246
- DFB247
- DFB248
- DFB249
- DFB311
- DFB341
- DFB342
- DFB343
- DFB344
- DFB345
- DFB346
- DFB347
- DFB348
- DFB3B1
- DFB441
- DFB442
- DFB443
- DFB4B1
- FP20114E / 70
- FP20314E / 70

If your model is not listed, please contact Moulinex customer support for assistance.

## 5. SETUP AND INSTALLATION

---

1. **Unpack:** Carefully remove the new bowl from its packaging. Inspect it for any signs of damage.
2. **Clean:** Before first use, wash the bowl thoroughly with warm, soapy water. Rinse well and dry completely.
3. **Position:** Place the food processor's motor base on a stable, flat surface.
4. **Attach Bowl:** Align the bottom of the bowl with the motor base. Gently lower the bowl onto the base, ensuring the central shaft aligns with the motor's drive shaft.
5. **Lock in Place:** Rotate the bowl clockwise until it clicks securely into place. Most Moulinex food processors have a safety interlock system that prevents operation unless the bowl is correctly locked.
6. **Add Accessories:** Once the bowl is secured, you can insert the desired blade or accessory onto the central shaft.

## 6. OPERATING INSTRUCTIONS

---

The bowl itself does not have operational controls; its function is dependent on the food processor's motor base and accessories. Follow the operating instructions provided with your specific Moulinex food processor model for detailed usage.

- Always ensure the bowl is clean and dry before adding ingredients.
- Do not overfill the bowl beyond the maximum fill line indicated on its side.
- Ensure the lid is properly secured before starting the food processor.
- For best results, process ingredients in batches if necessary, rather than overloading the bowl.

## 7. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your food processor bowl.

- **Immediate Cleaning:** After each use, unplug the food processor and remove the bowl. Rinse it immediately to prevent food residue from drying.
- **Hand Washing:** Wash the bowl with warm water and a mild dish soap. Use a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could scratch the plastic.
- **Dishwasher Safe:** The bowl is dishwasher safe. Place it on the top rack of your dishwasher for cleaning. Avoid high-temperature cycles if possible, as prolonged exposure to extreme heat can affect plastic over time.
- **Drying:** Allow the bowl to air dry completely or dry with a soft cloth before storing.
- **Storage:** Store the bowl in a clean, dry place, away from direct sunlight or extreme temperatures.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bowl does not fit or lock onto the motor base.	Incorrect alignment or incompatible model.	Ensure the bowl is correctly aligned with the motor base. Refer to Section 4 for compatible models. Do not force the bowl.
Food processor does not start with the bowl attached.	Bowl not securely locked or lid not properly closed.	Rotate the bowl clockwise until it clicks into its locked position. Ensure the food processor lid is also correctly secured.
Bowl appears cloudy or stained after use.	Residue from certain foods or hard water.	Clean immediately after use. For stubborn stains, soak the bowl in warm soapy water before scrubbing gently. A solution of white vinegar and water can help with hard water stains.

If you experience issues not listed here, please consult your food processor's main instruction manual or contact Moulinex customer support.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Moulinex

Feature	Detail
Product Type	Replacement Food Processor Bowl
Material	Plastic
Dimensions (L x W x H)	16 x 16 x 12 cm (approximately)
Item Weight	240 grams (approximately)
Dishwasher Safe	Yes
Microwave Safe	No
Compatible Models	Moulinex MASTERCHEF Delicio DFB0, DFB10, DFB148, DFB242 series and others listed in Section 4.

## 10. WARRANTY AND SUPPORT

---

For information regarding warranty coverage for this replacement part, please refer to the original purchase documentation or contact the retailer from whom you purchased the bowl. Moulinex provides customer support for their products.

For further assistance or inquiries, please visit the official Moulinex website or contact their customer service department. Contact details can typically be found on the Moulinex official website or in the original food processor manual.

You can visit the [Moulinex Store on Amazon](#) for more products and information.