



N715800

OEM N715800 Replacement Safety Key User Manual

For Craftsman Lawn Mowers CMCMW220P2, CMCMW220P2-CA

Brand: Generic | Model: N715800

INTRODUCTION

This manual provides essential information for the proper use and care of your OEM N715800 Replacement Safety Key. This key is designed to replace the original safety key for specific Craftsman lawn mower models, ensuring safe operation of your equipment. Please read this manual thoroughly before using the key with your lawn mower.

PRODUCT OVERVIEW



Image of the OEM N715800 replacement safety key, a red plastic component with a ribbed handle and a flat, slotted insertion end.

- Genuine, OEM Replacement Part.
- Specifically designed as a replacement safety key, part number N715800.
- Compatible with Craftsman lawn mower models CMCMW220P2 and CMCMW220P2-CA.
- Dimensions: Approximately 3.00 inches (length) X 1.40 inches (width) X 0.50 inches (thickness).

SETUP

The safety key is a critical component for starting and operating your lawn mower. It acts as a safety interlock, preventing the mower from starting without the key in place.

Installation:

1. Locate the safety key slot on your Craftsman lawn mower. Refer to your mower's original user manual for the exact location if needed.
2. Insert the N715800 replacement safety key firmly into the slot until it clicks into place or is fully seated. Ensure the key is oriented correctly as per your mower's design.

Removal:

- To remove the key, simply pull it directly out of its slot. This action typically disengages the ignition system, preventing accidental starts.

OPERATING

The safety key ensures that the lawn mower will not start or operate without the key fully inserted. This is a crucial safety feature.

- Always ensure the safety key is removed when the mower is unattended, during maintenance, or when clearing debris from the blades. This prevents accidental starting and potential injury.
- Insert the key only when you are ready to operate the mower and are in a safe, clear area.
- Never bypass or tamper with the safety key mechanism. Doing so can lead to serious injury.

MAINTENANCE

Proper maintenance of your safety key will ensure its longevity and reliable function.

- Keep the safety key clean and free of dirt, grass clippings, or other debris. A damp cloth can be used for cleaning.
- Store the key in a dry place when not in use to prevent damage or loss.
- Inspect the key periodically for any signs of wear, cracks, or damage. A damaged key may not function correctly and should be replaced immediately.
- Do not attempt to modify or repair a damaged safety key. Use only genuine or OEM replacement parts.

TROUBLESHOOTING

If you encounter issues related to the safety key, refer to the table below for common problems and solutions.

Problem	Solution
Mower does not start when key is inserted.	<ul style="list-style-type: none">• Ensure the key is fully and correctly inserted into the slot.• Check for any visible damage to the key or the key slot on the mower.• Verify that all other safety mechanisms (e.g., bail lever, dead man's switch) are engaged as required by your mower's operating instructions.• Consult your lawn mower's primary user manual for other starting issues not related to the safety key.
Key feels loose or falls out easily.	<ul style="list-style-type: none">• Inspect the key for wear or damage that might prevent a secure fit.• Inspect the key slot on the mower for debris or damage.• If the key is worn, replace it with a new OEM N715800 key.

SPECIFICATIONS

Attribute	Detail
Color	Red
Brand	Generic (OEM Replacement)
Material	Plastic
Item Length	3 Inches (approx.)
Item Package Quantity	1
Finish Type	Powder Coated
Operation Mode	Mechanical
Manufacturer	Generic
Part Number	N715800
Item Weight	0.528 ounces (approx.)
Country of Origin	USA
Compatible Models	Craftsman CMCMW220P2, CMCMW220P2-CA

WARRANTY AND SUPPORT

As an OEM replacement part, this safety key is designed to meet the specifications of the original equipment. Specific warranty information for this replacement part may vary by retailer or manufacturer. Please retain your purchase receipt for any warranty claims.

For support regarding the functionality of the key with your specific Craftsman lawn mower model, refer to your mower's original user manual or contact Craftsman customer service. For issues directly related to the replacement key itself (e.g., manufacturing defects), please contact the seller or manufacturer of the replacement part.