

MasterChef Electric Pressure Cooker 10 in 1

MasterChef Electric Pressure Cooker 10-in-1 Multicooker User Manual

Model: Electric Pressure Cooker 10 in 1

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your MasterChef Electric Pressure Cooker. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Always ensure the lid is properly sealed before operating under pressure.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.

PRODUCT OVERVIEW

The MasterChef Electric Pressure Cooker is a versatile 10-in-1 multicooker designed to simplify your cooking process. It functions as a pressure cooker, slow cooker, rice cooker, steamer, sauté pan, yogurt maker, and more.



Figure 1: Front view of the MasterChef Electric Pressure Cooker, showcasing its sleek stainless steel design and intuitive digital control panel.



18 Easy preset cooking settings

Figure 2: Detailed view of the control panel, highlighting the digital display and the 18 easy preset cooking settings for various dishes.

Components

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Removable, non-stick cooking pot.
- **Lid:** With sealing ring, steam release valve, and float valve.
- **Condensation Collector:** Attaches to the back of the unit to collect condensation.
- **Power Cord:** Detachable power supply cord.

SETUP AND FIRST USE

Unpacking

1. Carefully remove all contents from the packaging.
2. Remove any protective film or packaging materials from the appliance.
3. Verify all components are present as listed in the Product Overview section.

Initial Cleaning

Before first use, clean all parts that will come into contact with food.

- Wash the inner pot, sealing ring, and condensation collector with warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Assembly

1. Place the inner pot into the main unit, ensuring it sits flat and securely.
2. Attach the condensation collector to the designated slot on the back of the cooker.
3. Ensure the sealing ring is properly seated inside the lid.
4. Place the lid on the cooker, aligning the arrow on the lid with the arrow on the base, then twist clockwise until it locks into place.

OPERATING INSTRUCTIONS

Your MasterChef Electric Pressure Cooker features 18 preset cooking functions and manual controls for versatile meal preparation.



Reduces cooking time by up to 70%



Figure 3: Preparing ingredients for cooking. The multicooker reduces cooking time by up to 70%.

Basic Operation

1. Add ingredients to the inner pot. Do not exceed the MAX fill line.
2. Secure the lid and ensure the steam release handle is in the 'Sealing' position for pressure cooking.
3. Plug the power cord into a grounded electrical outlet.
4. Select your desired cooking program from the control panel.

Using Preset Functions

The cooker offers 18 smart programs for common dishes. Simply press the corresponding button for your desired function (e.g., Soup, Rice, Meat/Stew, Cake, Yogurt).

- The display will show a default cooking time. Use the '+' and '-' buttons to adjust the time if needed.
- For pressure cooking programs, the cooker will automatically preheat and build pressure before the cooking timer begins.

Manual Cooking

For custom recipes, use the 'Manual' button:

- Press 'Manual'.
- Use '+' and '-' to set the desired cooking time.
- Press 'Pressure' to cycle between Low Pressure and High Pressure settings.
- The cooker will begin the cooking cycle after a few seconds.

Timer and Keep Warm Functions



Large 6 Quart Capacity



Figure 4: The 'Timer' and 'Keep Warm' functions provide convenience for delayed cooking and serving.

- **Timer:** Use this function to delay the start of a cooking program. After selecting a program, press 'Timer' and use '+' and '-' to set the delay time.
- **Keep Warm/Cancel:** After cooking is complete, the cooker automatically switches to 'Keep Warm' mode. Press 'Keep Warm/Cancel' to turn off the cooker at any time.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your pressure cooker.

Daily Cleaning

- Always unplug the cooker and allow it to cool completely before cleaning.
- The inner pot is dishwasher safe for easy cleaning.
- Wash the lid, sealing ring, and condensation collector with warm, soapy water. Rinse and dry thoroughly.
- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.

Periodic Maintenance

- Inspect the sealing ring regularly for cracks or damage. Replace if necessary to ensure proper pressure sealing.
- Ensure the steam release valve and float valve are clear of food debris and move freely.

TROUBLESHOOTING

If you encounter issues with your MasterChef Electric Pressure Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure	Lid not properly sealed; Steam release handle in 'Venting' position; Sealing ring damaged or not in place; Insufficient liquid.	Ensure lid is locked; Turn steam release handle to 'Sealing'; Check and adjust sealing ring; Add minimum required liquid.
Food not cooking properly	Incorrect cooking time/pressure setting; Not enough liquid.	Adjust cooking time/pressure; Ensure adequate liquid for pressure cooking.
Error code on display	Specific internal issue.	Refer to the full user manual PDF for specific error code meanings and solutions, or contact customer support.
Steam leaking from lid	Sealing ring not properly seated or damaged; Food debris on sealing ring or rim.	Re-seat or replace sealing ring; Clean sealing ring and lid rim.

SPECIFICATIONS

Key technical specifications for the MasterChef Electric Pressure Cooker:

Feature	Specification
Brand	MasterChef
Model Number	Electric Pressure Cooker 10 in 1
Capacity	6 Quarts
Material	Stainless steel
Color	Black and Silver
Product Dimensions	11.4"D x 11.4"W x 13.4"H

Feature	Specification
Wattage	1000 watts
Voltage	110 Volts
Item Weight	11.43 pounds
Control Method	Touch
Dishwasher Safe Parts	Inner Pot

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a manufacturer's warranty. Specific warranty terms, conditions, and duration are typically provided with the product in a separate warranty card or can be found on the official MasterChef website. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact MasterChef customer support. Visit the official MasterChef website for contact details and additional resources.

You can also refer to the official User Manual (PDF) available online for more detailed information [MasterChef Electric Pressure Cooker User Manual PDF](#)


© 2025 MasterChef. All rights reserved.

Related Documents

	<p>MasterChef 10-in-1 Multicooker User Manual VRD919102071</p> <p>Comprehensive user manual for the MasterChef 10-in-1 Multicooker (Model VRD919102071), detailing safety instructions, features, specifications, cooking functions, care, and troubleshooting.</p>
	<p>MasterChef Digital Food Thermometer User Manual</p> <p>Comprehensive user manual for the MasterChef Digital Food Thermometer (Item No. 670789), covering safety, operation, features, technical specifications, warranty, and disposal. Includes instructions in English, German, French, Italian, Spanish, Dutch, and Portuguese.</p>

 <p>DIGITAL FOOD THERMOMETER Item No.: VRD919102100 Digital - French - Spanish</p> <p>USER MANUAL</p>	<p>MasterChef Digital Food Thermometer VRD919102100 User Manual Comprehensive user manual for the MasterChef Digital Food Thermometer (Model VRD919102100). Includes safety guidelines, operating instructions, technical specifications, disposal information, and warranty details.</p>
 <p>DIGITAL KITCHEN SCALE Item No.: VRD919101300 Digital - French - German - Italian - Spanish - English - Norwegian - Danish - Polish</p> <p>USER MANUAL</p>	<p>MasterChef Digital Kitchen Scale User Manual User manual for the MasterChef Digital Kitchen Scale, detailing features, operation, safety guidelines, and warranty information for accurate kitchen weighing.</p>

Documents - MasterChef – Electric Pressure Cooker 10 in 1

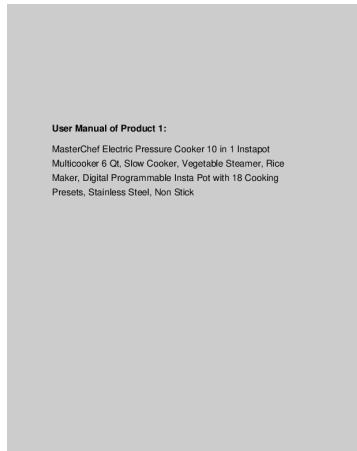


[\[pdf\] User Manual Instructions](#)

User Manual of Product 1:

MasterChef Electric Pressure Cooker 10 in 1 Instapot Multicooker 6 Qt, Slow Cooker, Vegetable Steamer, Rice Maker, Digital Programmable Insta Pot with 18 Cooking Presets, Stainless Steel, Non Stick

User Manual MasterChef Electric Pressure Cooker 10 in 1 Instapot Multicooker 6 Qt Kitchen Utensils Set Heat Resistant Non Stick Cooking Tools incl Pieces Home A1CyMgVYgmL m media amazon images I ||| User Manual of Product 1: MasterChef Electric Pressure Cooker 10 in 1 Instapot Multicooker 6 Qt, Slow Cooker, Vegetable Steamer, Rice Maker, Digital Programmable Insta Pot with 18 Cooking Presets, Stainless Steel, Non Stick 10-IN-1 MULTICOOKER USER MANUAL ITEM NO.: VRD919101300 ENGLISH - FRENCH - ...
lang:en score:23 filesize: 1.76 M page_count: 117 document date: 0000-00-00

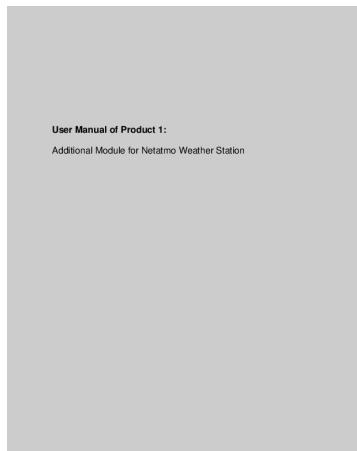

[\[pdf\] User Manual Instructions](#)

User Manual of Product 1:

Additional Module for Netatmo Weather Station

User Manual MasterChef Electric Pressure Cooker 10 in 1 Instapot Multicooker 6 Qt Immersion Blender Handheld with Whisk Milk Frother Attachments 400W Home Kitchen A1klyUYeQqL m media amazon images I ||| User Manual of Product 1: Additional Module for Netatmo Weather Station 10-IN-1 MULTICOOKER USER MANUAL ITEM NO.: VRD919101300 ENGLISH - FRENCH - SPANISH - DANISH - NORWEGIAN - SWEDISH - 1 - EN - 10-IN-1 MULTICOOKER IMPORTANT SAFEGUARDS, SAVE THESE INSTRUCTIONS The following safety precautions s...
lang:en score:23 filesize: 1.76 M page_count: 117 document date: 0000-00-00



[\[pdf\] User Manual Instructions](#)

User Manual MasterChef Electric Pressure Cooker 10 in 1 Instapot Multicooker 6 Qt Slow Vegetable Steamer Rice Maker Digital Programmable Insta Pot with 18 Cooking Presets Stainless Steel Non Stick Home Kitchen A1tbX HA65L m media amazon images | |||

10-IN-1 MULTICOOKER USER MANUAL ITEM NO.: VRD919101300 ENGLISH - FRENCH - SPANISH - DANISH - NORWEGIAN - SWEDISH - 1 - EN - 10-IN-1 MULTICOOKER IMPORTANT SAFEGUARDS, SAVE THESE INSTRUCTIONS The following safety precautions should always be followed, to reduce the risk of electric shock, personal i...

lang:en score:20 filesize: 1.8 M page_count: 116 document date: 2023-04-07