



Manuals.plus /

› **MasterChef /**

› MasterChef Hand Mixer Electric: Instruction Manual

MasterChef Handheld Egg Beater

MasterChef Hand Mixer Electric: Instruction Manual

Model: Handheld Egg Beater

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your MasterChef Hand Mixer Electric. Please read these instructions thoroughly before first use and retain them for future reference.



Image: The MasterChef Hand Mixer Electric, showcasing its sleek design and whisk attachments.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse the mixer body, cord, or electrical plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Wash beaters and dough hooks thoroughly before first use.

PRODUCT FEATURES

- **6 Speed Settings:** The hand mixer offers five speed options plus an extra turbo setting for various mixing needs, from slow stirring to fast whipping.
- **Lightweight Design:** Ergonomically designed for comfortable handling without compromising mixing power.
- **Interchangeable Attachments:** Comes with easily interchangeable beaters and dough hooks for different recipes.
- **Durable Construction:** Beaters and dough hooks are made of professional-grade stainless steel for longevity.
- **Easy to Clean:** Detachable stainless-steel parts are dishwasher safe for convenient cleaning.



Image: The hand mixer with its whisk and dough hook attachments laid out, highlighting their design.

WHAT'S INCLUDED

- 1 x MasterChef Hand Mixer Unit
- 2 x Stainless Steel Whisk Attachments
- 2 x Stainless Steel Dough Hooks

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts listed in 'What's Included' are present.
2. **Clean Attachments:** Before first use, wash the whisk attachments and dough hooks in warm, soapy water, then rinse and dry thoroughly.
3. **Insert Attachments:** Select the desired attachments (whisk or dough hooks). Insert the stems of the attachments into the openings on the underside of the mixer until they click securely into place. Ensure they are fully inserted.
4. **Connect Power:** Plug the power cord into a standard electrical outlet.



Image: Close-up of the MasterChef Hand Mixer with a whisk attachment correctly inserted into the unit.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Place your ingredients in a suitable mixing bowl.
2. **Select Speed:** Use the speed selector switch to choose your desired speed from 1 to 5. Start with a lower speed to prevent splashing, then gradually increase as needed.
3. **Activate Turbo (Optional):** For an extra burst of power, press and hold the 'TURBO' button. The mixer will operate at maximum speed as long as the button is held down. Release the button to return to the selected speed.
4. **Mix:** Guide the mixer through your ingredients, ensuring even mixing.
5. **Finish Mixing:** Once mixing is complete, switch the speed selector to '0' (off) and unplug the mixer from the outlet.
6. **Eject Attachments:** Press the 'EJECT' button to release the attachments.



Image: The control panel of the hand mixer, showing the speed slider and the 'TURBO' and 'EJECT' buttons.

Official Product Video: Hand Mixer in Use

Your browser does not support the video tag.

Video: A demonstration of the MasterChef Hand Mixer in action, showcasing its ease of use and effectiveness in mixing ingredients.

MAINTENANCE AND CLEANING

- **Attachments:** The whisk attachments and dough hooks are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water and dried thoroughly.
- **Mixer Body:** The electronic part of the hand mixer should not be immersed in water. Wipe the exterior of the mixer body with a damp cloth, then dry with a soft, dry cloth.
- **Storage:** Store the mixer and its attachments in a dry place when not in use.



Image: Close-up of the stainless steel dough hooks, emphasizing their durable and easy-to-clean material.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outage; speed selector not at '0'.	Ensure plug is securely in outlet; check power supply; set speed selector to '0' before turning on.
Attachments do not stay in place.	Attachments not fully inserted.	Push attachments firmly into the openings until they click.
Mixer is struggling with ingredients.	Too thick mixture; speed setting too low.	Increase speed setting; use the 'TURBO' function; ensure mixture is not excessively thick.

SPECIFICATIONS

- **Brand:** MasterChef
- **Model Name:** Handheld Egg Beater
- **Color:** Silver
- **Product Dimensions:** 3.86"D x 6.61"W x 8.15"H
- **Material:** Stainless Steel (attachments)
- **Voltage:** 110V
- **Wattage:** 200 watts
- **Controls Type:** Push Button / Slider
- **Number of Speeds:** 5 + Turbo
- **Dishwasher Safe:** Yes (attachments only)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official MasterChef website. Keep your purchase receipt as proof of purchase for any warranty claims.

For additional information or to explore other MasterChef products, visit the [MasterChef Store on Amazon](#).