

[manuals.plus](#) /› [WEWATCH](#) /› [WEWATCH V30 Mini Projector Instruction Manual](#)

WEWATCH V30 (C015FGN Lite)

WEWATCH V30 Mini Projector Instruction Manual

Model: V30 (C015FGN Lite)

1. INTRODUCTION

Thank you for choosing the WEWATCH V30 Mini Projector. This portable projector is designed to provide a high-quality visual experience for home entertainment, gaming, and presentations. With its native 1080P resolution, built-in Wi-Fi, and versatile connectivity options, the V30 offers convenience and performance in a compact design.

Please read this manual thoroughly before operating the device to ensure proper use and maintenance.

2. WHAT'S IN THE BOX

- WEWATCH V30 Mini Projector
- Remote Control
- Power Adapter
- User Manual (this document)
- HDMI Cable (may vary by package)
- AV Cable (may vary by package)



Image: WEWATCH V30 Mini Projector with its remote control and a smartphone displaying content.

3. SPECIFICATIONS

| Feature | Detail |
|-------------------------|--------------------------------------|
| Brand | WEWATCH |
| Model Number | V30 (C015FGN Lite) |
| Display Resolution | Native 1920 x 1080P |
| Brightness | 12000 Lumens (Manufacturer's rating) |
| Projection Size | 40" - 120" |
| Connectivity Technology | HDMI, USB, Wireless (2.4G WiFi) |
| Speaker Type | Built-in 3W Dual Stereo Speakers |
| Noise Reduction | Below 30dB |
| Optical Engine | Dustproof Full Sealed |

| | |
|-------------|------------------|
| Dimensions | 4 x 4 x 6 inches |
| Item Weight | 4.09 pounds |



Image: Rear view of the WEWATCH V30 Mini Projector highlighting its connectivity ports: 3.5mm Audio, USB 2.0, HDMI, and DC IN.

4. SETUP GUIDE

4.1 Initial Power On

1. Connect the power adapter to the projector's DC IN port and plug it into a power outlet.
2. Press the power button on the projector or the remote control to turn on the device.
3. Adjust the focus using the focus dial on top of the projector until the image is clear.

Your browser does not support the video tag.

Video: Demonstrates how to adjust the manual focus on the WEWATCH V30 projector using the focus dial on top of the unit.

4.2 Positioning the Projector

For optimal viewing, place the projector on a stable, flat surface. The projection distance will determine the screen size. Refer to the table below for recommended distances:

| Projection Distance | Screen Size |
|---------------------|-------------|
| 5.9 ft | 40 inch |
| 7.8 ft | 60 inch |
| 9.8 ft | 80 inch |
| 11.7 ft | 120 inch |



Image: Diagram illustrating recommended projection distances for various screen sizes (40-120 inches) for the WEWATCH V30 Mini Projector.

5. OPERATING INSTRUCTIONS

5.1 Connecting to Wi-Fi

1. Turn on the projector.
2. Navigate to the "WiFi" icon on the home screen using the remote control.
3. Select your home Wi-Fi network from the list and enter the password to connect.

Your browser does not support the video tag.

Video: Guide on connecting the WEWATCH V30 projector to Wi-Fi and mirroring content from an iOS device.

5.2 Screen Mirroring (iOS/Android)

The WEWATCH V30 supports wireless screen mirroring from both iOS and Android devices.

For iOS Devices:

1. Ensure your iOS device and the projector are connected to the same Wi-Fi network.
2. On the projector's home screen, select "Screen" and then "iOS".
3. On your iOS device, open Control Center and tap "Screen Mirroring".
4. Select "WEWATCH_V30_SE" from the list of available devices.
5. Your iOS device screen will now be mirrored on the projector.

For Android Devices:

1. Ensure your Android device and the projector are connected to the same Wi-Fi network.
2. On the projector's home screen, select "Screen" and then "Android".
3. On your Android device, enable "Wireless Display", "Screen Mirroring", "Smart View", or similar function (name may vary by device).
4. Select "WEWATCH_V30_SE" from the list of available devices.
5. Your Android device screen will now be mirrored on the projector.

Your browser does not support the video tag.

Video: Demonstrates how to connect and mirror an Android device screen to the WEWATCH V30 projector.

5.3 Connecting External Devices (HDMI/USB)

The projector supports various external devices via HDMI and USB ports.

- **HDMI:** Connect TV sticks (e.g., Amazon Fire TV Stick), laptops, MacBooks, gaming consoles (PS4/XBOX), or other HDMI-enabled devices.
- **USB:** Play video content, photos, or music directly from USB flash drives or portable hard drives.

Your browser does not support the video tag.

Video: Shows the WEWATCH V30 mini projector connected to an Amazon Fire TV Stick and a tripod, demonstrating its versatility.

Watch Youtube, Netflix and more

Use with Amazon Fire TV Stick, Roku Streaming Stick



Image: The WEWATCH V30 Mini Projector connected to a Fire TV Stick, illustrating how to access streaming services like YouTube and Netflix.

6. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Avoid abrasive cleaners.
- **Cleaning the Exterior:** Wipe the projector's surface with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Dust Prevention:** The projector features a dustproof sealed optical engine. However, keep the projector in a clean environment to minimize dust accumulation.
- **Cooling System:** Ensure the ventilation vents are not blocked to allow proper airflow and prevent overheating. The dual fan system is designed for efficient cooling and low noise.

Your browser does not support the video tag.

Video: Overview of the WEWATCH Mini Projector, highlighting its native 1080P resolution, compact size, and quiet operation.

7. TROUBLESHOOTING

| Problem | Possible Cause / Solution |
|-------------------------|---|
| No Power | Ensure the power adapter is securely connected to both the projector and a working power outlet. |
| Blurry Image | Adjust the focus dial on top of the projector. Ensure the projection distance is within the recommended range. |
| No Sound | Check the projector's volume settings. If using an external device, ensure its volume is also up. Verify audio cables are correctly connected. |
| Screen Mirroring Issues | Ensure both the projector and your device are on the same 2.4G Wi-Fi network. Restart both devices. Some streaming apps (e.g., Hulu, Disney+) may have content protection that prevents mirroring. Use an HDMI connection for these services. |
| Overheating | Ensure ventilation vents are clear and not obstructed. Operate in a well-ventilated area. |

8. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the warranty notice included in your product packaging or visit the official WEWATCH website.

Official WEWATCH Store: [WEWATCH Amazon Store](#)

For further assistance, you may also refer to the official User Manual (PDF) available online [User Manual \(PDF\)](#)