

Beko DFS05024X

Beko DFS05024X Freestanding Dishwasher User Manual

Model: DFS05024X

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Beko DFS05024X freestanding dishwasher. Please read these instructions carefully before installation, operation, and maintenance to ensure optimal performance and to prevent damage to the appliance or injury to yourself. Keep this manual in a safe place for future reference.

1.1 Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Ensure the appliance is properly grounded. Do not attempt to repair or replace any part of your dishwasher unless specifically recommended in this manual. Refer all servicing to qualified personnel.

2. PRODUCT OVERVIEW

The Beko DFS05024X is a freestanding dishwasher designed for efficient dish cleaning. It features a stainless steel finish and a compact design suitable for various kitchen layouts. This model offers a capacity for 10 place settings.

2.1 Key Features

- Cold water fill for energy efficiency.
- Multiple wash programs: Eco 50°C, Intensive 70°C, Mini 30°C.
- Convenient features: Timer, delayed start, and half load option.
- Indicators for salt and rinse aid levels.
- Full console control type with LED display.
- Low noise level of 49 Decibels.

2.2 Dishwasher Dimensions



This image displays the Beko DFS05024X freestanding dishwasher in stainless steel, showing its overall dimensions. The height is 85 cm, the depth is 60 cm, and the width is 44.8 cm.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage that may have occurred during transit.

Report any damage to your retailer immediately.

3.2 Positioning the Dishwasher

The Beko DFS05024X is a freestanding model. Position it on a flat, stable surface. Ensure there is adequate space around the appliance for proper ventilation and access for maintenance. The dimensions are 60 cm (depth) x 45 cm (width) x 85 cm (height).

3.3 Water Connection

Connect the dishwasher to a cold water supply using the provided inlet hose. Ensure all connections are tight to prevent leaks. The water pressure should be within the recommended range for optimal performance.

3.4 Drain Connection

Connect the drain hose to your household drainage system. Ensure the hose is not kinked or obstructed, allowing for proper water discharge.

3.5 Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 240 Volts. Do not use extension cords or adapters. Ensure the electrical supply meets the requirements specified on the rating plate of the appliance.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The control panel features a rotary program selector, function buttons, and LED indicators for program status, salt, and rinse aid levels. Refer to the diagram on the appliance for specific button functions.

4.2 Loading the Dishwasher

Scrape off large food particles from dishes before loading. Place dishes securely in the racks, ensuring water can reach all surfaces. Avoid overcrowding. Load larger items in the lower rack and delicate items in the upper rack.

4.3 Adding Detergent, Salt, and Rinse Aid

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser.
- **Dishwasher Salt:** Fill the salt dispenser with dishwasher salt when the salt indicator light illuminates. This helps soften hard water.
- **Rinse Aid:** Fill the rinse aid dispenser when the rinse aid indicator light illuminates. Rinse aid helps with drying and prevents water spots.

4.4 Selecting a Wash Program

Turn the program selector knob to choose one of the following wash programs:

- **Eco 50°C:** Standard program for normally soiled daily dishes, offering optimal energy and water consumption.
- **Intensive 70°C:** Suitable for heavily soiled dishes, pots, and pans.
- **Mini 30°C:** Quick program for lightly soiled dishes that do not require drying.

4.5 Starting a Program

Close the dishwasher door firmly. Press the Start button to begin the selected program. The program indicator light will illuminate.

4.6 Special Functions

- **Half Load:** Use this function when washing a smaller load to save water and energy.

- **Delayed Start:** Allows you to postpone the start of a wash cycle by a set number of hours.

4.7 Cancelling a Program

To cancel a running program, press and hold the Cancel button (if available) or refer to the specific instructions on your control panel. The dishwasher will drain the water and reset.

5. MAINTENANCE

5.1 Cleaning the Exterior

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its finish. Avoid abrasive cleaners.

5.2 Cleaning the Interior

Periodically clean the interior of the dishwasher, including the spray arms and door seal, to remove any food residue or buildup.

5.3 Filter System

The filter system should be cleaned regularly to ensure efficient washing. To clean the filters:

1. Remove the lower spray arm.
2. Unscrew and remove the coarse filter and microfilter.
3. Rinse the filters under running water to remove any trapped food particles.
4. Reassemble the filters and replace them securely in the dishwasher.

5.4 Salt and Rinse Aid Refill

Refill the dishwasher salt and rinse aid dispensers as indicated by the respective warning lights on the control panel. Use only dishwasher-specific salt and rinse aid.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Dishwasher does not start.	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
Dishes are not clean.	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arm nozzles, add more detergent, clean filters.
Water not draining.	Clogged drain hose or filter, drain pump issue.	Check and clear drain hose and filters. If problem persists, contact service.
Excessive noise during operation.	Improperly loaded dishes, foreign object in pump, appliance not level.	Rearrange dishes, check for obstructions, ensure dishwasher is level.
Water spots or streaks on dishes.	Insufficient rinse aid, hard water.	Refill rinse aid dispenser, adjust rinse aid setting, ensure salt dispenser is full.

If the problem persists after attempting these solutions, please contact qualified service personnel.

7. SPECIFICATIONS

Model Number	DFS05024X
Brand	Beko
Installation Type	Freestanding
Dimensions (H x W x D)	85 cm x 45 cm x 60 cm
Weight	37.4 kg
Capacity	10 Place Settings
Noise Level	49 Decibels
Voltage	240 Volts
Control Type	Full Console
Material	Stainless Steel
Display Type	LED
Water Fill	Cold
Wash Programs	Eco 50°C, Intensive 70°C, Mini 30°C
Special Functions	Timer, Delayed Start, Half Load, Salt Indicator, Rinse Aid Indicator

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This Beko DFS05024X dishwasher comes with a 3-year manufacturer's warranty. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions. For detailed terms and conditions, refer to the warranty card included with your appliance or visit the official Beko website.

8.2 Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Beko customer support. Contact details can typically be found on the Beko official website or in the documentation provided with your appliance.