

Tefal SV6131G0

Tefal Express Easy Steam Generator

MODEL: SV6131G0

1. Introduction

This manual provides comprehensive instructions for the safe and efficient use of your Tefal Express Easy Steam Generator. Please read all instructions carefully before first use and retain for future reference. This appliance is designed to simplify your ironing tasks with powerful steam output and a durable ceramic soleplate.

2. Safety Instructions

- Always plug the appliance into a grounded electrical outlet.
- Do not leave the iron unattended while it is connected to the mains.
- Keep the iron and its cord out of reach of children and pets when it is switched on or cooling down.
- Never immerse the appliance, cord, or plug in water or any other liquid.
- Do not use the appliance if the cord or plug is damaged, or if the iron has been dropped or damaged.
- Use the iron only for its intended purpose, which is ironing garments.
- Always ensure the water tank is filled with appropriate water (tap water is generally suitable, refer to specific instructions for hard water areas).
- Exercise caution when handling hot surfaces and steam. Steam can cause burns.

3. Product Overview

Familiarize yourself with the components of your Tefal Express Easy Steam Generator:



Overall view of the steam generator with iron docked.



Side view highlighting the 1.7L removable water tank.



The Xpress Glide Ceramic Soleplate for smooth gliding.



Control panel on the base: Eco mode, Power button, and Anti-Calc indicator.

- **Iron Unit:** Features the Xpress Glide Ceramic Soleplate and steam trigger.
- **Water Tank:** Large 1.7 L capacity for extended ironing sessions.
- **Base Unit:** Houses the boiler and controls, including power, Eco mode, and Anti-Calc indicator.
- **Steam Hose:** Connects the iron to the base unit for steam delivery.
- **Power Cord:** For connecting the appliance to the electrical outlet.
- **Lock System:** Secures the iron to the base for safe carrying and storage.

4. Setup

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Positioning:** Place the steam generator on a stable, heat-resistant surface, such as an ironing board designed

for steam generators.

3. Filling the Water Tank:



Filling the removable water tank under a tap.

Remove the water tank from the base unit. Fill it with clean tap water up to the 'MAX' level indicated. Reinsert the tank firmly into the base unit.

4. Connecting Power: Unwind the power cord completely and plug it into a suitable grounded electrical outlet.

5. Operating Instructions

- Power On:** Press the On/Off button on the base unit. The indicator light will illuminate, and the appliance will begin to heat up. This typically takes a few minutes.
- Steam Ready:** The indicator light will stop flashing (or change color, depending on the model) when the iron is ready to produce steam.
- Adjusting Settings:** Use the temperature dial on the iron to select the appropriate heat setting for your fabric type. For delicate fabrics, use lower settings; for cotton and linen, use higher settings.
- Generating Steam:** Press and hold the steam trigger located under the iron's handle to release continuous steam. For an extra burst of steam, press the steam boost button (if available).



The iron delivering powerful steam for effective wrinkle removal.

- Vertical Steaming:** For refreshing hanging garments or curtains, hold the iron vertically a few centimeters away from the fabric and press the steam trigger.



Utilizing the vertical steam function for hanging clothes.

6. **Eco Mode:** To save energy, press the 'Eco' button on the base unit. This mode provides sufficient steam for most fabrics while consuming less power.
7. **Refilling During Use:** If the water tank runs empty, the 'Water Empty' indicator will light up. The tank can be refilled at any time, even during operation, without needing to switch off the appliance.
8. **After Use:** Press the On/Off button to switch off the appliance. Unplug the power cord from the outlet. Allow the iron to cool down completely before storing.

6. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the lifespan of your steam generator.

- **Cleaning the Soleplate:** If the soleplate becomes dirty, clean it with a damp cloth and a non-abrasive cleaner. Do not use metallic or abrasive scouring pads.
- **Descaling (Anti-Calc System):** Your appliance features an integrated Anti-Calc system to prevent limescale buildup.



The Anti-Calc feature helps maintain performance by preventing limescale buildup.

When the 'Anti-Calc' indicator light illuminates, it's time to perform the descaling procedure. Refer to the detailed descaling instructions in the full user manual for your specific model. This typically involves rinsing the boiler or a dedicated collector.

- **Storing the Appliance:** Once cooled, secure the iron to the base using the lock system. Wrap the steam hose and power cord neatly around the designated storage areas on the base. Store the appliance in a dry, safe place.



Compact storage of the steam generator in a cabinet.

7. Troubleshooting

Problem	Possible Cause	Solution
No steam is coming out.	Water tank is empty; appliance not heated up; steam trigger not pressed.	Refill water tank; wait for 'steam ready' indicator; press steam trigger.
Water droplets are coming from the soleplate.	Iron temperature is too low for steam production.	Increase the iron's temperature setting.
Limescale particles are coming out.	Descaling is needed.	Perform the Anti-Calc descaling procedure as per the manual.
Appliance does not turn on.	Not plugged in; power outlet issue.	Check power cord connection; test outlet with another appliance.

8. Specifications

Feature	Detail
Brand	Tefal
Model Number	SV6131G0
Color	Blue & white
Power / Wattage	2200 watts
Water Tank Capacity	1.7 Liters
Soleplate Material	Ceramic (Xpress Glide)
Item Weight	3.84 Kilograms
Special Features	Ceramic Soleplate, Lock system for easy carrying
Recommended Uses	Steam ironing and pressing of various textiles including delicate, medium, heavy fabrics

9. Warranty and Support

Your Tefal Express Easy Steam Generator SV6131G0 comes with a **2-Year Warranty** from the date of purchase, covering manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or to inquire about extended warranty options, please visit the official Tefal website or contact their customer service department. Information regarding authorized repair centers is also available through official channels.

Extended Warranty Options:

- 1-Year Extended Warranty by Salama Care (E-mail delivery)
- 2-Year Extended Warranty by Salama Care (E-mail delivery)

These extended warranty plans are available for purchase separately and provide additional coverage beyond the standard manufacturer's warranty.

Related Documents

	<p><u>Tefal Express Optimal Steam Generator Iron User Guide</u></p> <p>User guide for Tefal Express Optimal and Express Easy steam generator irons (SV411xx series), detailing operation, temperature and steam control, STEAMBOOST, AUTO OFF, and ANTI CALC maintenance.</p>
	<p><u>Tefal Express Essential Steam Generator Iron User Manual</u></p> <p>A comprehensive guide to using, maintaining, and troubleshooting the Tefal Express Essential Steam Generator Iron, including safety instructions and product specifications.</p>
	<p><u>Tefal Express Essential/Easy Steam Iron User Guide</u></p> <p>Comprehensive user guide for the Tefal Express Essential and Express Easy steam irons, covering setup, operation, maintenance, and safety instructions.</p>
	<p><u>Tefal Express Optimal/Easy Steam Iron User Guide - SV4110E0</u></p> <p>Comprehensive user guide for the Tefal Express Optimal/Easy steam iron (SV4110E0). Learn about features like SteamBoost, temperature control, AUTO OFF, and ANTI CALC system. Includes ironing tips and maintenance instructions.</p>