

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tefal](#) /
- › [Tefal Ultra Fry Digital Air Fryer EY111B15 User Manual](#)

Tefal EY111B

Tefal Ultra Fry Digital Air Fryer

Model: EY111B15

INTRODUCTION

Thank you for choosing the Tefal Ultra Fry Digital Air Fryer. This appliance is designed to cook a variety of foods with little to no oil, offering a healthier alternative to traditional frying. Its smart interface and intuitive digital control panel make cooking simple and efficient. With an XL capacity of 4.2 liters, it can serve up to 6 people, making it ideal for family meals. This manual will guide you through the proper use and care of your air fryer to ensure years of delicious and healthy cooking.

The Tefal Ultra Fry Digital Air Fryer features 1600W power consumption and a rapid air circulation system for efficient cooking. It includes 8 pre-set programs for convenience: Fries, Nuggets, Roasted Chicken, Pizza, Meat, Fish, Vegetables, and Dessert.



Image: Front view of the Tefal Ultra Fry Digital Air Fryer, showcasing its charcoal grey finish and digital control panel.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances, to allow for proper air circulation.
- Do not immerse the cord, plug, or appliance in water or any other liquid.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents during operation.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Use only accessories recommended by the manufacturer.
- The appliance generates heat during use; use oven mitts when handling hot surfaces.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Ultra Fry Digital Air Fryer:

- **Main Unit:** Houses the heating element and fan.
- **Removable Basket:** For holding food during cooking.
- **Digital Control Panel:** Features a digital display, temperature and time controls, and pre-set program buttons.
- **Handle:** For safely pulling out the basket.
- **Air Inlet/Outlet Vents:** For proper air circulation during cooking.

ABSOLUT VIELSEITIG 8 DIGITALE VOREINGESTELLTE PROGRAMME

8 AUTOMATISCHE KOCHPROGRAMME:

Automatische Anpassung der idealen Temperatur und Garzeit:
Pommes Frites, Hähnchen, Fleisch, Shrimps, Pizza, Fisch,
Dessert, Toasten



Image: The Tefal Ultra Fry Digital Air Fryer on a kitchen counter, displaying its digital interface and a variety of cooked foods, illustrating its versatility and pre-set programs.

SETUP

Unpacking

1. Carefully remove the air fryer and all its components from the packaging.
2. Remove any packaging materials, stickers, or labels.

3. Retain the packaging for future storage or transport if needed.

First Use Preparation

1. Before first use, clean the basket and any removable parts with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are thoroughly dry before use.

Placement

Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance, to allow for adequate air circulation.

OPERATING INSTRUCTIONS

Control Panel

The digital control panel allows for precise temperature and time adjustments, as well as easy selection of pre-set programs.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Use '+' and '-' buttons to adjust temperature.
- **Time Control:** Use '+' and '-' buttons to adjust cooking time.
- **Pre-set Program Buttons:** Select from 8 optimized cooking programs.
- **Digital Display:** Shows current temperature, time, and selected program.

General Cooking Steps

1. Plug the air fryer into a grounded electrical outlet.
2. Pull out the basket from the appliance.
3. Place ingredients into the basket. Do not overfill the basket to ensure even cooking.
4. Slide the basket back into the air fryer.
5. Press the Power button to turn on the appliance.
6. **Manual Mode:** Set the desired temperature and cooking time using the respective control buttons.
7. **Pre-set Program Mode:** Select one of the 8 pre-set programs (Fries, Nuggets, Roasted Chicken, Pizza, Meat, Fish, Vegetables, Dessert). The appliance will automatically set the optimal temperature and time, which can be adjusted manually if needed.
8. Press the Start button to begin cooking.
9. Some foods may require shaking or tossing halfway through cooking. Pull out the basket, shake, and reinsert. The cooking will resume automatically.
10. When cooking is complete, the timer will sound. Carefully pull out the basket and empty the contents.



Image: The Tefal Ultra Fry Digital Air Fryer with a whole roasted chicken inside, illustrating the rapid air circulation system and efficient cooking.

MAINTENANCE

Cleaning

Clean the air fryer after every use.

1. Unplug the appliance and allow it to cool down completely before cleaning.
2. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.
3. Remove the basket and clean it with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket in hot water for a few minutes.

4. The basket is not dishwasher safe. Hand wash only.
5. Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residue from the heating element.
6. Ensure all parts are completely dry before storing or reusing the appliance.

Storage

Store the air fryer in a cool, dry place when not in use. Ensure the appliance is clean and dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overfilled or food is not shaken.	Do not overfill the basket. Shake or toss ingredients halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use or fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, drain excess fat during cooking.
Food is not crispy.	Not enough oil or incorrect temperature/time.	Lightly coat food with oil. Adjust temperature or cooking time as needed.

SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	EY111B
Color	Black (Charcoal Grey)
Product Dimensions	33.2 x 33.2 x 35 cm
Capacity	4.2 Liters
Power / Wattage	1400 watts
Voltage	220 Volts
Material	Aluminum, Plastic
Auto Shutoff	Yes
Special Features	Temperature Control

Feature	Detail
Item Weight	4.5 Kilograms

WARRANTY

Tefal products are manufactured to high quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty in your region. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or to inquire about spare parts, please contact Tefal customer service in your region. Contact information can typically be found on the Tefal official website or on the warranty card provided with your product.

You may also visit the official Tefal store online for product information and support resources:[Tefal Store on Amazon.ae](#)