

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [De'Longhi](#) /

› [De'Longhi Magnifica Evo ECAM292.33.SB Coffee Machine Instruction Manual](#)

De'Longhi ECAM292.33.SB

De'Longhi Magnifica Evo ECAM292.33.SB Coffee Machine

Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your De'Longhi Magnifica Evo ECAM292.33.SB Bean to Cup Coffee Machine. Please read these instructions carefully before first use and keep them for future reference.

The De'Longhi Magnifica Evo is designed to deliver a variety of coffee beverages, offering up to 7 recipes from freshly ground beans. Key features include the LatteCremaSystem for automatic milk preparations, an integrated steel grinder with 13 adjustable settings, and a Thermoblock system for optimal brewing temperature control. The machine also incorporates automatic cleaning functions and has dishwasher-safe components for simplified maintenance.



Image: The De'Longhi Magnifica EVO ECAM292.33.SB coffee machine, showcasing its design and a prepared latte.

SETUP

- Unpacking and Placement:** Carefully remove the machine from its packaging. Place the machine on a stable, level surface, away from water sources and heat. Ensure adequate ventilation around the unit.
- Initial Rinse Cycle:** Before first use, fill the water tank with fresh water and perform an initial rinse cycle as indicated in the machine's display or pictorial instructions. This primes the internal circuits.
- Filling the Bean Container:** Open the lid of the bean container and pour fresh coffee beans into it. Do not use ground coffee in the bean container.
- Water Hardness Setting:** It is recommended to set the water hardness level according to your local water supply. This helps optimize descaling intervals. Refer to the included water hardness test strip and follow the machine's instructions for setting.
- Grinder Adjustment:** The integrated grinder has 13 settings. For initial use, a medium setting is recommended. Adjust the grind fineness only when the grinder is operating.



Image: A hand adjusting the grind fineness dial within the coffee bean container.

OPERATING INSTRUCTIONS

Making Coffee

- Selecting a Beverage:** Use the colored control panel to select your desired coffee beverage. The machine offers up to 7 recipes.
- Adjusting Coffee Strength and Volume:** Depending on the selected beverage, you may be able to adjust the coffee strength and volume using the control panel options.
- Using Pre-Ground Coffee:** If using pre-ground coffee, ensure the machine is set to the pre-ground coffee function and add one scoop of ground coffee to the dedicated funnel before brewing.



Image: A close-up of the machine's control panel, showing a finger pressing a beverage selection icon.

Milk Frothing (LatteCremaSystem and Manual)

- Automatic Milk Preparations (LatteCremaSystem):** Attach the LatteCremaSystem carafe filled with milk to the machine. Select a milk-based beverage from the control panel. The machine will automatically froth and dispense milk.
- Manual Milk Frothing:** For manual frothing or dispensing hot water, use the manual steam wand. Position a pitcher with milk under the wand and activate the steam function. Rotate the steam knob to release steam for frothing.



Image: A hand holding a metal milk frothing pitcher under the steam wand of the coffee machine.

MAINTENANCE

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your coffee machine.

- **Daily Cleaning:**
 - Empty and rinse the drip tray and grounds container daily.
 - Wipe down the exterior of the machine with a soft, damp cloth.
 - Rinse the LatteCremaSystem carafe after each use. Many components are dishwasher-safe.
- **Automatic Cleaning Function:** The machine features an automatic cleaning cycle. Follow the prompts on the display for activation.
- **Descaling:** The machine will indicate when descaling is required. Use only De'Longhi EcoDecalk descaling solution. Follow the step-by-step instructions provided by the machine's display during the descaling process. This process requires user intervention to press buttons and refill the tank.
- **Brew Unit Cleaning:** Periodically remove and rinse the brew unit under running water. Allow it to air dry before reinserting.



Image: A box of De'Longhi EcoDecalk descaling solution and a water hardness test strip, essential for machine maintenance.

TROUBLESHOOTING

If you encounter issues with your machine, refer to the following common problems and solutions before contacting support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee drips too slowly or not at all.	Grind setting is too fine; brew unit is clogged; coffee funnel is blocked.	Adjust the grinder to a coarser setting (only when grinder is running). Clean the brew unit. Clear any blockages in the coffee funnel.
Drip tray fills with water internally.	Normal operation during heating and cleaning cycles.	This is expected. To reduce frequency of emptying, place a spare mug under the spouts during startup and shutdown to collect rinse water.
Steam wand stops frothing after a short time (e.g., 60 seconds).	Safety feature or system reset.	If more steam is needed, turn off the steam function, wait a moment, and then reactivate it.
Machine not turning on.	Power cord not properly connected; power outlet issue.	Ensure the power cord is securely plugged into both the machine and a working electrical outlet.

SPECIFICATIONS

Brand: De'Longhi

Model Number: ECAM292.33.SB

Color: Silver

Dimensions (L x W x H): 9.45 x 17.32 x 14.17 cm (24 x 44 x 36 cm)

Weight: 11.75 kg (25.9 lbs)

Power: 1450 Watts

Voltage: 145 Volts

Material: Polycarbonate

Special Feature: Milk Frother

Coffee Maker Type: Espresso Machine

Recommended Uses: Home, Office

Included Components: Filter, Milk Frother

WARRANTY AND SUPPORT

De'Longhi offers a 100-day money-back guarantee on this product. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official De'Longhi website.

If you require further assistance or encounter issues not covered in this manual, please contact De'Longhi customer support. Ensure you have your model number (ECAM292.33.SB) and proof of purchase available when contacting support.



Image: De'Longhi's 100 Day Money Back Guarantee emblem.

© 2023 De'Longhi. All rights reserved.