

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [NakiRadio](#) /

> [NakiRadio Solo MN300 Wi-Fi Internet Radio User Manual](#)

NakiRadio Solo MN300

NakiRadio Solo MN300 Wi-Fi Internet Radio User Manual

Model: Solo MN300

INTRODUCTION

Welcome to the NakiRadio Solo MN300 Wi-Fi Internet Radio. This device provides a unique entertainment experience with crystal clear audio and access to over 100 channels, including music, kids programming, and shiurim. This manual will guide you through the setup, operation, and maintenance of your new internet radio to ensure optimal performance and enjoyment.

SAFETY INFORMATION

- Read all instructions carefully before operating the device.
- Do not expose the radio to water or excessive moisture.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter or compatible AA batteries.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the box for the following items:

- NakiRadio Solo MN300 Wi-Fi Internet Radio
- 5V Power Adapter
- Micro USB Cable
- Owner's Manual (this document)

PRODUCT OVERVIEW

The NakiRadio Solo MN300 features a sleek design with an intuitive dual-knob interface for easy navigation. It includes a display screen for channel information and album artwork. The radio can be powered by either a micro USB adapter or four AA batteries for portable use.



Figure 1: Front view of the NakiRadio Solo MN300, showing the speaker, display, control buttons, and knobs.



Figure 2: Side view of the NakiRadio Solo MN300, illustrating its dimensions: 6.89 inches (L) x 2.13 inches (W) x 4.17 inches (H).

Controls and Ports

- **Power/Volume Knob:** Turn to adjust volume, press to power on/off.
- **Select Knob:** Turn to navigate menus and channels, press to confirm selection.
- **SOURCE Button:** Changes input source (if applicable).
- **DIM Button:** Adjusts display brightness.
- **Playback Control Buttons:** Play/Pause, Skip Forward, Skip Backward.
- **INFO Button:** Displays current channel information.
- **PRESETS Button:** Accesses saved favorite channels.
- **MENU Button:** Accesses the main menu.
- **BACK Button:** Returns to the previous screen or menu.
- **Micro USB Port:** For power adapter connection.
- **Battery Compartment:** Located on the back for 4 AA batteries.

SETUP

Powering On Your Radio

The NakiRadio Solo MN300 can be powered in two ways:

1. **Using the Power Adapter:** Connect the Micro USB cable to the radio's Micro USB port and the other end to the 5V power adapter. Plug the adapter into a standard wall outlet.
2. **Using Batteries:** Open the battery compartment on the back of the radio. Insert four (4) AA batteries, ensuring correct polarity (+/-). Close the compartment securely.

Press the Power/Volume knob to turn on the radio.

Connecting to Wi-Fi

A stable Wi-Fi connection is required for the NakiRadio Solo to function.

1. Upon first power-on, the radio will prompt you to set up the Wi-Fi connection.
2. Use the Select knob to navigate through the available Wi-Fi networks.
3. Press the Select knob to choose your network.
4. Enter your Wi-Fi password using the on-screen keyboard and the Select knob for character selection. Press the Select knob to confirm each character and to finalize the password entry.
5. Once connected, the radio will display a confirmation message.

Note: If you encounter issues connecting, ensure your Wi-Fi network is 2.4GHz compatible, as some devices may not support 5GHz networks.

OPERATING INSTRUCTIONS

Navigating Channels

After connecting to Wi-Fi, the radio will typically load the available channel list.

- Use the **Select knob** to scroll through the list of channels.

- Press the **Select knob** to choose a channel and begin playback.
- Use the **Playback Control Buttons** (Skip Forward/Backward) to navigate between channels within a category or playlist.
- Press the **MENU button** to access different categories of channels or settings.
- Press the **BACK button** to return to the previous menu or channel list.

Adjusting Volume

Turn the **Power/Volume knob** clockwise to increase volume and counter-clockwise to decrease it.

Using Presets

The radio allows you to save your favorite channels as presets for quick access.

1. While listening to a channel you wish to save, press and hold the **PRESETS button**.
2. Use the **Select knob** to choose an empty preset slot.
3. Press the **Select knob** to confirm and save the channel.
4. To access a saved preset, press the **PRESETS button** briefly, then use the **Select knob** to select your desired preset.

Alarm Clock Function

The NakiRadio Solo MN300 includes an alarm clock feature.

1. Press the **MENU button** to access the main menu.
2. Navigate to the 'Alarm' or 'Clock' settings using the **Select knob**.
3. Follow the on-screen prompts to set the alarm time, alarm sound (e.g., a specific channel or tone), and recurrence.
4. Ensure the alarm is activated once set.

MAINTENANCE

Cleaning

To clean your NakiRadio Solo MN300, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.

Battery Replacement

If using batteries, replace all four AA batteries when the low battery indicator appears on the display or when the radio's performance diminishes. Always replace with new, high-quality AA batteries, ensuring correct polarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Radio does not power on.	No power, dead batteries, or faulty adapter.	Check power adapter connection. Replace AA batteries. Ensure Power/Volume knob is pressed firmly.
Cannot connect to Wi-Fi.	Incorrect password, out of range, or network incompatibility.	Double-check Wi-Fi password. Move radio closer to router. Ensure network is 2.4GHz. Restart router.
Audio buffering or frequent interruptions.	Weak Wi-Fi signal or internet congestion.	Move radio closer to Wi-Fi router. Reduce other network activity. Restart router.
No sound.	Volume too low, muted, or faulty speaker.	Increase volume using the Power/Volume knob. Check if the radio is muted.
Controls are unresponsive.	Temporary software glitch.	Power off the radio, wait a few seconds, then power it back on.

SPECIFICATIONS

- **Model:** Solo MN300
- **Product Dimensions:** 6.89" L x 2.13" W x 4.17" H
- **Item Weight:** 1.2 pounds
- **Connectivity Technology:** Wi-Fi
- **Tuner Technology:** Internet Radio
- **Power Source:** 4 AA Batteries (not included) or 5V Power Adapter with Micro-USB Cable
- **Color:** White & Gray
- **Manufacturer:** NakiRadio
- **ASIN:** B09DN89Z2S

WARRANTY AND SUPPORT

NakiRadio products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your purchase or visit the official NakiRadio website. For technical support, troubleshooting assistance, or service inquiries, please contact NakiRadio customer service through their official channels.