

[Manuals.plus](#) /

› [LASTAR](#) /

› LASTAR LED Floor Lamp Instruction Manual

LASTAR CM006

LASTAR LED Floor Lamp Instruction Manual

Model: CM006

1. INTRODUCTION

Thank you for purchasing the LASTAR LED Floor Lamp. This lamp is designed to provide versatile and eye-friendly illumination for various activities such as reading, crafting, and general room lighting. It features adjustable brightness and color temperature, a flexible gooseneck, a convenient timer, and a memory function for personalized lighting experiences. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. SAFETY INFORMATION

- Ensure the lamp is placed on a stable, flat surface to prevent tipping.
- Do not expose the lamp to water or excessive moisture. This product is designed for indoor use only.
- Do not attempt to disassemble or modify the lamp. Refer all servicing to qualified personnel.
- Keep the power cord away from heat sources, sharp edges, and heavy objects.
- Unplug the lamp from the power outlet before cleaning or performing any maintenance.
- Do not operate the lamp if the cord or plug is damaged.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- LASTAR LED Floor Lamp (main body with gooseneck and LED head)
- Stable Metal Base
- Power Cable



Image 1: Overview of the LASTAR LED Floor Lamp components.

4. ASSEMBLY INSTRUCTIONS

The LASTAR LED Floor Lamp is designed for quick and tool-free assembly. Follow these simple steps:

1. Carefully unpackage all components and place them on a clean, flat surface.
2. Attach the main lamp body to the stable metal base by screwing it clockwise until secure. Ensure it is firmly tightened to prevent wobbling.
3. Connect the power cable to the lamp's power input port.
4. Plug the power cable into a standard electrical outlet.



Image 2: Lamp dimensions and illustration of easy assembly.

5. OPERATING INSTRUCTIONS

The LASTAR LED Floor Lamp features intuitive touch controls located on the lamp pole. These controls allow you to customize your lighting experience.

5.1 Power On/Off

Press the **Power button** () once to turn the lamp on or off.

5.2 Adjusting Brightness

The lamp offers 5 brightness levels (25%, 50%, 75%, 100%).

- Press the **Brightness button** (*) repeatedly to cycle through the brightness levels.

5.3 Adjusting Color Temperature

The lamp provides stepless color temperature adjustment from 3000K (warm) to 6000K (daylight).

- Press and hold the **Brightness button** (*) to smoothly adjust the color temperature. Release when the desired color is reached.



Image 3: Customizable brightness and color temperature settings.

5.4 Memory Function

The lamp automatically remembers your last used brightness and color temperature settings. When you turn the lamp back on, it will resume with these saved settings.

5.5 45-Minute Timer

Activate the 45-minute auto-off timer for convenience, especially when falling asleep.

- Press the **Timer button** (M) once to activate the 45-minute timer. The lamp will automatically turn off after 45 minutes.

1H Sleep Timer

Makes you have a peaceful and sweet sleep.



Image 4: The 45-minute sleep timer in use.

5.6 Flexible Gooseneck

The lamp features a 360° flexible gooseneck, allowing you to direct the light precisely where it is needed. Gently bend and adjust the gooseneck to achieve your desired lighting angle.



Image 5: The 360° flexible gooseneck for targeted illumination.

6. MAINTENANCE

To ensure the longevity and optimal performance of your LASTAR LED Floor Lamp, follow these maintenance guidelines:

- Always unplug the lamp before cleaning.
- Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents, as these may damage the finish.
- Avoid getting moisture into any openings of the lamp.
- The LED light source is integrated and not user-replaceable. Do not attempt to replace the LEDs.

7. TROUBLESHOOTING

If you encounter any issues with your LASTAR LED Floor Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply.	Ensure the power cable is securely plugged into both the lamp and a working electrical outlet. Test the outlet with another device.
Light flickers or is dim.	Unstable power supply or incorrect brightness setting.	Try plugging the lamp into a different outlet. Adjust the brightness level using the touch controls.
Touch controls are unresponsive.	Temporary electronic glitch or dirty sensor.	Unplug the lamp for 30 seconds, then plug it back in. Ensure the touch control area is clean and dry.
Lamp turns off unexpectedly.	45-minute timer activated.	This is normal if the timer was set. If not, check power supply stability.

8. SPECIFICATIONS

Feature	Detail
Model Number	CM006
Dimensions	8.3"D x 8.3"W x 64"H (21cm x 21cm x 162.5cm)
Item Weight	4.84 pounds (2.2 Kilograms)
Material	Metal
Finish Type	Matte
Color	Black
Light Source Type	LED
Number of LEDs	66
Wattage	12 watts
Brightness	Up to 550 lumens (equivalent to 100W halogen)
Color Temperature	3000K-6000K (Stepless adjustment)
Brightness Levels	5 levels (25%, 50%, 75%, 100%)
Control Method	Touch Control
Special Features	45-Min Timer, Memory Function, 360° Flexible Gooseneck, Eye-Friendly LED
Power Source	Corded Electric
Lifespan	Approx. 40,000 hours
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

LASTAR products are manufactured with high-quality materials and undergo strict quality control. For any product-related inquiries, technical support, or warranty claims, please contact LASTAR customer service through the retailer's platform or the official LASTAR website. Please have your purchase receipt and model number (CM006) ready when contacting support. For more information, visit the official LASTAR store:[LASTAR Store on Amazon](#)