

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SVPRO](#) /
- › [SVPRO Rechargeable Heated Socks User Manual](#)

SVPRO Svpro Heated Socks

SVPRO Rechargeable Heated Socks User Manual

INTRODUCTION

The SVPRO Rechargeable Heated Socks are designed to provide warmth and comfort in cold conditions. These battery-operated socks feature three adjustable heat settings, making them suitable for various outdoor activities such as skiing, hiking, camping, fishing, hunting, and mountaineering. This manual provides essential information for the safe and effective use of your heated socks.



Image: Layered construction of the heated socks, illustrating the windproof, insulation, heating, and warm layers, with heat shown radiating from the foot area.


SETUP INSTRUCTIONS

1. Charging the Batteries

Before first use, fully charge both 3.7V Li-ion rechargeable batteries using the provided USB C-A charging cable. Connect the charging cable to the batteries and a suitable USB power source. The indicator light on the charger will show the charging status and when the batteries are fully charged.

2. Inserting Batteries into Socks

1. Locate the small pocket on the side of each sock.
2. Connect the charged battery to the wire inside the sock pocket.
3. Carefully place the battery into the pocket, ensuring a secure fit.

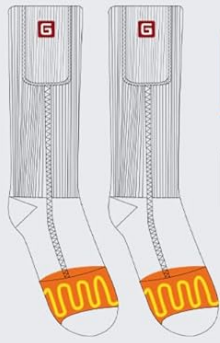

HOW IT WORK ?



Charging the Li-ion Batteries



Put on socks



Connect the batteries with wires
in the socks pocket



Turn on the heat and adjust the
temperature by press the switch
on the battery



Put the battery back to the socks
pocket, enjoy the warm moment.

Image: Visual guide demonstrating the steps for charging batteries, putting on socks, connecting batteries, turning on the heat, and securing batteries in the sock pockets.

OPERATING INSTRUCTIONS

1. Turning On/Off

Press and hold the power button on the battery for 2-3 seconds to turn the socks on or off.

2. Adjusting Heat Settings

Once powered on, short press the power button to cycle through the three heat settings: Low, Medium, and High. Each press will change the heat level, indicated by LED lights on the battery.

- **Low:** Approximately 105°F (40°C) for up to 10 hours.
- **Medium:** Approximately 125°F (52°C) for up to 8 hours.
- **High:** Approximately 140°F (60°C) for up to 5 hours.



Image: Diagram illustrating the three temperature levels and their approximate durations, along with the 4000mAh rechargeable batteries.

BATTERY CONTROLS

4000mAh
X2

3 LEVEL TEMPERATURE

HIGH	5H	140°F
MID	8H	120°F
LOW	10H	105°F

LARGE CAPACITY BATTERY

↻ 10H
HEATING

⏱ 30S
WARM UP

Temperature Level
Power Switch/Mode Selection
Battery Indicator Light
USB-C Charge Port

Image: Detailed view of the battery controls, highlighting the power switch, temperature indicator lights, and USB-C charging port.

MAINTENANCE

1. Washing Instructions

- Always remove the batteries before washing the socks.
- **Hand Wash:** Wash gently with mild detergent in cold water.
- **Machine Wash:** Place socks in a laundry bag and wash on a gentle cycle with cold water. Do not use bleach.
- **Drying:** Air dry only. Do not machine dry or wring out the socks. Ensure socks are completely dry before reinserting batteries.

Hand & Machine Washable

Take out the battery

Hand wash with mild detergent

Machine wash with laundry bag

No machine dry

Image: Visual guide for washing the heated socks, including battery removal, hand wash, machine wash with laundry bag, and air drying.

2. Battery Care

- Store batteries in a cool, dry place when not in use.

- Avoid exposing batteries to extreme temperatures or direct sunlight.
- Charge batteries periodically if not used for extended periods to maintain battery health.

TROUBLESHOOTING

Socks Not Heating

- Ensure batteries are fully charged and correctly connected to the sock wires.
- Verify the power button on the battery has been pressed and held for 2-3 seconds to turn on.
- Check for any visible damage to the wires or heating elements.

Short Battery Life

- Battery life varies with heat setting. Higher settings consume more power.
- Ensure batteries are fully charged before each use.
- Battery performance may decrease in extremely cold environments.

Uneven Heating

- Ensure the heating elements are properly positioned within the sock and not folded or creased.
- If uneven heating persists, contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	SVPRO
Model Name	Svpro Heated Socks
Size	Medium
Color	Pink
Material	Cotton
Power Source	Battery Powered, Electric
Battery Type	Lithium-Ion
Battery Capacity	2200 Milliamp Hours (per battery, 4000mAh total for 2 batteries)
Temperature Range	95°F - 140°F (35°C - 60°C)
Reusability	Rechargeable
Recommended Uses	Skiing, Camping, Fishing, Hunting, Hiking, Cycling
Included Components	1 pair Heated Socks, 2 x 4000mAh Li-Polymer Batteries, 1 x USB Charging Cable, 1 x User Manual, 1 x Packing Box

WARRANTY INFORMATION

The SVPRO Rechargeable Heated Socks come with a **1-year full warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For product inquiries, technical assistance, or warranty claims, please contact SVPRO customer support through the retailer where the product was purchased or visit the official SVPRO website for more information.

© 2024 SVPRO. All rights reserved.