

Nakamichi Jukebox

Nakamichi NM-Jukebox 40W Bluetooth Speaker User Manual

Model: NM-Jukebox

1. INTRODUCTION

Thank you for purchasing the Nakamichi NM-Jukebox 40W Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The Nakamichi NM-Jukebox is a 40W bookshelf-style Bluetooth speaker designed for music playback. It features a vintage aesthetic with modern audio technology, including touch controls and automatic equalization (auto EQ).

2.1 Components

- Nakamichi NM-Jukebox Speaker
- Power Adapter (ensure correct adapter for your region)
- User Manual

2.2 Speaker Features

- 40 Watts Maximum Output Power
- Bluetooth Wireless Communication Technology
- Stereo Audio Output Mode
- Touch Control Method
- Auto EQ Special Feature
- Bookshelf Speaker Type with Tabletop Mount



Figure 1: Front-angled view of the Nakamichi NM-Jukebox speaker, showcasing its brown wooden casing and gold-colored grille with the Nakamichi logo.



Figure 2: Direct front view of the Nakamichi NM-Jukebox speaker, highlighting the detailed gold grille pattern and the Nakamichi branding.

3. SETUP

3.1 Unpacking

1. Carefully remove the speaker and all accessories from the packaging.
2. Retain the packaging for future transport or storage.

3.2 Placement

Place the Nakamichi NM-Jukebox speaker on a stable, flat surface, such as a tabletop. Ensure there is adequate space around the speaker for optimal sound dispersion and ventilation.



Figure 3: Dimensions of the Nakamichi NM-Jukebox speaker, measuring 8 inches deep, 10.3 inches wide, and 6 inches high.

3.3 Power Connection

Connect the provided power adapter to the speaker's power input and then to a suitable wall outlet. Verify that the power adapter is compatible with your region's electrical standards.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Locate the power button, typically on the control panel. Press and hold (or press, depending on design) to power the speaker on or off. An indicator light will usually confirm the power status.

4.2 Bluetooth Pairing

The Nakamichi NM-Jukebox uses Bluetooth for wireless audio streaming from compatible devices like smartphones and tablets.

1. Ensure the speaker is powered on.
2. Activate Bluetooth on your source device (e.g., smartphone).
3. On the speaker, activate Bluetooth pairing mode. This may involve pressing a dedicated Bluetooth button or holding the power button until an indicator light flashes.

4. On your source device, search for available Bluetooth devices. Select "NM-Jukebox" from the list.
5. Once paired, the speaker will indicate a successful connection, and you can begin playing audio.

4.3 Audio Playback and Controls

After successful pairing, you can control audio playback from your connected device. The speaker also features touch controls for basic functions and sound adjustments.

- **Volume Control:** Adjust the master volume using the dedicated controls on the speaker or your paired device.
- **Bass and Treble Adjustment:** The speaker may include physical or touch controls for adjusting bass and treble levels to customize your listening experience.
- **Auto EQ:** The integrated auto EQ feature automatically optimizes sound output for balanced audio performance.

5. MAINTENANCE

5.1 Cleaning

To clean the speaker, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or solvents, as these may damage the finish or internal components. Ensure the speaker is powered off and unplugged before cleaning.

5.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. If possible, use the original packaging for protection.

6. TROUBLESHOOTING

If you encounter issues with your Nakamichi NM-Jukebox speaker, refer to the following common solutions:

- **No Power:** Ensure the power adapter is securely connected to both the speaker and a working power outlet. Verify the outlet is active.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the speaker is correctly paired via Bluetooth. Try re-pairing the device.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode. Disable and re-enable Bluetooth on your source device. Move your device closer to the speaker. Clear previous Bluetooth connections on your device if necessary.
- **Distorted Sound:** Reduce the volume on both the speaker and your source device. Ensure the audio source is of good quality.

If problems persist, contact customer support for further assistance.

7. SPECIFICATIONS

Feature	Specification
Model Name	NM-JUKEBOX/BRW
Speaker Type	Bookshelf
Special Feature	Auto EQ
Recommended Uses	For Music Players, Portable Use
Compatible Devices	Smartphone, Tablet
Product Dimensions (D x W x H)	8" x 10.3" x 6"
Waterproof	No
Control Method	Touch
Wireless Communication Technology	Bluetooth
Speaker Size	18.6 Centimeters
Power Source	Battery Powered
Audio Driver Type	Dynamic Driver
Speaker Maximum Output Power	40 Watts
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Item Weight	11.81 pounds
UPC	840735104563

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

The Nakamichi NM-Jukebox speaker comes with a limited warranty. Please refer to the warranty card included with your product or visit the official Nakamichi website for detailed terms and conditions.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Nakamichi customer support. Contact information can typically be found on the official Nakamichi website or on your product packaging.