

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yaheetech](#) /

› [Yaheetech Dining Chairs \(Model YT-00108084-01\) Instruction Manual](#)

Yaheetech YT-00108084-01

Yaheetech Dining Chairs Instruction Manual

Model: YT-00108084-01

INTRODUCTION

Thank you for choosing Yaheetech Dining Chairs. This manual provides essential information for the safe assembly, operation, and maintenance of your new chairs. Please read these instructions carefully before assembly and retain them for future reference.

SAFETY INFORMATION

- **Maximum Weight Capacity:** Each chair is designed to support a maximum weight of 276 pounds (135 kg). Do not exceed this limit.
- **Indoor Use Only:** These chairs are intended for indoor use in environments such as dining rooms, kitchens, living rooms, and bedrooms.
- **Assembly:** Ensure all screws are securely tightened before using the chair. Regularly check and re-tighten all fasteners to maintain stability.
- **Moving:** When moving the chairs, lift them slightly to avoid dragging, which can damage the legs or floor.
- **Children:** Supervise children to prevent misuse of the chairs, such as climbing or rocking, which could lead to injury.

PACKAGE CONTENTS

Before beginning assembly, please ensure all parts listed below are present and undamaged:

- Dining Chair Backrest (with attached back legs)
- Dining Chair Seat
- Front Legs (2 per chair)
- Hardware Pack (screws, washers, Allen wrench)
- User Manual (this document)

SETUP & ASSEMBLY

Follow these steps to assemble your Yaheetech Dining Chairs:

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Verify that all parts are present and free from damage.
2. **Attach Front Legs:** Align the front legs with the designated attachment points on the underside of the chair seat. Insert the screws and washers, and hand-tighten them partially using the provided Allen wrench. Do not fully tighten yet.
3. **Align and Balance:** Gently place the chair upright on a flat, level surface. Ensure all four legs make even contact with the floor. If the chair wobbles, slightly adjust the leg positions.
4. **Final Tightening:** Sit on the chair to apply weight and help the legs settle into their correct, balanced position. While seated, or with someone applying weight, fully tighten all screws using the Allen wrench. This ensures stability and prevents wobbling.
5. **Adjust Foot Pads:** The chair legs are equipped with adjustable foot pads. Rotate these pads to fine-tune the chair's stability and protect your floor from scratches.

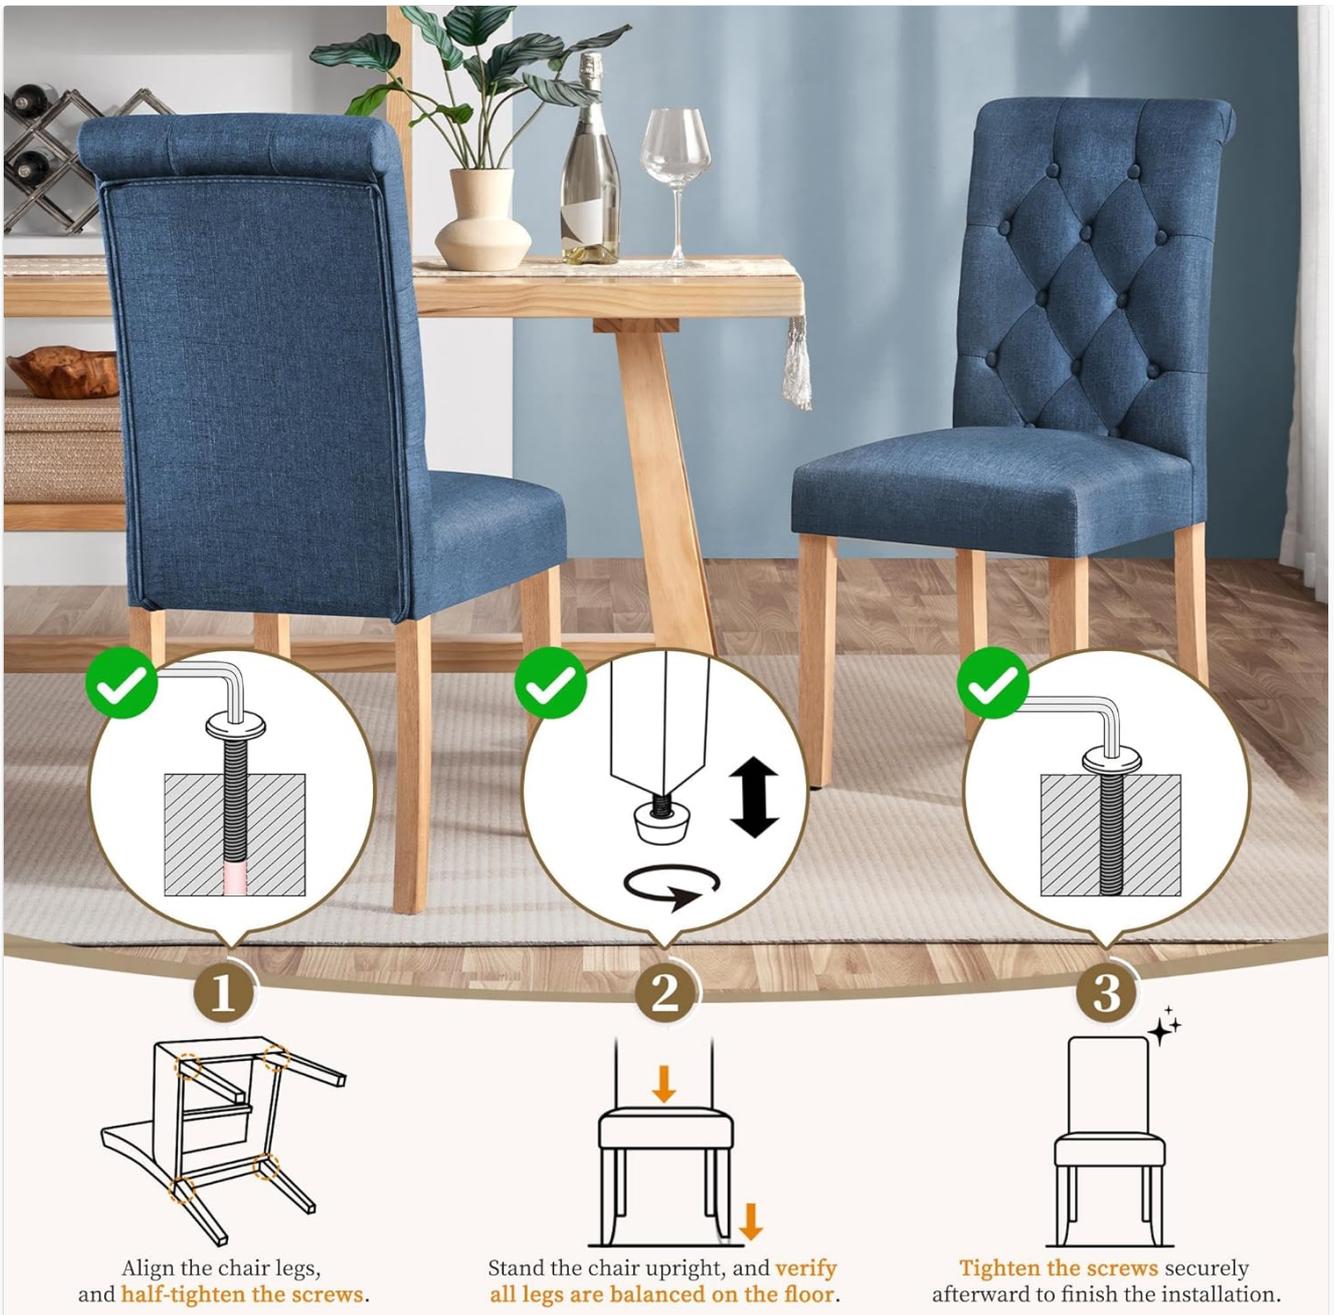


Image: Step-by-step visual guide for chair assembly, illustrating how to align legs, balance the chair, and tighten screws.

Adjust the foot pads to keep your dining chair stable and prevent floor scratches



Image: Detailed view of the adjustable foot pads, showing how they can be rotated to ensure stability and prevent floor scratches.

Your browser does not support the video tag.

Video: Official Yaheetech installation guide for dining chairs with wooden legs, demonstrating the assembly process and how to ensure stability.

OPERATING INSTRUCTIONS

These dining chairs are designed for comfortable seating in various indoor settings. To ensure longevity and proper function:

- Always sit centrally on the seat to distribute weight evenly.
- Avoid standing on the chairs or using them as step stools.
- When moving the chairs, lift them slightly off the floor rather than dragging them to prevent damage to the legs and floor surfaces.

MAINTENANCE

Proper care will help maintain the appearance and extend the life of your dining chairs:

- **Cleaning:** Wipe clean with a damp cloth. For tougher stains on the fabric, use a mild fabric cleaner and follow the product instructions. Test on an inconspicuous area first.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong detergents, or solvents, as these can damage the fabric and wood finish.
- **Regular Inspection:** Periodically check all screws and fasteners. Re-tighten them as needed to ensure the chair remains stable and secure.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause the fabric to fade over time.
- **Spills:** Blot spills immediately with a clean, dry cloth to prevent staining.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Wobbly Chair:** If your chair feels wobbly after assembly or over time, loosen all leg attachment screws slightly. Sit on the chair to allow the legs to settle evenly on the floor, then fully re-tighten all screws. Adjust the individual foot pads on each leg if necessary to achieve perfect balance.
- **Difficulty Assembling:** Ensure you are using the correct hardware for each step and that components are aligned properly. Refer to the assembly diagrams and video for visual guidance. Do not force parts together.

SPECIFICATIONS

Feature	Detail
Brand	Yaheetech
Model Number	YT-00108084-01
Color	Blue
Material	Rubber Wood, Polyester Fabric, Foam
Product Dimensions (D x W x H)	24.5" x 18" x 39"
Seat Height	20 Inches
Seat Depth	17 Inches
Seat Length	18 Inches
Maximum Weight Recommendation	276 Pounds
Assembly Required	Yes
Indoor Outdoor Usage	Indoor
Style	Modern, Tufted Back, Armless



Image: Detailed dimensions of the Yaheetech Dining Chair, including height, width, and depth measurements.

WARRANTY & SUPPORT

For any questions, concerns, or assistance with your Yaheetech Dining Chairs, please contact Yaheetech customer service. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the Yaheetech official website for warranty information and support options.

You can visit the official Yaheetech store for more information: [Yaheetech Store](#)