

[manuals.plus](#) /› [Moulinex](#) /› [MOULINEX DoubleForce Food Processor FP827E27 Instruction Manual](#)

Moulinex FP827E27

MOULINEX DoubleForce Food Processor FP827E27 Instruction Manual

Model: FP827E27

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your MOULINEX DoubleForce Food Processor FP827E27. This appliance is designed to simplify various kitchen tasks with its powerful 1000W motor, 3L main bowl, 2L blender jar, and 10 versatile attachments. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always adhere to the following precautions:

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Keep hands and utensils away from moving blades or discs while processing food to prevent injury.
- Ensure the lid is securely locked in place before operating the appliance. The EasyLock system provides a secure closure.
- Do not immerse the motor unit in water or any other liquid. Clean it with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching sharp blades. Handle with care.

3. PRODUCT OVERVIEW AND COMPONENTS

Your MOULINEX DoubleForce Food Processor comes with a range of components designed for various culinary tasks.



Figure 1: Moulinex DoubleForce Food Processor FP827E27 with all included accessories.

Main Components:

- **Motor Unit:** The base of the appliance housing the 1000W motor and control panel.
- **Main Bowl (3L capacity):** For food processing tasks like chopping, grating, slicing, kneading, and whipping.
- **Blender Jar (2L capacity):** For blending liquids, smoothies, and soups.
- **Lid with Feeder Tube and Pusher:** Secures the bowl/jar and allows ingredients to be added during operation.

Attachments:

- **Chopping Blade:** For mincing, chopping, and mixing.
- **Kneading Tool:** For preparing doughs.
- **Emulsifying Whisk:** For whipping cream, egg whites, and making mayonnaise.
- **Reversible Grating/Slicing Discs (Fine & Coarse):** For grating vegetables, cheese, and slicing fruits and vegetables.
- **Citrus Press:** For extracting juice from citrus fruits, includes two cone sizes.
- **Spatula:** For scraping and mixing ingredients.



Figure 2: Overview of various functions and corresponding attachments.

4. SETUP

Follow these steps to correctly assemble your food processor:

1. Place the motor unit on a stable, flat, and dry surface.
2. Choose either the main bowl or the blender jar depending on your task.
3. **For the Main Bowl:** Place the main bowl onto the motor unit, aligning the handle with the locking mechanism. Rotate clockwise until it clicks into place.
4. **For the Blender Jar:** Place the blender jar onto the motor unit, aligning it correctly. Rotate clockwise until it locks.
5. Insert the desired attachment (e.g., chopping blade, disc support with disc) into the bowl/jar.
6. Place the lid onto the bowl/jar, ensuring the EasyLock system engages. Rotate the lid clockwise until it securely locks. The appliance will not operate if the lid is not properly locked.
7. Insert the pusher into the feeder tube of the lid.



Figure 3: Base unit and main processing bowl assembly.

5. OPERATING INSTRUCTIONS

The DoubleForce Food Processor features two distinct motor outputs, one for high-speed blending and another for powerful food processing, ensuring optimal performance for every task.



Figure 4: Dual motor outputs for optimized performance.

Control Panel:

The digital control panel features 7 pre-programmed backlit keys for automatic settings and 3 manual speed buttons, plus a Pulse function for precise control.

- **Pre-programmed Keys:** Select the appropriate key for common tasks (e.g., chopping, blending, kneading) for optimized speed and duration.
- **Manual Speeds (1, 2, 3):** Adjust the processing speed manually for various ingredients.
- **Pulse Function:** Provides short bursts of power for coarse chopping or quick mixing.

Specific Functions:

- **Chopping/Mincing:** Use the chopping blade in the main bowl. Add ingredients, secure the lid, and select a pre-programmed chopping setting or use manual speed/pulse.
- **Blending:** Attach the blender jar. Add liquids and ingredients. Secure the lid and select a pre-programmed blending setting or use manual speed/pulse.



Figure 5: Blending with the 2L blender jar.

- **Grating/Slicing:** Insert the disc support and the desired reversible disc (grating or slicing) into the main bowl. Secure the lid. Add ingredients through the feeder tube using the pusher. Select a pre-programmed setting or manual speed.



Figure 6: Grating carrots using the food processor.

- **Kneading:** Use the kneading tool in the main bowl. Add flour and other ingredients. Secure the lid and select the kneading pre-program.
- **Whipping/Emulsifying:** Use the emulsifying whisk in the main bowl. Add ingredients like cream or egg whites. Secure the lid and select the whipping pre-program or a suitable manual speed.



Figure 7: Whipping cream with the emulsifying whisk.

- **Citrus Press:** Attach the citrus press accessory to the motor unit. Place a halved citrus fruit onto the cone and press down gently to extract juice.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your appliance.

- Always unplug the food processor before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water.
- **Bowls, Jars, Lids, and Attachments:** All removable parts (bowls, jars, lids, blades, discs, etc.) are generally dishwasher safe. For manual cleaning, wash them in warm, soapy water, then rinse and dry thoroughly.
- **Blades and Discs:** Handle sharp blades and discs with extreme care to avoid injury. Use a brush for thorough cleaning if necessary.
- Store the appliance and its accessories in a dry place. The included storage box helps organize attachments.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

- **Appliance does not start:**

- Ensure the appliance is properly plugged into a working power outlet.
- Verify that the main bowl/blender jar and lid are correctly assembled and securely locked into place using the EasyLock system. The safety mechanism prevents operation if not properly assembled.

- **Poor processing results (e.g., uneven chopping, ingredients not blending):**

- Check that the correct attachment is being used for the task.
- Ensure ingredients are cut into appropriate sizes before adding them.
- Do not overload the bowl/jar. Process in smaller batches if necessary.
- For blending, ensure sufficient liquid is added.

- **Unusual noise or vibration:**

- Turn off and unplug the appliance. Check for any foreign objects or blockages.
- Ensure all parts are correctly assembled and securely fastened.

If the problem persists after following these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Moulinex
Model Number	FP827E27
Power / Wattage	1000 watts
Main Bowl Capacity	3 Liters
Blender Jar Capacity	2 Liters
Number of Speeds	3 + Pulse function
Special Features	Safety Lock, EasyLock System, PowelixLife Blades
Product Dimensions	27.5 x 46.5 x 46 cm
Item Weight	5 Kilograms
Material	Mixed, Plastic



Figure 8: PowelixLife blade technology for enhanced durability and performance.

9. WARRANTY AND SUPPORT

Your MOULINEX DoubleForce Food Processor FP827E27 comes with a **2-year warranty**, covering manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please contact Moulinex customer support. Refer to the contact information provided in your product packaging or visit the official Moulinex website for regional support details.