

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MEAGEAL](#) /

› [MEAGEAL VS-1727 Mini Vintage Style Record Player Instruction Manual](#)

## MEAGEAL VS-1727

# MEAGEAL VS-1727 Mini Vintage Style Record Player Instruction Manual

## INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your MEAGEAL VS-1727 Mini Vintage Style Record Player. Please read this manual thoroughly before using the product and retain it for future reference. The VS-1727 combines classic aesthetics with modern functionality, offering vinyl playback, Bluetooth connectivity, USB playback, AUX input, and FM radio.

## SAFETY INSTRUCTIONS

- Read all instructions before operating the unit.
- Keep the unit away from water, moisture, and direct sunlight.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not attempt to repair or modify the unit yourself. Refer all servicing to qualified personnel.
- Clean the unit only with a dry cloth.
- Keep records and the stylus clean to ensure optimal performance and longevity.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MEAGEAL Mini Phonograph (VS-1727)
- 1 x User Manual
- 1 x Power Adapter
- 1 x 45 RPM Adaptor

## PRODUCT OVERVIEW

The MEAGEAL VS-1727 features a vintage design with modern controls. Familiarize yourself with the main

components:





Figure 1: Overall view of the MEAGEAL VS-1727 Record Player.

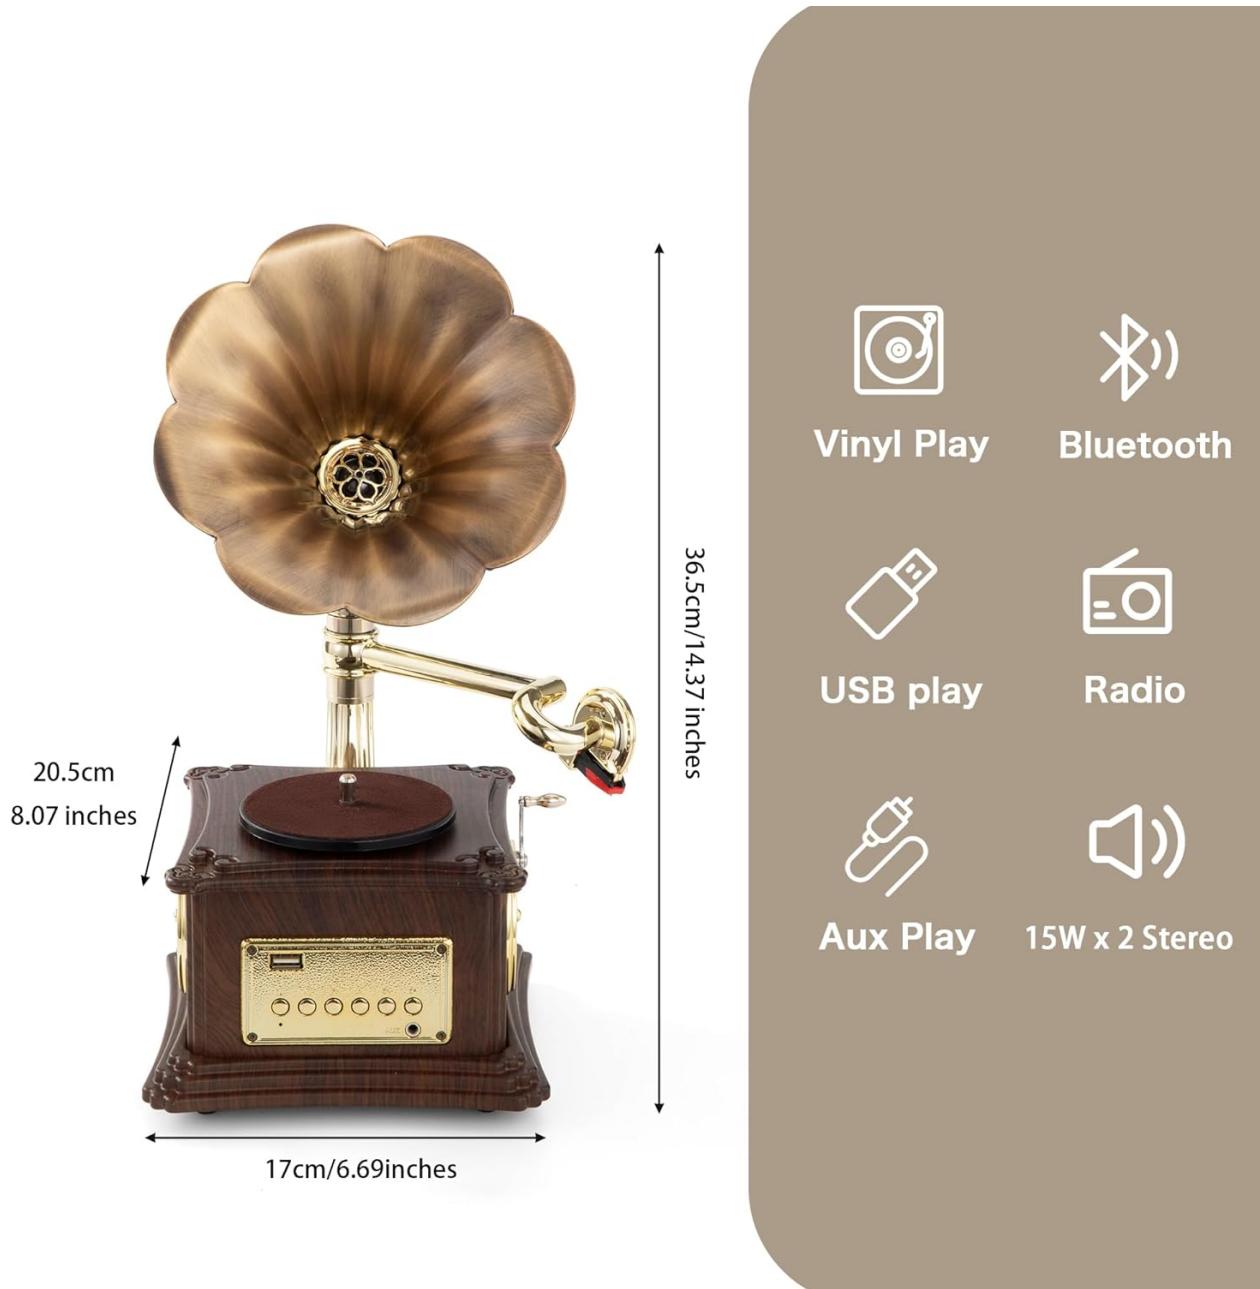


Figure 2: Detailed view of the control panel, including USB port and function buttons.

Key components include the turntable platter, tonearm with stylus, decorative horn, and a front-facing control panel with buttons for mode selection, playback, and a USB port. A speed selector switch is located on the side.

## SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport

or storage.

2. **Horn Assembly:** Gently attach the decorative horn to the designated port on the unit. Ensure it is securely fitted.
3. **Power Connection:** Connect the supplied power adapter to the DC IN port on the back of the unit, then plug it into a wall outlet.
4. **Initial Power On:** Press and hold the power button on the control panel to turn on the unit.

## Setup Video Guide

Your browser does not support the video tag.

*Video 1: Instructions for the Hofeinz VS-1727 Mini Retro Phonograph, demonstrating initial setup and record playing.*

Your browser does not support the video tag.

*Video 2: Record player operation guide, showing unpacking, assembly, and various playback modes.*

## OPERATING INSTRUCTIONS

---

### 1. Vinyl Playback

1. **Power On:** Press and hold the power button to turn on the unit.
2. **Select Mode:** Press the 'Mode' button until the unit announces 'Phono Mode' or the corresponding indicator lights up.
3. **Place Record:** Carefully place a vinyl record on the turntable platter. For 7-inch records, use the included 45 RPM adaptor.
4. **Select Speed:** Adjust the speed selector switch (located on the side of the unit) to match your record's speed (33 RPM for 12-inch LPs, 45 RPM for 7-inch singles).
5. **Start Playback:** Gently lift the tonearm and position the stylus over the desired track on the record. Lower the tonearm slowly onto the record.
6. **Adjust Volume:** Use the volume knob to adjust the sound level.
7. **End Playback:** At the end of the record, the tonearm will automatically return to its rest position. Alternatively, manually lift the tonearm and place it back on its rest.



*Figure 3: Tonearm and stylus in position for vinyl playback.*

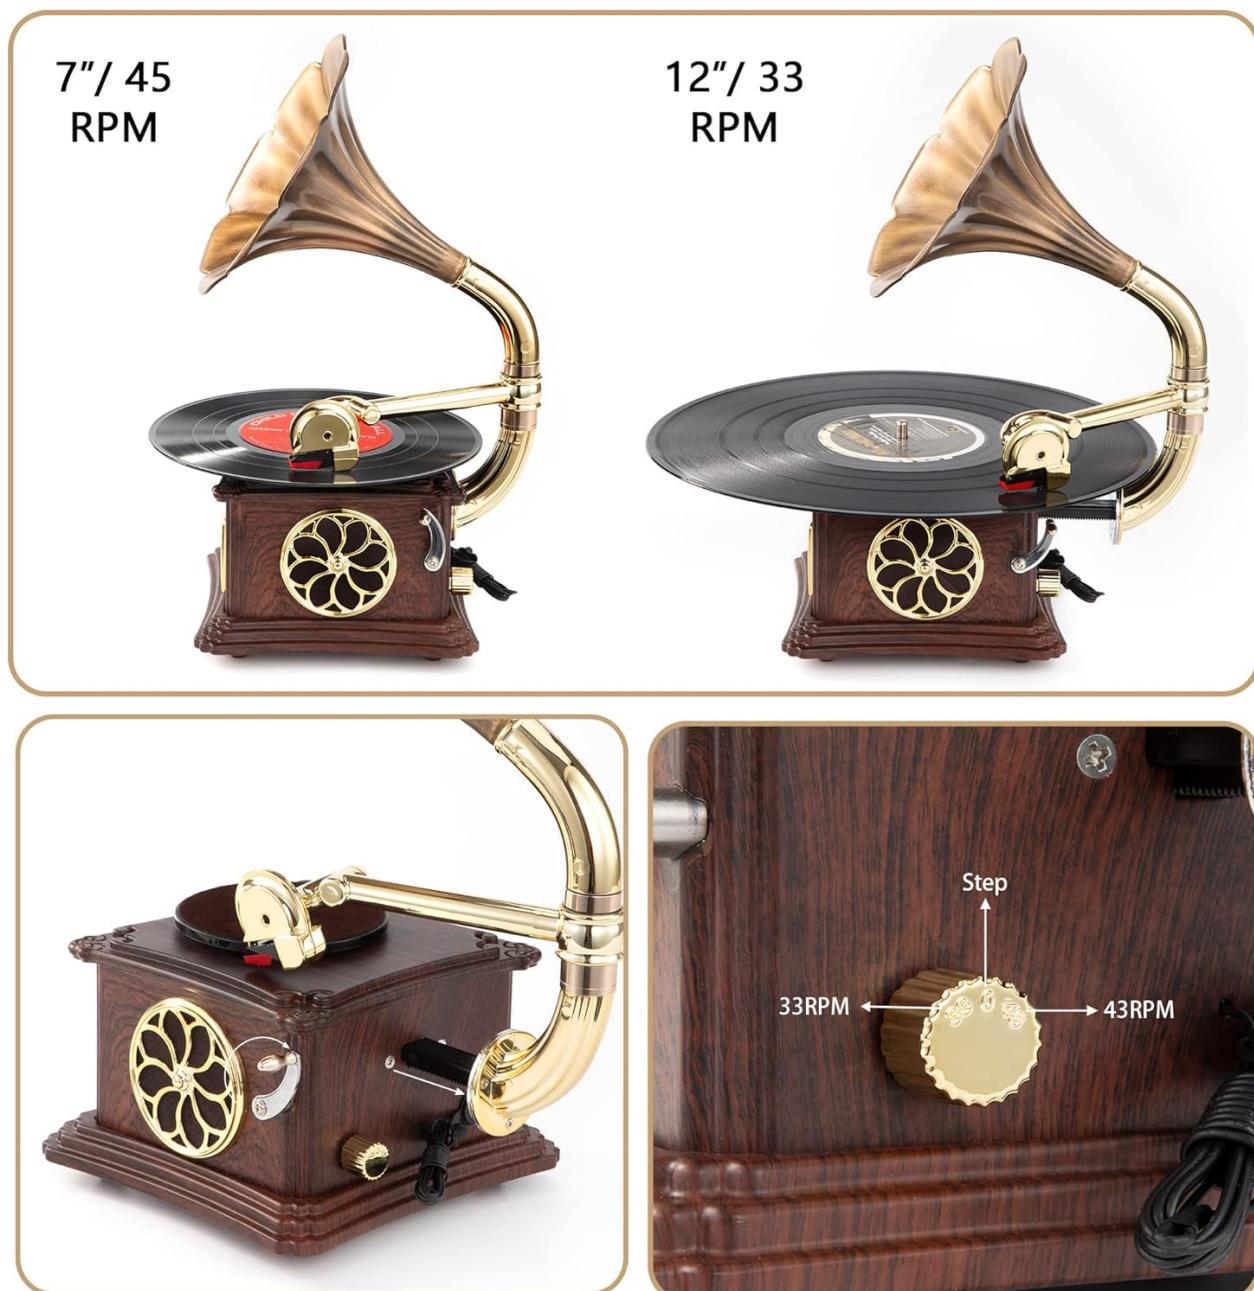


Figure 4: Illustration of record sizes and corresponding RPM settings.

## 2. Bluetooth Mode

1. **Power On:** Turn on the record player.
2. **Select Mode:** Press the 'Mode' button until the unit announces 'Bluetooth Mode' or the Bluetooth indicator light flashes.
3. **Pairing:** On your mobile device, enable Bluetooth and search for available devices. Select 'VS-1727' from the list. The unit will confirm successful pairing.
4. **Play Music:** Start playing music on your paired device. The audio will stream through the record player's speakers.

## 3. USB Playback

1. **Power On:** Turn on the record player.
2. **Insert USB:** Insert a USB flash drive into the USB port on the control panel.
3. **Select Mode:** Press the 'Mode' button until the unit announces 'USB Mode' or the corresponding indicator lights up. Playback should begin automatically.

4. **Control Playback:** Use the playback control buttons (Play/Pause, Next/Previous Track) on the unit to manage your music.

## 4. AUX Input

1. **Power On:** Turn on the record player.
2. **Connect Device:** Connect an external audio device (e.g., smartphone, MP3 player) to the AUX IN port using a 3.5mm audio cable (not included).
3. **Select Mode:** Press the 'Mode' button until the unit announces 'AUX Mode' or the corresponding indicator lights up.
4. **Play Music:** Start playing music on your external device.

## 5. FM Radio

1. **Power On:** Turn on the record player.
2. **Select Mode:** Press the 'Mode' button until the unit announces 'FM Radio Mode' or the corresponding indicator lights up.
3. **Tune Stations:** Use the 'Next/Previous Track' buttons to scan for FM radio stations.

# MAINTENANCE

---

## Cleaning the Unit

- Wipe the exterior surfaces with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

## Stylus Care

- The stylus is delicate. Handle it with care.
- Clean the stylus periodically using a soft brush, brushing gently from back to front.
- Replace the stylus when you notice a degradation in sound quality or visible wear.

# TROUBLESHOOTING

---

- **No Power:**
  - Ensure the power adapter is securely connected to the unit and a working power outlet.
  - Try a different power outlet.
- **No Sound:**
  - Check the volume level on the unit and any connected external devices.
  - Ensure the correct mode (Phono, Bluetooth, USB, AUX, FM) is selected.
  - For vinyl playback, ensure the tonearm is properly lowered onto the record and the stylus is clean.
- **Record Skipping:**
  - Ensure the record is clean and free of dust or debris.
  - Place the unit on a stable, level surface to prevent vibrations.
  - Check the stylus for damage or wear.
- **Bluetooth Not Connecting:**
  - Ensure the unit is in Bluetooth mode and the indicator light is flashing.
  - Make sure your device's Bluetooth is enabled and within range.
  - Forget the device from your phone's Bluetooth settings and try pairing again.

- **Poor Radio Reception:**

- Adjust the unit's position to improve signal reception.

## SPECIFICATIONS

- **Model Name:** VS-1727
- **Item Model Number:** MJ-108LP
- **Product Dimensions:** 14.37 x 8.07 x 6.69 inches
- **Item Weight:** 5.7 pounds
- **Material:** Metal (horn), Wood (base)
- **Supported Speeds:** 33 1/3 RPM, 45 RPM
- **Motor Type:** DC Motor
- **Connectivity:** Bluetooth, USB, AUX Input, FM Radio
- **Speakers:** Built-in dual 15W speakers (left/right) and a 10W copper speaker (top)
- **Included Components:** Mini Phonograph, User manual, Power adapter, 45RPM adaptor



Figure 5: Product dimensions for the MEAGEAL VS-1727.

## **WARRANTY AND SUPPORT**

---

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.