

ZEXMTE Q200

ZEXMTE Portable CD Player User Manual

Model: Q200

INTRODUCTION

This manual provides detailed instructions for the ZEXMTE Portable CD Player, a versatile audio device designed for various listening experiences. It functions as a portable CD player, Bluetooth HiFi speaker, FM radio, USB flash drive player, TF card player, and 3.5mm AUX audio player. The player features a wall-mountable design, a desk stand, an IR remote control, an upgraded LCD display, and a dust cover for enhanced usability and durability.

PACKAGE CONTENTS

 
Please verify that all items listed below are included in your package:

- Portable CD Player
- USB Adapter
- 3.5mm AUX Cable
- Wall-mounted Plate
- Desk Stand
- Remote Control (*Battery not included*)
- User Manual
- Mounting Screws and Anchors

PACKAGE LIST



Portable CD player

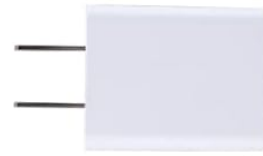


USB Adapter



3.5mm AUX Cable



 Wall-mounted Plate

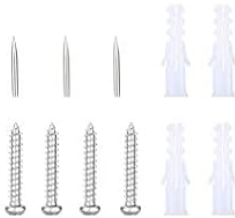

User Manual



Remote Control
(Battery not included)



Desk stand

Figure 1: Contents of the ZEXMTE Portable CD Player package.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your CD player.

Controls and Ports

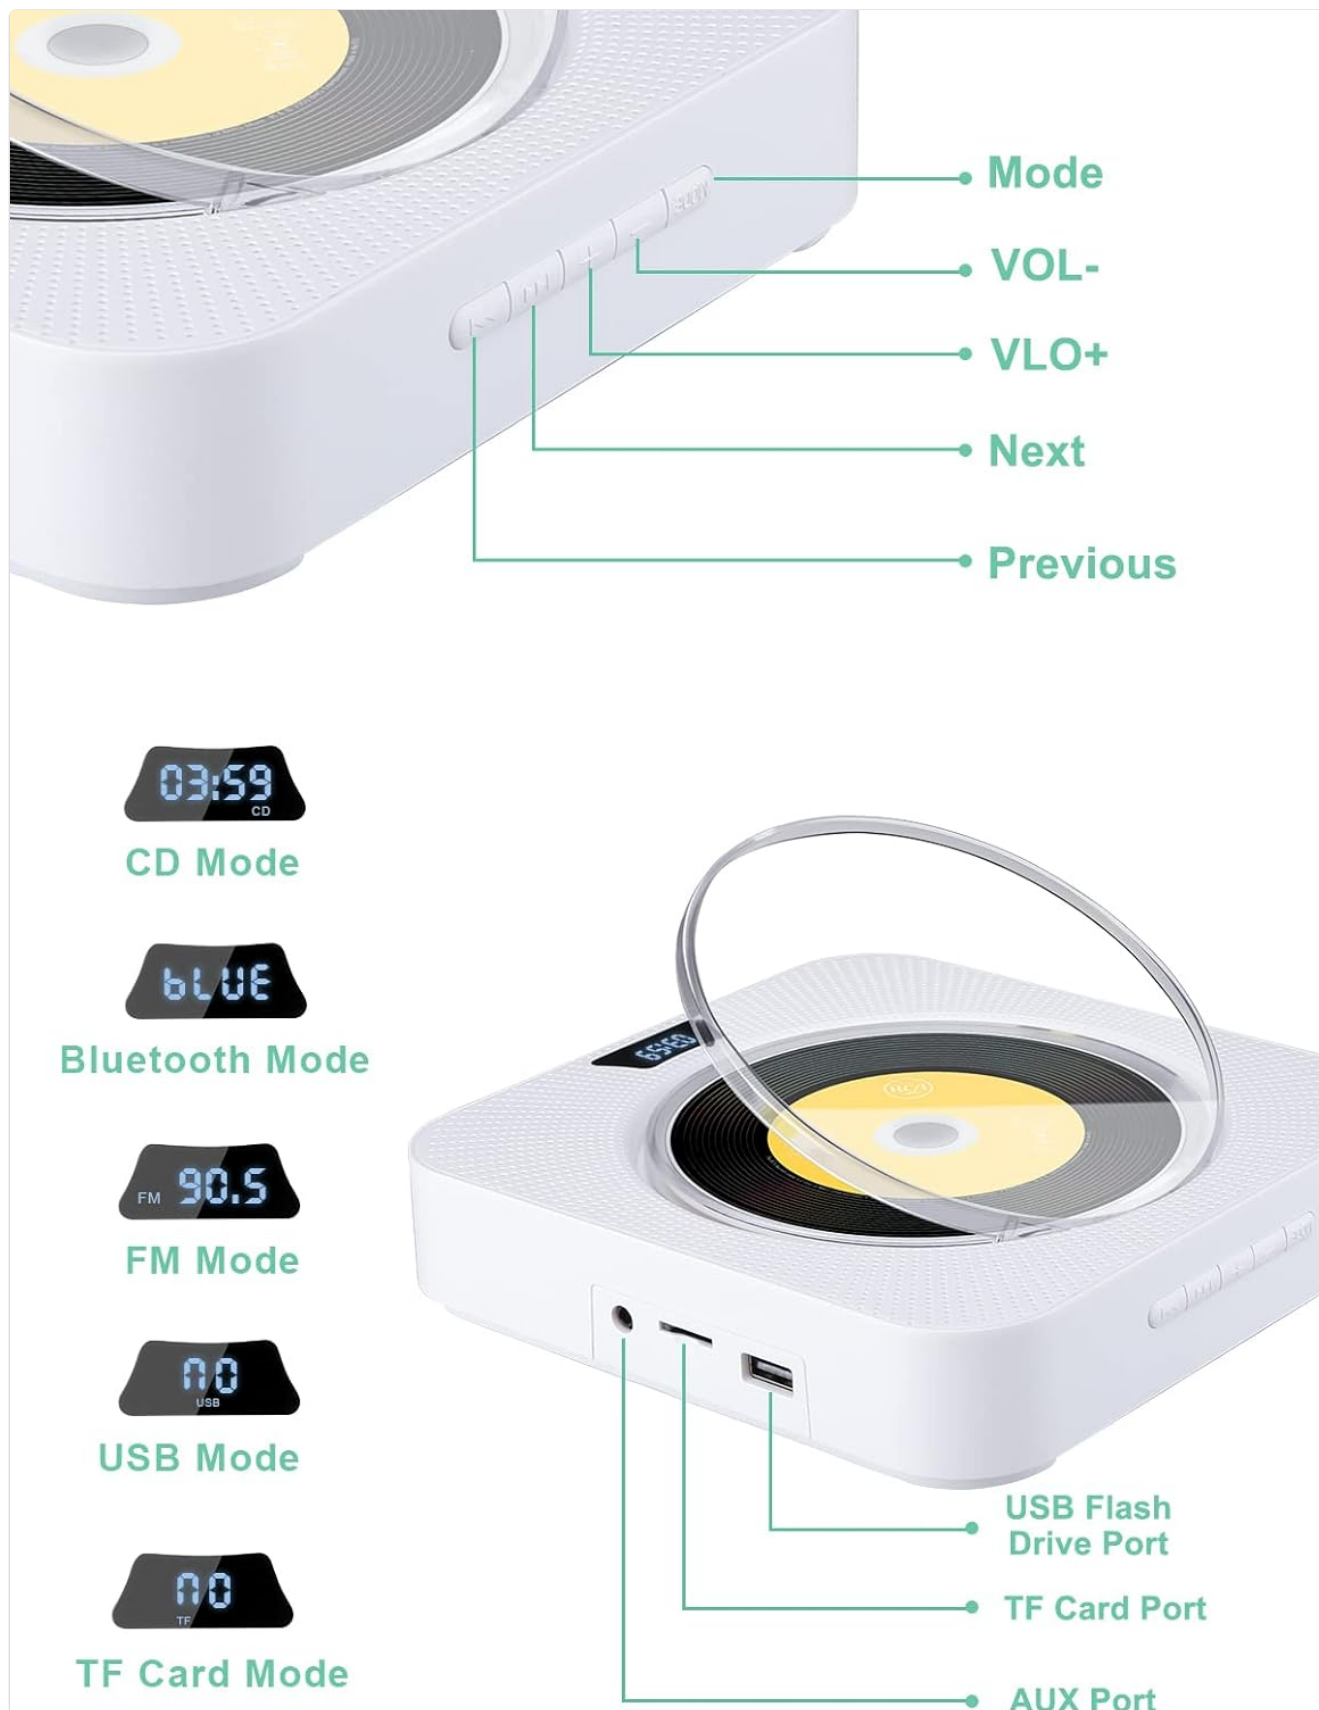


Figure 2: Side view of the CD player showing control buttons and input ports.

- **Mode Button:** Switches between CD, Bluetooth, FM, USB, TF, and AUX modes.
- **VOL- / VOL+ Buttons:** Adjusts volume down or up.
- **Next / Previous Buttons:** Skips tracks or stations.
- **USB Flash Drive Port:** For playing audio from USB drives.
- **TF Card Port:** For playing audio from TF (MicroSD) cards.

- **AUX Port:** For connecting external audio devices via a 3.5mm cable.

LCD Display

The integrated LCD display shows the current operating mode and other relevant information.

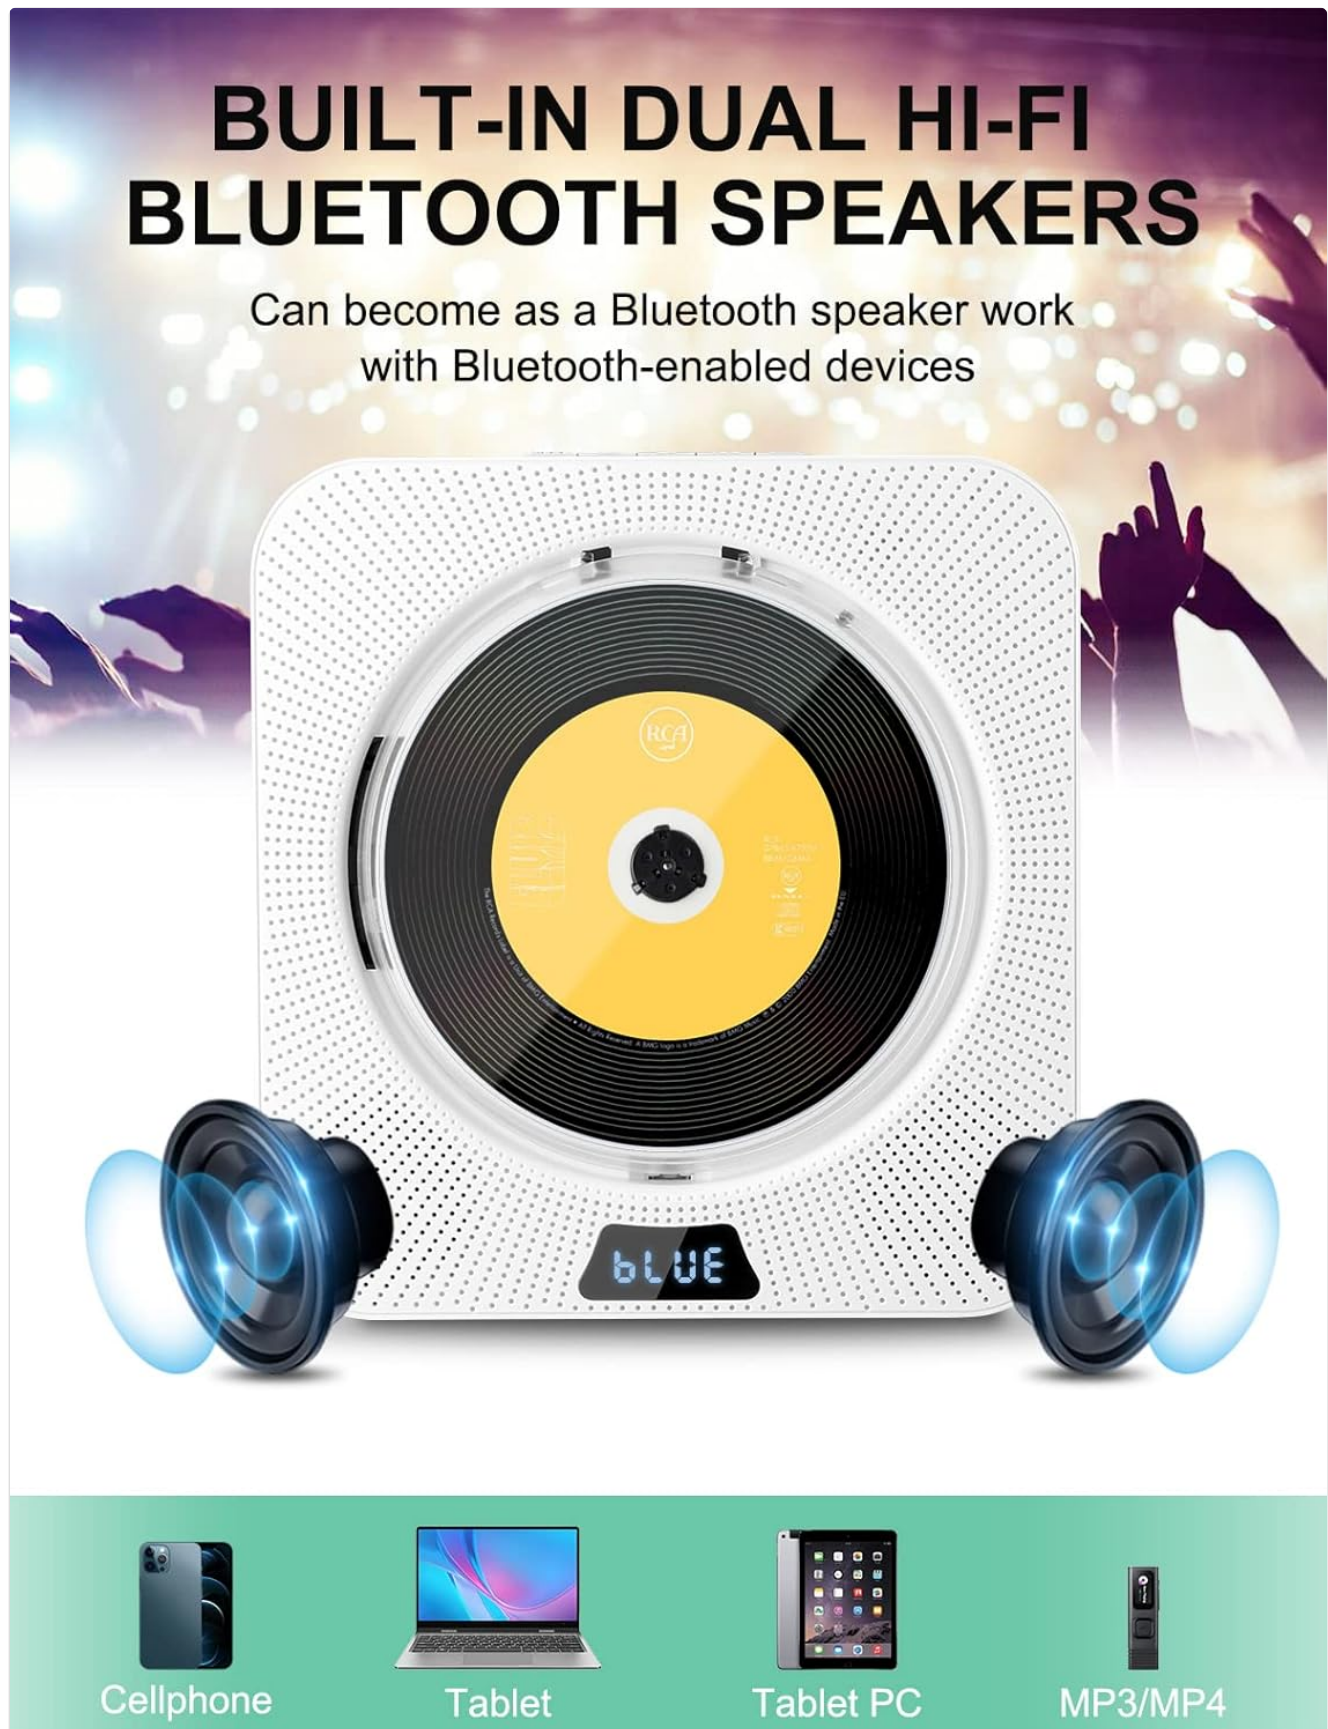


Figure 3: LCD display showing various operating modes.

- **CD Mode:** Displays track number and playback time.
- **Bluetooth Mode:** Shows 'BLUE' when connected or ready to pair.
- **FM Mode:** Displays the current radio frequency.
- **USB/TF Mode:** Indicates 'USB' or 'TF' when playing from respective storage.

SETUP

Follow these steps to set up your ZEXMTE Portable CD Player.

Power Connection

1. Connect the USB adapter to the DC IN port on the CD player.
2. Plug the USB adapter into a standard wall outlet.
3. The player will power on automatically when connected to power. To turn it off, pull the power cable gently. Pulling the cable again will turn it back on.

Mounting Options

The CD player offers two convenient mounting options: wall-mounted or desk stand.

MULTIFUNCTIONAL CD PLAYER

Great for kids learning and it is the best choice for kids, elders, parents and friends



Figure 4: Wall-mounted and desk stand placement options.

Wall Mounting

1. Choose a suitable location on a wall, ensuring it is near a power outlet.
2. Use the provided wall-mounted plate as a template to mark the drilling points.
3. Drill holes and insert the wall anchors.

4. Secure the wall-mounted plate to the wall using the screws.
5. Carefully slide the CD player onto the wall-mounted plate until it clicks into place.

Desk Stand Placement

1. Attach the desk stand to the bottom of the CD player.
2. Place the assembled unit on a flat, stable surface such as a desk, table, or nightstand.

OPERATION

This section details how to use the various functions of your CD player.

Remote Control

The included IR remote control allows for convenient operation from a distance. Ensure batteries are inserted correctly (not included).



Figure 5: CD Player with remote control.

CD Playback

1. Gently open the dust cover.
2. Insert a CD (CD, CD-R, CD-RW, MP3, HDCD formats are supported) into the disc slot with the label side facing outwards.
3. Close the dust cover. The player will automatically switch to CD mode and begin playback.
4. Use the 'Previous' and 'Next' buttons on the player or remote to skip tracks.
5. Use the 'VOL-' and 'VOL+' buttons to adjust the volume.
6. The A-B Repeat function allows you to repeat a specific segment of a track. Press the 'A-B' button at the start point (A) and again at the end point (B) to set the loop. Press 'A-B' a third time to cancel.
7. The player has a memory function and will resume playback from where it stopped when powered on again.

Bluetooth Mode

The player can connect to Bluetooth-enabled devices like smartphones or tablets to function as a Hi-Fi speaker.

BUILT-IN FM RADIO PLAYER

Choose favorite channel and listen to musics, instant news, weather and traffic information



Figure 6: Bluetooth speaker functionality.

1. Press the 'Mode' button on the player or remote until 'BLUE' appears on the LCD display. The player is now in Bluetooth pairing mode.
2. On your Bluetooth device, search for available devices and select 'ZEXMTE CD Player' (or similar name) to pair.
3. Once connected, you can play audio from your device through the CD player's speakers.

4. **Note:** This device is a Bluetooth receiver only and cannot connect to other Bluetooth speakers or headphones.

FM Radio

Tune into your favorite FM radio stations.



Figure 7: FM Radio function.

1. Press the 'Mode' button until the FM frequency appears on the LCD display.
2. Use the 'Previous' and 'Next' buttons to manually tune to desired frequencies.
3. For automatic scanning, press and hold the 'Play/Pause' button (or a dedicated scan button if available on remote) to search for and save available stations.

USB/TF Card Playback

Play audio files directly from a USB flash drive or TF (MicroSD) card.

1. Insert your USB flash drive into the USB port or your TF card into the TF card slot.
2. Press the 'Mode' button until 'USB' or 'TF' appears on the LCD display.
3. The player will automatically detect and begin playing compatible audio files.
4. Use the 'Previous' and 'Next' buttons to navigate through tracks.

AUX Input

Connect external audio devices using the 3.5mm AUX cable.

1. Connect one end of the 3.5mm AUX cable to the AUX port on the CD player.
2. Connect the other end to the audio output jack of your external device (e.g., smartphone, MP3 player).
3. Press the 'Mode' button until 'LINE' or 'AUX' appears on the LCD display.
4. Audio from your external device will now play through the CD player's speakers. Control playback from your external device.

MAINTENANCE

Proper care will ensure the longevity and optimal performance of your CD player.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the player. Do not use abrasive cleaners or solvents.
- **Dust Cover:** Always keep the dust cover closed when not inserting or removing a CD to protect the disc and internal components from dust accumulation.
- **Disc Care:** Handle CDs by their edges. Keep discs clean and free of scratches to ensure smooth playback.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your CD player, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Player does not power on.	No power connection or faulty adapter.	Ensure the power cable is securely plugged into the player and the wall outlet. Try a different outlet.
CD does not play or skips.	Disc is dirty, scratched, or inserted incorrectly. Incompatible disc format.	Clean the disc with a soft cloth. Ensure the disc is inserted label-side out. Try a different, known-good CD. Verify disc format compatibility.

Problem	Possible Cause	Solution
No sound.	Volume is too low or muted. Incorrect mode selected.	Increase the volume using VOL+ button or remote. Ensure the correct mode (CD, Bluetooth, FM, USB, TF, AUX) is selected.
Bluetooth pairing fails.	Player not in Bluetooth mode. Device too far. Interference.	Ensure the player is in Bluetooth mode ('BLUE' on display). Move your device closer to the player. Turn off other Bluetooth devices to reduce interference.
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and player.	Replace remote control batteries. Ensure correct polarity. Remove any obstructions between the remote and the player's IR receiver.

SPECIFICATIONS

Feature	Detail
Model Number	Q200
Dimensions	9.13 x 7.05 x 2.99 inches
Item Weight	1.1 pounds
Connectivity Technology	Bluetooth, Wireless
Color	White
Speaker Type	Stereo
Power Source	Corded Electric
Supported Disc Formats	CD, CD-R, CD-RW, MP3, HDCD
FM Radio Range	87.5 MHz - 108.0 MHz

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, ZEXMTE. Refer to the product packaging or the seller's information for specific contact details and warranty terms.

Manufacturer: ZEXMTE

