

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Twin Over Full Bunk Bed with Stairs Instruction Manual

Bellemave bed-frames

Bellemave Twin Over Full Bunk Bed with Stairs Instruction Manual

Model: bed-frames

1. SAFETY INFORMATION

Please read and understand all instructions before beginning assembly and use of this product. Failure to follow these instructions may result in serious injury.

- **Careful Assembly Required:** This item requires careful assembly. It may arrive in multiple boxes, which might not be delivered simultaneously. Please ensure all packages are received before starting assembly.
- **Weight Capacity:** Do not exceed the maximum weight recommendations. The upper bed has a weight capacity of 250 lbs. The lower bed has a weight capacity of 450 lbs.
- **Mattress Thickness:** For the upper bed, the recommended mattress thickness is 6 inches. For the lower bed, the recommended mattress thickness is 8-10 inches.
- **Sharp Edges:** Be cautious of sharp edges during assembly and ensure all components are securely fastened to prevent injury, especially to children.
- **Adult Supervision:** Adult supervision is required during assembly.
- **Separating Beds:** If separating the bunk bed into two independent beds, exercise caution and ensure proper support and stability for each unit.

2. SETUP AND ASSEMBLY

This bunk bed requires assembly. All necessary tools are included. It is recommended to have at least two people for assembly.

2.1 Unpacking and Preparation

- Open all boxes and identify all parts against the provided parts list.
- Lay out all components on a soft, clean surface to prevent scratches.
- Ensure all hardware is present before beginning. If any parts are missing or damaged, contact customer service immediately.

2.2 Assembly Steps

Follow the detailed graphical instructions provided in your assembly manual. Key steps generally include:

1. Assemble the frame for the lower bed.
2. Assemble the frame for the upper bed.
3. Attach the support beams and slats for both beds.
4. Assemble the storage stairs unit. Note that the stairs can be placed on either side of the bunk bed during assembly to suit your room layout.
5. Securely connect the upper bed, lower bed, and stairs unit according to the diagrams.
6. Install all guardrails for the upper bunk.

Note: This bunk bed can be separated into two independent beds (one twin loft bed and one full-size bed). Refer to your assembly manual for specific instructions on how to configure it in either bunk or separated mode.



Image: The Bellemave Twin Over Full Bunk Bed with Stairs, fully assembled in a room setting. This image shows the overall structure and design of the bed.



Image: The Bellemave bunk bed configured as two separate beds: a twin loft bed and a full-size bed, demonstrating its versatility.

Your browser does not support the video tag.

Video: An official product video demonstrating the Bellemave Twin Over Full Bunk Bed with Stairs in a room setting, highlighting its features and design.

3. OPERATING INSTRUCTIONS

3.1 Using the Bunk Beds

- Ensure mattresses are placed correctly on the slats for both the upper and lower bunks.
- Always use the stairs for accessing the upper bunk. Do not climb on the guardrails or other parts of the bed.
- The upper bunk is designed for a twin-size mattress (42.4"W x 78.7"L) and the lower bunk for a full-size mattress (57.6"W x 78.4"L).

3.2 Utilizing Storage Stairs

The integrated stairs feature storage compartments to help organize your space.

- Each step of the stairs has a flip-top lid revealing a storage compartment.
- These compartments are suitable for storing bedding, books, toys, or other small items.
- Ensure lids are securely closed when not in use to prevent tripping hazards.



Image: A close-up view of the storage stairs, showing the individual compartments with their lids open, illustrating their functionality.

4. MAINTENANCE

Regular maintenance will help prolong the life and safety of your bunk bed.

- **Cleaning:** Wipe down the wooden surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Hardware Check:** Periodically check all bolts, screws, and fasteners to ensure they are tight. Loose hardware can compromise the bed's stability and safety. Retighten as necessary.
- **Slat Inspection:** Inspect the bed slats regularly for any signs of damage or wear. Replace any broken or cracked slats immediately to maintain mattress support.
- **Environmental Conditions:** Avoid placing the bed in direct sunlight or near heat sources, which can cause the wood to dry out or warp. Maintain a stable room temperature and humidity.

5. TROUBLESHOOTING

If you encounter issues with your Bellemave bunk bed, refer to the following common solutions:

- **Wobbling or Instability:** Ensure all bolts and screws are fully tightened. Check that the bed is on a level surface. If the issue persists, disassemble and reassemble, carefully following the instructions.
- **Missing or Damaged Parts:** If you received incorrect or missing parts, do not proceed with assembly. Contact Bellemave customer service immediately with your purchase details and a description of the issue.
- **Difficulty with Assembly:** Review the assembly manual carefully. Sometimes, a small detail or orientation of a part can cause significant issues. If still stuck, consider seeking assistance from another person.
- **Squeaking Noises:** Squeaking can often be resolved by tightening all hardware. If the noise continues, apply a small amount of lubricant (e.g., paraffin wax) to the joints where wood meets wood or where metal fasteners connect.

6. SPECIFICATIONS



Image: A detailed diagram illustrating the dimensions of the Bellemave Twin Over Full Bunk Bed with Stairs in inches.

Feature	Detail
Overall Product Dimensions	97.2"L x 78.4"W x 61.4"H
Upper Bed Dimensions	42.4"W x 78.7"L
Down Bed Dimensions	57.6"W x 78.4"L
Total Height	61.4"
Material	Pine wood + MDF
Number of Slats (Upper/Down)	10 / 10
Upper Bed Weight Capacity	250 lbs
Down Bed Weight Capacity	450 lbs

Feature	Detail
Recommended Upper Mattress Thickness	6 inches
Recommended Down Mattress Thickness	8-10 inches
Overall Product Weight	185 lbs
Color	Gray
Assembly Required	Yes
Included Components	Guardrails, Ladder, Slats

7. WARRANTY AND SUPPORT

For warranty information or customer support, please contact the seller or manufacturer directly. Details regarding specific warranty periods and coverage are typically provided at the point of purchase or can be obtained by contacting customer service.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please reach out to the Bellemave customer service team. They aim to respond within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B09DSNM7WM>

More documents and user manuals: <https://manuals.plus/>