

[manuals.plus](#) /

› [LEXiBOOK](#) /

› [LEXiBOOK Power Puppy Smart Robot Dog DOG01BK Instruction Manual](#)

## LEXiBOOK DOG01BK

# LEXiBOOK Power Puppy Smart Robot Dog DOG01BK Instruction Manual

Model: DOG01BK

## 1. INTRODUCTION

Welcome to the world of the LEXiBOOK Power Puppy, your new interactive robot companion. This manual provides essential information for the safe and effective use of your Power Puppy, including setup, operation, maintenance, and troubleshooting. Please read this manual thoroughly before first use and retain it for future reference.

## 2. SAFETY INFORMATION

- **Recommended Age:** Suitable for children aged 3 years and up.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product is not used for an extended period.
- **Choking Hazard:** Small parts may be present. Not suitable for children under 3 years without adult supervision.
- **Supervision:** Adult supervision is recommended during play.
- **Charging:** Only use the provided USB charging cable for the robot's rechargeable battery. Do not attempt to charge non-rechargeable batteries.

## 3. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x LEXiBOOK Power Puppy Smart Robot Dog
- 1 x Remote Control
- 1 x Rechargeable Battery (for robot)
- 1 x USB Charging Cable



**Image 3.1:** The LEXiBOOK Power Puppy robot dog, its remote control, a green rechargeable battery, and a USB charging cable.

## 4. SETUP

### 4.1. Charging the Robot's Battery

1. Locate the battery compartment on the Power Puppy.
2. Insert the rechargeable battery into the compartment.
3. Connect the USB charging cable to the robot and a suitable USB power source (e.g., computer USB port, USB wall adapter).
4. The robot's indicator light will show charging status (refer to product for specific light behavior).
5. Allow approximately 2 hours for a full charge. Disconnect once fully charged.

### 4.2. Installing Remote Control Batteries

The remote control requires 2 x AA batteries (not included).

1. Open the battery compartment on the back of the remote control.
2. Insert 2 new AA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment securely.



**Image 4.1:** The LEXiBOOK Power Puppy robot dog in black with blue accents, accompanied by its black remote control.

## 5. OPERATING INSTRUCTIONS

### 5.1. Powering On/Off

- To turn on the Power Puppy, locate the power switch (usually on the underside or back) and slide it to the 'ON' position.
- To turn off, slide the switch to the 'OFF' position.

### 5.2. Remote Control Functions

The remote control allows for various commands and interactions. Refer to the diagram below for button layout and functions:



**Image 5.1:** A close-up of the Power Puppy's remote control, highlighting various buttons for different commands and functions.

- **Directional Keys:** Control forward, backward, left, and right movement.
- **Light Effects:** Activates various light patterns on the robot's eyes and collar.
- **Sit Down / Sit Up:** Commands the robot to sit or stand.
- **Songs / Music:** Plays various musical tunes.
- **Hello:** Initiates a greeting action.
- **Numbers:** The robot barks to count numbers.
- **Gesture Control:** Activates the gesture control mode.
- **Program:** Enters programming mode (see 5.4).
- **Handstand:** Commands the robot to perform a handstand.
- **Volume:** Adjusts the sound volume.
- **Angry / Enervated:** Triggers an 'angry' or 'enervated' reaction.
- **Stop:** Halts all current actions.
- **Go Down / Get Up:** Commands the robot to lower or raise its body.
- **Push-ups:** Commands the robot to perform push-up movements.
- **Yoga:** Commands the robot to perform a yoga pose.
- **Animal Sounds & Guard:** Plays animal sounds or activates guard mode.
- **Follow-Me:** Activates the 'Follow-Me' function (see 5.3).
- **Demo:** Initiates a demonstration sequence of various tricks.

### 5.3. Gesture Control and Follow-Me Function

The Power Puppy responds to hand gestures and can follow you.

- **Gesture Control:** Press the 'Gesture Control' button on the remote. The robot will then respond to

specific hand movements (e.g., moving forward when a hand is placed in front of it). Experiment with different gestures to discover its reactions.

- **Follow-Me Function:** Activate this function via the remote. The Power Puppy will attempt to follow your movements, staying close to you.

## 5.4. Programming Function

You can program a sequence of movements and actions for your Power Puppy.

1. Press the 'Program' button on the remote control to enter programming mode.
2. Input your desired sequence of commands using the remote control buttons.
3. Press the 'Program' button again to save and execute the sequence. The robot will then perform the programmed actions.

## 5.5. Interactive Features


- **Tactile Response:** The Power Puppy reacts to caresses on its head, often initiating a dance or other affectionate response.
- **Sound and Light Effects:** The robot features LED lights in its eyes and on its collar, which illuminate during various actions and expressions. It also produces a variety of sounds, including barking, music, and animal imitations.
- **Tricks and Movements:** The Power Puppy can perform numerous tricks such as sitting, lying down, begging, doing push-ups, handstands, and yoga poses.



**Image 5.2:** Four images showing the Power Puppy in different poses: lying down, standing on hind legs, sitting, and doing a handstand.



 **Image 5.3:** A side view of the LEXiBOOK Power Puppy, showcasing its black body with blue robotic details and wheels for feet.



**Video 5.1:** A video demonstrating the various features and interactive capabilities of the LEXiBOOK Power Puppy robot dog, including remote control, gesture control, programming, and different movements.

## 6. MAINTENANCE

- **Cleaning:** Wipe the robot and remote control with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Remove batteries from the remote control if it will not be used for an extended period. Fully charge the robot's rechargeable battery before long-term storage.
- **Storage:** Store the Power Puppy in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

- **Robot Not Responding:**

- Ensure both the robot and remote control are powered on.
- Check if the robot's rechargeable battery is fully charged.
- Replace the batteries in the remote control if they are low or depleted.
- Ensure there are no obstructions between the remote control and the robot.

- **Robot Not Moving Correctly:**

- Verify the robot is on a flat, smooth surface.
- Check for any debris or hair caught in the wheels or joints.


- **Battery Not Holding Charge:**

- Ensure the USB charging cable is properly connected to both the robot and the power source.
- Try a different USB power source.
- If the issue persists, the rechargeable battery may need replacement. Contact customer support.

## 8. SPECIFICATIONS

---

<b>Model Number</b>	DOG01BK
<b>Brand</b>	LEXiBOOK
<b>Product Dimensions</b>	25.7 cm (Length) x 16 cm (Width) x 28 cm (Height)
<b>Item Weight</b>	1.67 pounds (approx. 0.76 kg)
<b>Recommended Age</b>	3 years and up
<b>Robot Battery</b>	1 x Rechargeable Battery (included)
<b>Remote Control Batteries</b>	2 x AA Batteries (not included)
<b>Manufacturer</b>	Lexibook
<b>Release Date</b>	August 26, 2021

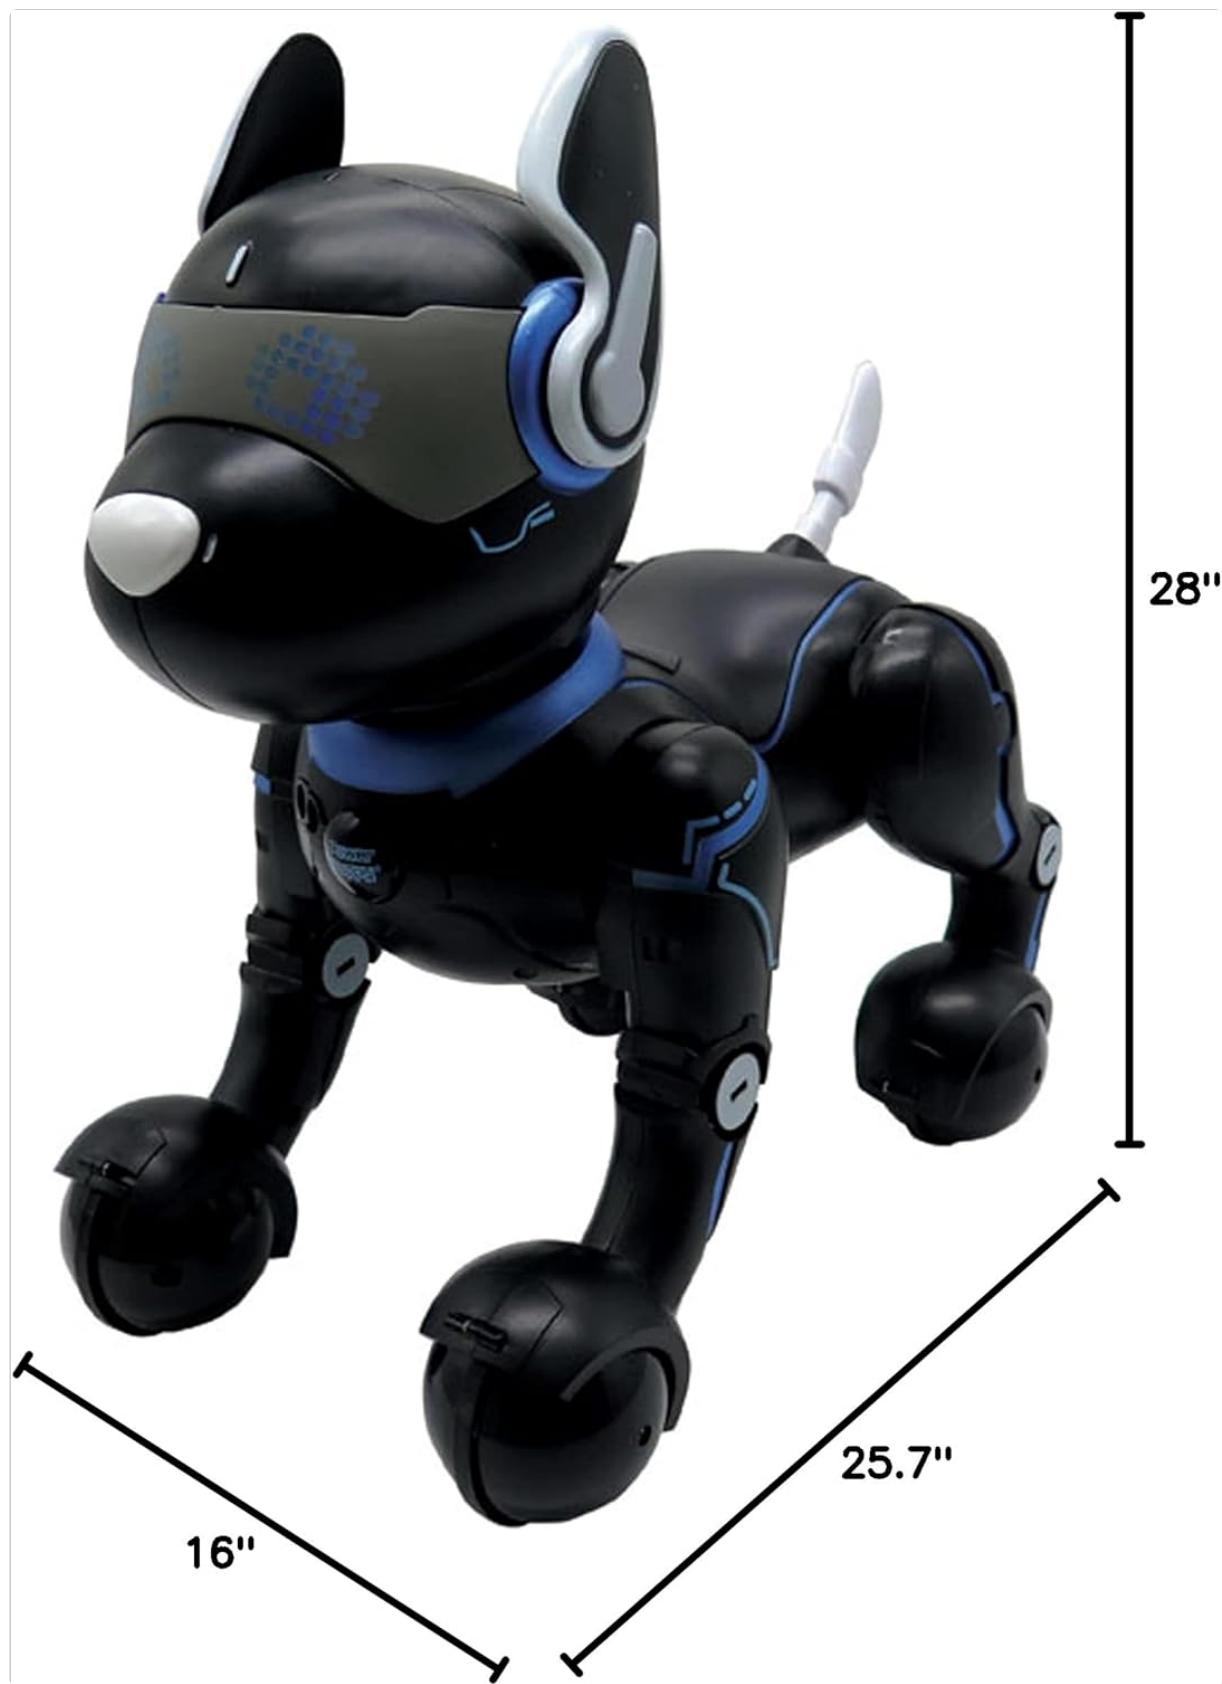

**Image 8.1:** An image illustrating the approximate dimensions of the Power Puppy robot dog: 28cm height, 25.7cm length, and 16cm width.

## 9. WARRANTY



The LEXiBOOK Power Puppy comes with a **2-year guarantee**. This product was designed and developed in Europe and manufactured in China. Please retain your proof of purchase for warranty claims.


## 10. SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official LEXiBOOK website or contact their customer service department. Refer to the product packaging for specific contact details.

- **Online Support:** Visit the LEXiBOOK Store on Amazon
- **Manufacturer:** Lexibook

### Related Documents - DOG01BK

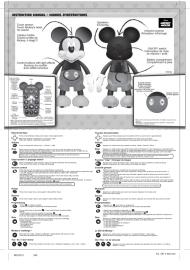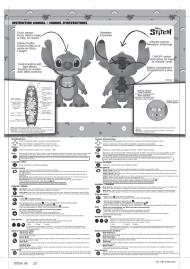	<p><a href="#"><u>Power Puppy Smart Robotic Dog DOG01 User Manual and Instructions</u></a> Comprehensive user manual for the Lexibook Power Puppy Smart Robotic Dog (DOG01), covering safety, setup, functions, training, maintenance, and warranty information.</p>
	<p><a href="#"><u>Lexibook Mickey Mouse Interactive Robot Instruction Manual</u></a> Comprehensive guide to operating the Lexibook Mickey Mouse Interactive Robot (MCH01i1), detailing features, controls, programming, battery installation, maintenance, and safety information.</p>
	<p><a href="#"><u>Powergirl Jr. Smart Robot Instruction Manual   Lexibook</u></a> Comprehensive instruction manual for the Lexibook Powergirl Jr. smart robot. Learn about setup, battery installation, features like programming, music, dance, and interactive games. Includes maintenance and warranty information.</p>
	<p><a href="#"><u>Stitch Interactive Robot Toy - Instruction Manual and Features</u></a> Detailed instruction manual for the Lexibook Stitch interactive robot toy. Learn about its features, controls, programming, interaction modes, battery installation, maintenance, and warranty.</p>
	<p><a href="#"><u>Powerman My First Edutainment Robot Instruction Manual</u></a> Instruction manual for Powerman, an interactive and educational robot. Learn how to operate the robot, its features like dancing, telling jokes, playing music, and shooting foam discs, as well as battery requirements and maintenance.</p>

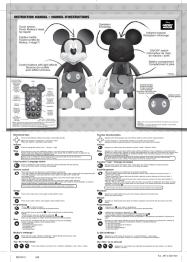

### [Lexibook Mickey Mouse Interactive Toy: Instruction Manual & Features](#)

Detailed instruction manual for the Lexibook Mickey Mouse interactive toy (Model MCH01i1). Learn about its features, remote control functions, programming, games, battery requirements, maintenance, and safety guidelines.