

Bosch BGBS2LB1

Bosch Serie 2 Bagged Canister Vacuum Cleaner Instruction Manual

Model: BGBS2LB1

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Bosch Serie 2 Bagged Canister Vacuum Cleaner, model BGBS2LB1. Please read these instructions carefully before using the appliance and keep them for future reference. This vacuum cleaner is designed for household use to clean hard floors and carpets.

PRODUCT OVERVIEW

The Bosch Serie 2 vacuum cleaner is a compact and lightweight appliance designed for effective home cleaning. It features a powerful motor and a 3.5-liter dust bag capacity for extended use.

Key Features:

- **Compact and Lightweight Design:** Weighing approximately 3 kg, this vacuum cleaner is easy to maneuver, transport, and store.
- **Powerful Bosch Motor:** Equipped with a high-performance motor, manufactured in Germany, ensuring efficient and durable cleaning.
- **Large Dust Bag Capacity:** A 3.5-liter dust bag allows for longer cleaning sessions before needing replacement.
- **Easy Control:** Simple power adjustment for optimal performance on various floor types.
- **Air Clean II System:** Innovative air treatment for improved air quality during operation.
- **Included Accessories:** Comes with a dust bag, crevice nozzle, and upholstery brush.

Components:



Figure 1: Front view of the Bosch Serie 2 Bagged Canister Vacuum Cleaner. This image shows the main unit with the hose connected, ready for use.



Figure 2: Side view of the vacuum cleaner, illustrating the access point for the dust bag compartment. A hand is shown opening the latch.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Attach Hose:** Insert the flexible hose into the suction opening on the main unit until it clicks securely into place.
3. **Assemble Wand and Nozzle:** Connect the telescopic wand to the hose handle. Then, attach the desired floor nozzle (e.g., universal floor nozzle) to the end of the telescopic wand.
4. **Check Dust Bag:** Ensure a dust bag is correctly installed inside the vacuum cleaner. Refer to the "Maintenance" section for dust bag replacement instructions.
5. **Power Connection:** Extend the power cord from the appliance and plug it into a suitable electrical outlet (220 Volts).



Figure 3: The vacuum cleaner in operation, demonstrating its use on a hard floor surface. The user is holding the wand and nozzle.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the On/Off button located on the main unit to start or stop the vacuum cleaner.
2. **Adjust Suction Power:** Use the Easy Control dial or slider (if present) on the main unit to adjust the suction power according to the surface being cleaned. Lower settings are suitable for delicate fabrics or light cleaning, while higher settings are for carpets and heavily soiled areas.
3. **Cleaning Surfaces:**
 - **Hard Floors:** Use the universal floor nozzle with brushes extended (if adjustable) for optimal cleaning without scratching.
 - **Carpets:** Retract the brushes on the universal floor nozzle (if adjustable) for deeper cleaning on carpets.
 - **Upholstery and Curtains:** Attach the upholstery brush for gentle cleaning of fabric surfaces.
 - **Crevices and Corners:** Use the crevice nozzle to reach narrow spaces and edges.
4. **Moving the Appliance:** The vacuum cleaner is equipped with wheels for easy movement across floors. For stairs, use the integrated handle to carry the unit.



Figure 4: Demonstrates the portability of the vacuum cleaner, with a person carrying it by its handle up a flight of stairs.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Dust Bag Replacement:

The vacuum cleaner uses a 3.5-liter dust bag. Replace the dust bag when the dust bag indicator (if present) signals it is full, or when suction power noticeably decreases. Always use genuine Bosch replacement dust bags.

1. Switch off and unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover (refer to Figure 2 for location).
3. Carefully remove the full dust bag, ensuring the opening is sealed to prevent dust leakage.
4. Insert a new dust bag, making sure it is correctly seated in the holder.
5. Close the dust bag compartment cover until it clicks securely.

Filter Maintenance:

The appliance is equipped with a HEPA filter and a motor protection filter. Check these filters regularly and clean or replace them as recommended in the full user manual (not provided here). A clean filter is crucial for maintaining suction power and air quality.

- **Motor Protection Filter:** Typically located near the dust bag compartment. Clean or replace as needed.
- **Exhaust Filter (HEPA):** Located at the rear or side of the appliance. Replace this filter periodically to ensure optimal exhaust air filtration.

General Cleaning:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Periodically check the floor nozzle for tangled hair or debris and remove them to ensure efficient cleaning.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Appliance unplugged; power outlet faulty; thermal cut-out activated.	Check power cord connection; test outlet with another appliance; allow vacuum to cool down for 30 minutes.
Loss of suction	Full dust bag; clogged filter; blocked hose/nozzle.	Replace dust bag; clean/replace filters; remove blockage from hose or nozzle.
Unusual noise	Blockage in fan or motor; foreign object in nozzle/hose.	Switch off and unplug, then check for and remove blockages.

SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	BGBS2LB1
Product Dimensions (L x W x H)	36.7 x 29 x 23.7 cm
Item Weight	3 Kilograms
Capacity	3.5 Liters
Color	Black
Noise Level	80 Decibels
Voltage	220 Volts
Power Source	AC Adapter
Special Features	HEPA, Bagged
Filter Type	Cartridge
Surface Recommendation	All floors
Components Included	Dust bag, crevice nozzle, upholstery brush
Cordless?	No
Country of Origin	Germany

WARRANTY AND SUPPORT

Your Bosch Serie 2 vacuum cleaner comes with a **10-year motor warranty**, reflecting Bosch's commitment to quality and durability. For warranty claims, technical support, or to purchase genuine spare parts and accessories, please contact Bosch customer service or visit the official Bosch website.

[Visit Bosch Service & Support](#)

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding at this time.

