

- Manuals.plus /
- > [ECONTROLLY](#) /
 - > ECONTROLLY NS-RC05A-13 Remote Control User Manual for Insignia DVD Combo TVs

ECONTROLLY RC-NS-RC05A-13-EC

ECONTROLLY NS-RC05A-13 Remote Control User Manual

For Insignia DVD Combo TV Models

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY NS-RC05A-13 remote control. This remote is designed as a replacement for various Insignia DVD Combo TV models, including NS-29LD120A13, NS-32LD120A13, NS-24LD100A13, NS-19ED200NA14, NS-LDVD26Q-10A, NS-LDVD32Q-10A, NS-28ED200NA14, NS-19LD120A13, NS-LTDVD19-09, NS-LTDVD26-09, NS-LTDVD32-09, and NS-LDVD19Q-10A. It requires no programming and operates directly upon battery installation.





Figure 1: Front view of the NS-RC05A-13 remote control, showing all buttons.

2. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Figure 2: Back of the remote control with the battery cover removed, illustrating the battery compartment.





Figure 3: Back of the remote control with the battery cover securely installed.

Once batteries are installed, the remote is ready for use with compatible Insignia DVD Combo TVs without any additional programming.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the remote control buttons.

- **POWER:** Turns the TV/DVD Combo unit on or off.
- **INPUT:** Cycles through available input sources (TV, DVD, HDMI, Video).
- **Number Buttons (0-9):** Used for direct channel selection or entering numerical values.
- **VOL (+/-):** Adjusts the volume level.
- **CH (^ / v):** Changes TV channels up or down.
- **MUTE:** Silences or restores the audio.
- **Navigation Pad (^ / v / </> and OK):** Used to navigate menus and confirm selections.
- **TV-MENU:** Accesses the TV's main menu.
- **EXIT:** Exits current menu or on-screen display.
- **DVD Control Buttons (Play, Pause, Stop, Fast Forward, Rewind, Next, Previous):** Controls DVD playback functions.
- **PICTURE MENU:** Accesses picture settings.
- **AUDIO SETUP:** Accesses audio settings.
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **CH-LIST:** Displays the channel list.
- **SUBTITLE:** Toggles subtitles on/off for compatible content.



Figure 4: Illustrative image of the remote control being used with a television.

4. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's infrared sensor.
- **Specific buttons not working:**
 - This could indicate a faulty button or a low battery. Try replacing the batteries first.
 - Ensure the remote is pointed directly at the TV.

6. SPECIFICATIONS

Model Number	RC-NS-RC05A-13-EC
Compatible Models	Insignia DVD Combo TV models: NS-29LD120A13, NS-32LD120A13, NS-24LD100A13, NS-19ED200NA14, NS-LDVD26Q-10A, NS-LDVD32Q-10A, NS-28ED200NA14, NS-19LD120A13, NS-LTDVD19-09, NS-LTDVD26-09, NS-LTDVD32-09, NS-LDVD19Q-10A
Power Source	2 x AAA Batteries (not included)
Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Color	Black

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY NS-RC05A-13 remote control, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09DSXNQQ7>

More documents and user manuals: <https://manuals.plus/>