

CHUNGHOP eae1b245-00e4-4511-b8fb-d858cc55b6bc

CHUNGHOP Replacement Remote Control Instruction Manual

For Westinghouse 4K Smart Ultra LED HDTV Models

1. INTRODUCTION

This manual provides detailed instructions for the CHUNGHOP replacement remote control, designed for seamless operation with various Westinghouse 4K Smart Ultra LED HDTV models. This remote offers a direct replacement experience without the need for complex programming.

Compatible Models:

- Westinghouse 4K Smart Ultra LED HDTV WD55UDR101
- Westinghouse 4K Smart Ultra LED HDTV WD50FBR105
- Westinghouse 4K Smart Ultra LED HDTV WD50FE2200
- Westinghouse 4K Smart Ultra LED HDTV WG55UR4100
- Westinghouse 4K Smart Ultra LED HDTV WD40FW2610

CHUNGHOP Remote Control

Compatible with Westinghouse 4K Smart Ultra LED HDTV
WD55UDR101, WD50FBR105, WD50FE2200, WG55UR4100,
WD40FW2610, WD70UB4580, WD40FT2108, WE49UL4118,
WE50UR4200, WE50UT4108



The CHUNGHOP replacement remote control, compatible with various Westinghouse 4K Smart Ultra LED HDTV models.

2. SETUP

Battery Installation:

The remote control requires two (2) AAA batteries (not included) for operation. No programming or pairing is needed; the remote works directly out of the box once batteries are installed.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Product Size

24.6cm/9.7inch



5cm/2inch

Front



2.3cm/0.9inch

Side



Back

The remote control requires two AAA batteries, which are not included.

Lightweight and Ergonomic Design



Power Saving



Signal Stabilization



More Durable



Keystroke Sensitivity



Simply install two AAA batteries; no programming is required for this replacement remote.

3. OPERATING INSTRUCTIONS

The CHUNGHOP replacement remote control provides all essential functions for your Westinghouse 4K Smart Ultra LED HDTV, including dedicated hotkeys for popular streaming services.






Overview of the remote control's buttons and layout.

Key Functions:

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV sound.
- **Number Keys (0-9):** Directly select channels.
- **MENU:** Accesses the TV's main menu.
- **SOURCE:** Changes the input source (HDMI, AV, etc.).
- **Navigation (Up/Down/Left/Right) & OK:** Navigates menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel.
- **Playback Controls (Play, Pause, Fast Forward, Rewind, Stop, Next, Previous):** Controls media playback.
- **NETFLIX Hotkey:** Direct access to the Netflix application.
- **Toon Goggles Hotkey:** Direct access to the Toon Goggles application.

Support One-Key Access Function

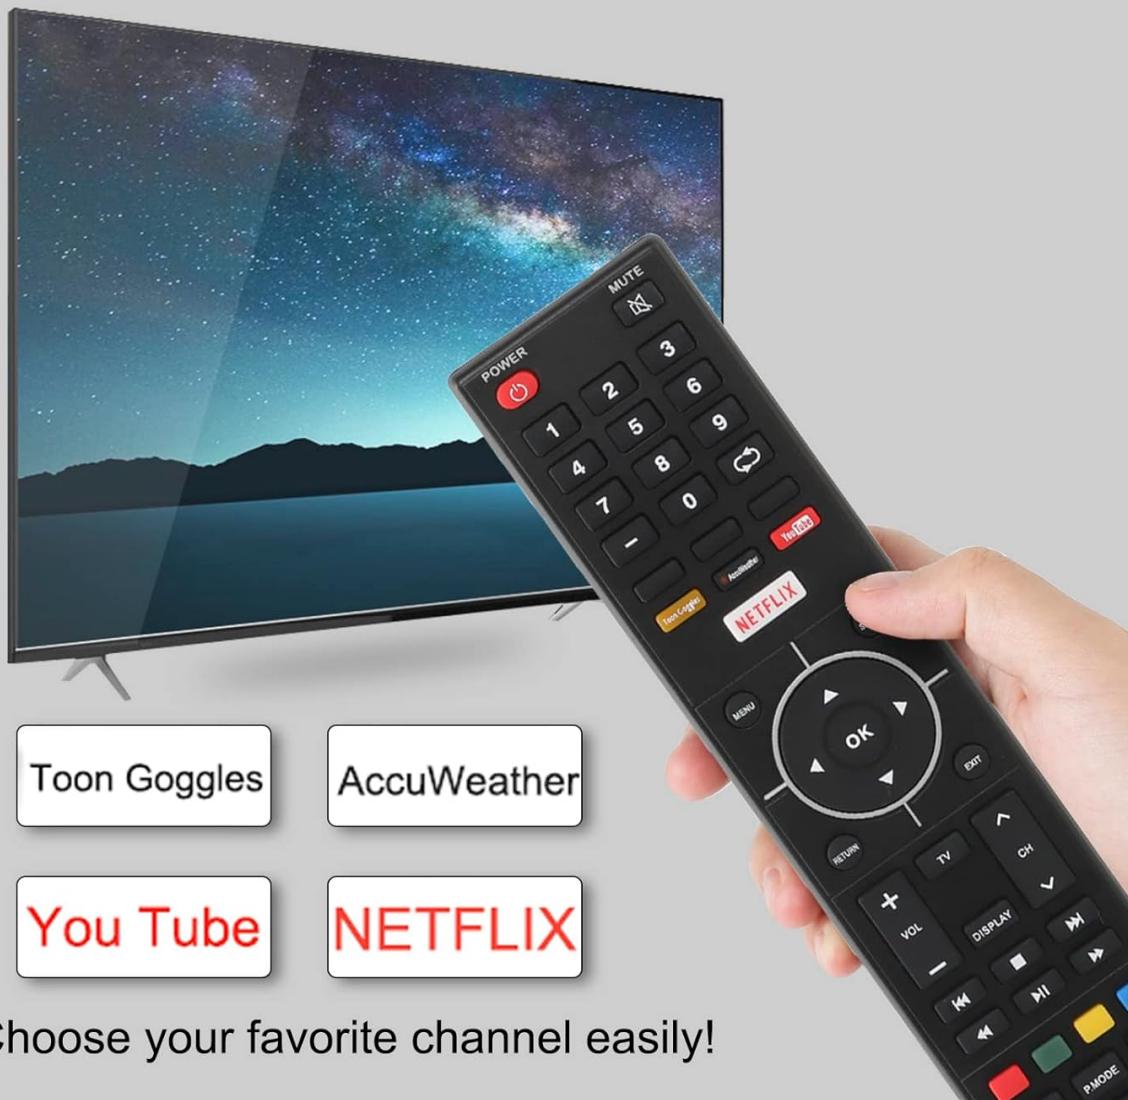

Toon Goggles

AccuWeather

YouTube

NETFLIX

Choose your favorite channel easily!

Quick access to your favorite streaming services with dedicated hotkeys.

Operating Range:

The remote control utilizes infrared (IR) technology and provides stable signal transmission. It can effectively control your TV from a distance of up to 30 feet (approximately 9 meters) with a response time of 0.2 seconds.

LONG-DISTANCE CONTROL

Stable infrared signal, control distance is up to **30FT**



Enjoy reliable control from up to 30 feet away with quick response.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes slow or inconsistent. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.

5. TROUBLESHOOTING

- **Remote is not responding:**

- Ensure batteries are inserted correctly with proper polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's IR receiver.
- Ensure the TV is powered on.

• **Some buttons are not working or respond slowly:**

- This remote is a replacement and may not support all functions of your original TV remote if your TV model is not explicitly listed as compatible.
- Ensure the remote is pointed directly at the TV's IR sensor.
- Clean the remote's buttons and surface to remove any residue that might impede button presses.
- If specific app buttons (e.g., YouTube) do not work, ensure your TV's firmware is updated and the apps are installed and functioning correctly on the TV itself.

6. SPECIFICATIONS

Feature	Detail
Brand	CHUNGHOP
Compatible Devices	Television (Westinghouse 4K Smart Ultra LED HDTV)
Connectivity Technology	Infrared
Batteries Required	2 x AAA (not included)
Item Weight	4.6 ounces
Package Dimensions	9.69 x 2.09 x 0.94 inches
Model Number	eae1b245-00e4-4511-b8fb-d858cc55b6bc



Easy to use Upgraded smart chip

NO programming or pairing needed,
work right out of the box.

Physical dimensions of the remote control.

7. SUPPORT & WARRANTY

For any questions regarding the CHUNGHOP replacement remote control, whether before purchase or during use, please contact our customer support. We aim to respond to all inquiries within 24 hours. Please refer to your purchase documentation for specific warranty details.