

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [eKids](#) /
- > [eKids Disney Princess Bluetooth Karaoke Microphone User Manual](#)

eKids 749874317721

# eKids Disney Princess Bluetooth Karaoke Microphone User Manual

Model: 749874317721

## INTRODUCTION

Welcome to the eKids Disney Princess Bluetooth Karaoke Microphone user manual. This guide provides essential information for setting up, operating, and maintaining your new karaoke microphone. Enjoy singing along to your favorite tunes with wireless connectivity and a vibrant LED light show.





Image: The eKids Disney Princess Bluetooth Karaoke Microphone, showcasing its pink design with Disney Princess graphics and control panel.

## PACKAGE CONTENTS

---

- eKids Disney Princess Bluetooth Karaoke Microphone
- USB Charging Cable
- User Manual (this document)

## SETUP

---

### 1. Charging the Microphone

Before first use, fully charge the microphone.

1. Locate the USB charging port on the side of the microphone.
2. Connect the provided USB charging cable to the microphone's charging port.
3. Connect the other end of the USB cable to a powered USB port (e.g., computer, USB wall adapter).
4. The charging indicator light will show the charging status. Allow sufficient time for a full charge.



Image: Detailed view of the microphone's control panel and the USB charging port located on the side.

## 2. Powering On/Off

- To turn on the microphone, slide the ON/OFF/DEMO switch to the "ON" position.
- To turn off the microphone, slide the ON/OFF/DEMO switch to the "OFF" position.

## 3. Bluetooth Pairing

The microphone can wirelessly stream audio from any compatible Bluetooth device.

1. Ensure the microphone is powered on.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), go to the Bluetooth settings.
3. Search for available devices and select "eKids Princess Mic" (or similar) to pair.
4. A confirmation sound will indicate successful pairing.



Image: The microphone highlighting its Bluetooth capability and compatibility with various devices.

#### 4. EZ Link Technology (App Required)

The EZ Link feature allows quick access to Disney playlists on your preferred streaming service.

1. Download the free EZ Link Setup App from the Apple App Store (for iOS 12+ devices) or Google Play Store (for Android 4.4 and up devices).
2. Install the app on your Bluetooth-enabled device.
3. Pair your microphone with your device via Bluetooth first.
4. Open the EZ Link app and follow the on-screen instructions to activate the feature and select your preferred music streaming service.
5. Once activated, a single press of the EZ Link button on the microphone will launch a custom Disney playlist on your selected service. Long-pressing the EZ Link button will launch the Disney Hits playlist.



The advertisement features a pink and white EZ Link microphone with a crown on top and a hand pressing a button. The background is a soft, bokeh-style yellow and white. Text and logos include the Disney Princess logo, the EZ Link logo, a smartphone displaying the Disney Hits app, the text 'Press The EZ Link Button to connect to Disney HITS THE HAPPIEST MUSIC PLAYLIST ON EARTH!', 'Works with all major music streaming partners', a QR code, and the eKids logo.

Disney Princess

**EZ Link**™

Press The **EZ Link Button** to connect to **Disney HITS** THE HAPPIEST MUSIC PLAYLIST ON EARTH!

Works with all major music streaming partners

Download free EZ Link Setup App for Quick & Easy Setup!

Scan for more info!

Requires: Apple iOS 12+ or Android 4.4 and up

eKids

Image: The microphone demonstrating the EZ Link feature, showing how to connect to Disney Hits playlists via the app.

For more information, visit [ekids.com/ezlink-dp-b24](http://ekids.com/ezlink-dp-b24).

Your browser does not support the video tag.

Video: Instructions on how to use the EZ Link feature to access Disney music playlists.

## OPERATING INSTRUCTIONS

### Microphone Controls

The microphone features an intuitive control panel for easy operation.

- **Light Show Button:** Press for light show. Press and hold for Bluetooth pairing.
- **Sound Effects Button:** Activates various sound effects.
- **Mic Volume +/-:** Press to adjust microphone volume. Press and hold for previous/next track.
- **Play/Pause Button:** Controls music playback.
- **Echo Effect Button:** Toggles the echo effect for your voice.



Image: Detailed view of the microphone's control panel, indicating the function of each button.

## Singing with Music

Once your device is paired via Bluetooth and music is playing, you can sing along.

- Ensure the ON/OFF/DEMO switch is set to "MIC" for microphone amplification.
- Adjust the microphone volume using the dedicated buttons.
- Activate the echo effect for a karaoke experience.
- The colorful LED light show will flash along to your music, enhancing the experience.



Image: A child enjoying the eKids Disney Princess Bluetooth Karaoke Microphone, demonstrating its use during singing.

## MAINTENANCE

## Cleaning

- Wipe the microphone with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.

## Battery Care

- The microphone contains a built-in rechargeable Lithium Ion battery.
- Recharge the battery when the power is low to ensure optimal performance.
- Avoid exposing the microphone to extreme temperatures.

## TROUBLESHOOTING

Problem	Solution
Microphone does not turn on.	Ensure the battery is charged. Connect the USB charging cable and allow it to charge.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"><li>• Ensure the microphone is in Bluetooth pairing mode (press and hold the Light Show button).</li><li>• Make sure Bluetooth is enabled on your device.</li><li>• Move the microphone closer to your device.</li><li>• Restart both the microphone and your Bluetooth device.</li></ul>
No sound from the microphone.	<ul style="list-style-type: none"><li>• Check the microphone volume level.</li><li>• Ensure the ON/OFF/DEMO switch is set to "MIC".</li><li>• Verify that music is playing from your connected Bluetooth device.</li></ul>
EZ Link feature not working.	<ul style="list-style-type: none"><li>• Ensure the EZ Link Setup App is installed and running on your device.</li><li>• Confirm that the microphone is successfully paired via Bluetooth.</li><li>• Verify that you have an active account with a supported music streaming service.</li><li>• Check your device's internet connection.</li></ul>

## SPECIFICATIONS

- **Model Number:** 749874317721
- **Item Weight:** 9.6 ounces
- **Product Dimensions:** 2.02 x 2.12 x 9.43 inches
- **Battery:** 1 Lithium Ion battery (included, rechargeable)
- **Compatible Devices:** Personal Computer, Radio, Smartphone, Tablet
- **Connector Type:** USB
- **Speaker Count:** 1
- **Hardware Platform:** Karaoke Machine

- **Special Features:** Portable, Rechargeable, Wireless
- **Color:** Multicolor (Pink with Disney Princess graphics)

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official eKids website.

- **eKids Store:** [Visit the eKids Store on Amazon](#)
- **EZ Link Support:** [ekids.com/ezlink-dp-b24](http://ekids.com/ezlink-dp-b24)