

[Manuals.plus](#) /

› [PHILCO](#) /

› Philco PCT40P 4-Burner Induction Cooktop 220V User Manual

PHILCO PCT40P

Philco PCT40P 4-Burner Induction Cooktop 220V User Manual

Model: PCT40P | Brand: PHILCO

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Philco PCT40P 4-Burner Induction Cooktop. Please read these instructions carefully before using the appliance and retain them for future reference.

The Philco PCT40P Induction Cooktop utilizes induction heating, which generates heat directly within the cookware through an electromagnetic field. This method ensures efficient and safe cooking. It features 9 power and temperature levels for versatile cooking control. The cooktop also includes a Turbo function, which temporarily increases power beyond level 9 for rapid heating. Operation is managed via a touch panel.

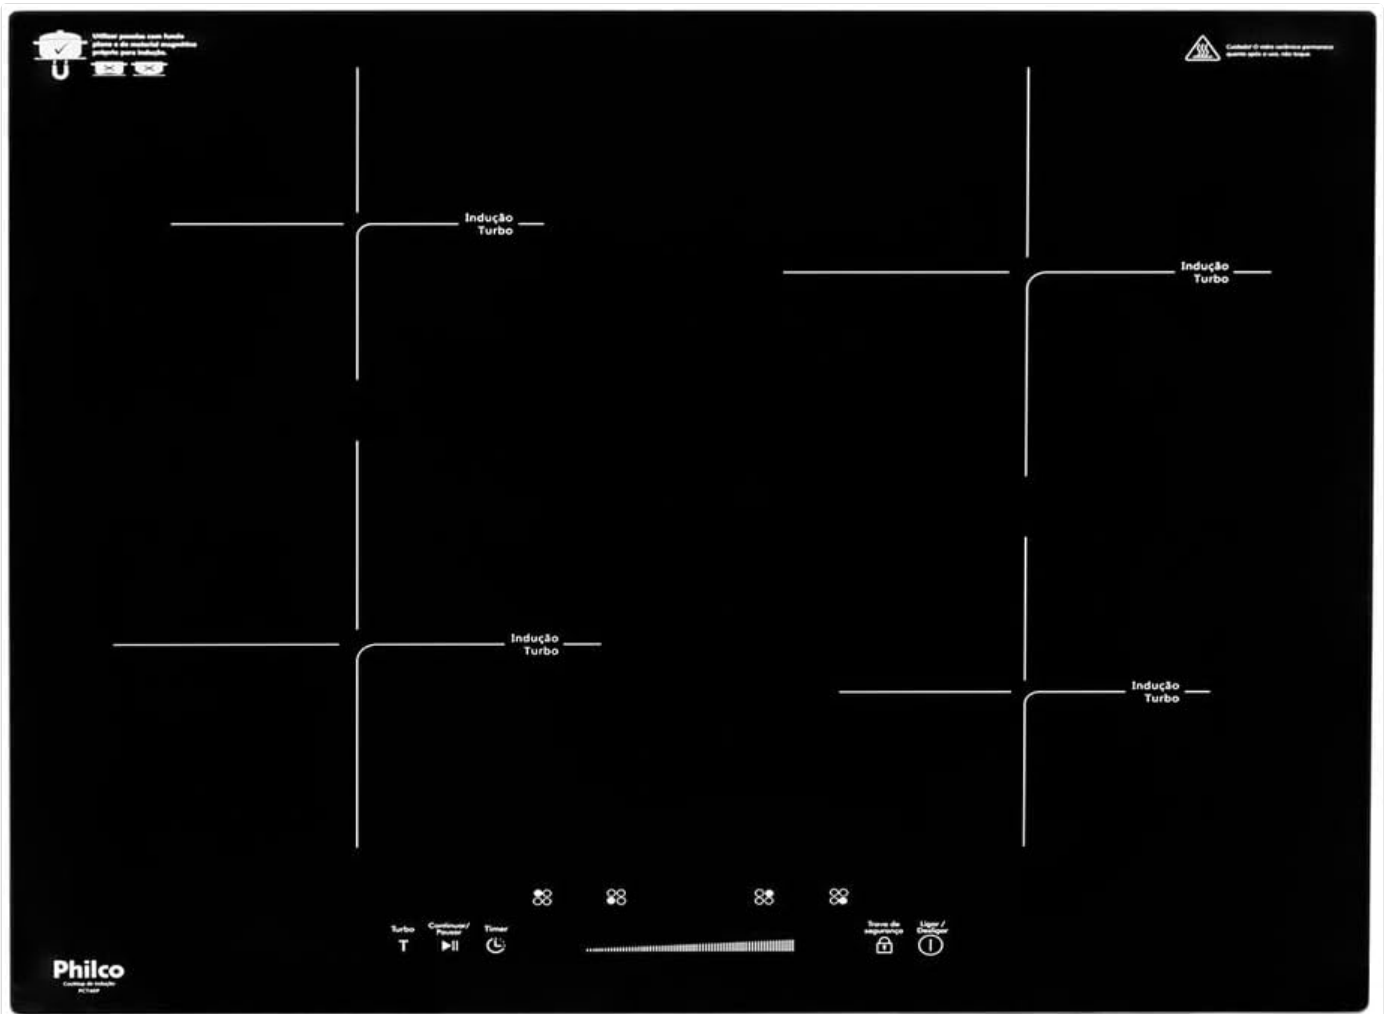


Image 1.1: Top view of the Philco PCT40P Induction Cooktop, highlighting the four cooking zones and the integrated touch control panel.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in electric shock, fire, or personal injury.

- Read all instructions before using the appliance.
- This appliance must be installed by a qualified technician in accordance with local regulations.
- Ensure the electrical supply matches the voltage specified on the appliance (220V).
- Do not touch hot surfaces. Use handles or knobs.
- Never leave the cooktop unattended during operation.
- Do not use abrasive cleaners or sharp metal scrapers to clean the cooktop surface, as they can scratch the surface.
- Keep children away from the appliance during operation and cooling.
- Do not store flammable materials on or near the cooktop.
- Only use induction-compatible cookware.
- Individuals with pacemakers or similar medical implants should consult their doctor before using an induction cooktop due to the electromagnetic field.



Image 2.1: Safety certification marks (INMETRO and SGS) for the Philco PCT40P cooktop.

3. PRODUCT FEATURES

The Philco PCT40P Induction Cooktop is designed with advanced features for a superior cooking experience:

- **Ceramic Glass Surface:** Durable and easy-to-clean cooking surface.
- **Induction Heating System:** Efficiently heats cookware directly, reducing energy waste.
- **4 Burners:** Four independent cooking zones for multi-tasking.
- **Variable Burner Sizes:** Includes two burner sizes (12 cm and 21 cm diameter) to accommodate various pot and pan sizes.
- **9 Power Levels:** Precise control over cooking temperature from low simmer to high heat.
- **Touch Panel Controls:** Modern and intuitive touch-sensitive interface for easy operation.
- **Digital Display:** Clear display of power levels, timer settings, and other indicators.
- **99-Minute Timer:** Programmable timer for each cooking zone, with automatic shut-off.
- **Turbo Function:** Provides a temporary boost in power for rapid boiling or searing.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and optimal performance of your cooktop. It is highly recommended that installation be performed by a qualified electrician or technician.

4.1 Unpacking

Carefully remove the cooktop from its packaging. Inspect for any damage during transit. Keep all packaging materials until you are satisfied with the product.

Included components:

- Philco PCT40P Induction Cooktop
- 4 Installation Clips
- Cleaning Accessory
- Warranty Certificate
- Instruction Manual (this document)

4.2 Electrical Requirements

- **Voltage:** 220 Volts
- **Power:** 7000 Watts
- **Circuit Breaker:** A dedicated 40A circuit breaker is required.
- **Wiring:** Use appropriate wiring (e.g., 6mm² wire) for the electrical connection.
- Ensure proper grounding.

4.3 Countertop Cutout Dimensions

The cooktop is designed for built-in installation. Ensure your countertop cutout meets the following dimensions:

- **Product Dimensions:** Approximately 65 cm (Width) x 58 cm (Depth) x 12 cm (Height)
- Refer to the detailed installation diagram in the separate installation guide for precise cutout measurements and ventilation requirements.



Image 4.1: Underside of the cooktop, illustrating cooling fans and connection points for installation.

5. OPERATING INSTRUCTIONS

The Philco PCT40P Induction Cooktop features intuitive touch controls. Familiarize yourself with the control panel before use.



Image 5.1: Cooktop in a kitchen setting, ready for operation.

5.1 Control Panel Overview

The touch panel includes controls for power, individual burner selection, power level adjustment, timer, and child lock. Specific icons are typically printed on the glass surface.

- **Power Button:** Turns the cooktop on or off.
- **Burner Selection:** Selects which cooking zone to adjust.
- **Power Level Slider/Buttons:** Adjusts the heat intensity from 1 (low) to 9 (high).
- **Timer Button:** Activates and sets the cooking timer.
- **Child Lock Button:** Locks the control panel to prevent accidental operation.
- **Turbo Button (T):** Activates the Turbo function for selected burner.

5.2 Basic Operation

1. **Power On:** Touch and hold the Power button for a few seconds. The display will light up.
2. **Place Cookware:** Place an induction-compatible pot or pan on the desired cooking zone.
3. **Select Burner:** Touch the corresponding burner selection icon.
4. **Adjust Power:** Use the power level slider or +/- buttons to set the desired heat level (1-9).
5. **Power Off:** After cooking, reduce the power level to 0 or touch the Power button to turn off the cooktop. The residual heat indicator (H) may remain lit until the surface cools.

5.3 Turbo Function

To activate the Turbo function for rapid heating:

1. Select the desired cooking zone.
2. Touch the "T" (Turbo) button. The burner will operate at maximum power for a set period or until manually deactivated.
3. The Turbo function is ideal for boiling water quickly.

5.4 Timer Function

The timer can be set for individual cooking zones:

1. Select the desired cooking zone.
2. Touch the Timer button.
3. Use the +/- buttons or slider to set the desired cooking time (up to 99 minutes).
4. Once the time expires, the burner will automatically turn off, and an audible signal may sound.

5.5 Child Lock

The child lock prevents accidental operation of the cooktop:

- **To Activate:** With the cooktop off or on, touch and hold the Child Lock icon (often represented by a padlock) for approximately 3 seconds. An indicator light will confirm activation.
- **To Deactivate:** Touch and hold the Child Lock icon again for approximately 3 seconds. The indicator light will turn off.

6. COMPATIBLE COOKWARE

Induction cooktops require cookware with a ferromagnetic base. To check if your cookware is compatible, hold a magnet to the bottom of the pot or pan. If the magnet sticks, the cookware is suitable for induction.

Examples of compatible cookware materials:

- Cast iron
- Enameled iron
- Steel
- Stainless steel (if magnetic)

Examples of incompatible cookware materials:

- Aluminum
- Copper
- Glass
- Ceramic

Ensure the base of the cookware is flat and covers at least 70% of the cooking zone for optimal performance.

7. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will extend the life of your Philco PCT40P Induction Cooktop.

7.1 Daily Cleaning

1. Ensure the cooktop is cool before cleaning.
2. Wipe the ceramic glass surface with a soft, damp cloth and mild detergent.

3. Dry thoroughly with a clean cloth to prevent water spots.

7.2 Removing Stubborn Stains

- For burnt-on food or stubborn stains, use a specialized ceramic cooktop cleaner and the included cleaning accessory.
- Apply the cleaner as directed by the product manufacturer and gently scrape off residue with a plastic scraper (if provided or recommended).
- Avoid using abrasive pads, steel wool, or harsh chemicals, as these can damage the glass surface.

7.3 General Maintenance

- Regularly check the ventilation openings underneath the cooktop to ensure they are not obstructed.
- Avoid dropping heavy objects on the glass surface, as this can cause cracks.

8. TROUBLESHOOTING

If you encounter issues with your Philco PCT40P Induction Cooktop, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child lock activated; Power button not held long enough.	Check circuit breaker. Deactivate child lock (hold padlock icon for 3 seconds). Hold power button for 3 seconds.
"E" error code or cooktop beeps.	Incompatible cookware; No cookware on burner; Overheating.	Use induction-compatible cookware. Place cookware on the burner. Allow cooktop to cool down.
Cooking zone not heating.	Cookware not centered; Cookware too small/large; Burner not selected.	Center cookware. Ensure cookware size is appropriate for the zone. Select the correct burner.
Cooktop makes a humming or buzzing noise.	Normal operation sound of induction technology; Cookware material.	This is normal. Some cookware types may produce more noticeable sounds.
Buttons unresponsive.	Child lock activated; Wet control panel.	Deactivate child lock. Wipe the control panel dry.

If the problem persists after attempting these solutions, please contact qualified service personnel.

9. SPECIFICATIONS

Feature	Detail
Brand	PHILCO
Model Number	PCT40P (55902007)
Installation Type	Built-in

Feature	Detail
Heating Elements	4 Induction Burners
Burner Sizes	12 cm and 21 cm
Power Levels	9
Voltage	220 Volts
Power in Watts	7000 Watts
Material Type	Metal, Ceramic Glass
Color	Black
Product Dimensions (W x D x H)	65 cm x 58 cm x 12 cm
Weight	8.5 Kilograms
Special Features	Touch Panel, Digital Display, 99-minute Timer, Turbo Function
Certification	BRA20/00250 (INMETRO, SGS OCP 0040)

10. WARRANTY AND SUPPORT

Your Philco PCT40P Induction Cooktop comes with a Warranty Certificate. Please refer to this document for detailed information regarding warranty coverage, terms, and conditions.

For technical assistance, service, or to inquire about replacement parts, please contact Philco customer support through their official channels. Keep your purchase receipt and warranty certificate handy when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question