

[manuals.plus](#) /

› [Highttoy](#) /

› [Highttoy Electronic Piggy Bank ATM Safe with Code for Children, Silver - User Manual](#)

Highttoy Money bank_5 extra Sheet

Highttoy Electronic Piggy Bank ATM Safe with Code for Children

Model: Money bank_5 extra Sheet

Brand: Highttoy

1. INTRODUCTION

This user manual provides detailed instructions for the setup, operation, and maintenance of your Highttoy Electronic Piggy Bank ATM Safe. Designed for children, this safe encourages saving habits with its secure code access and automatic bill feeder. Please read this manual carefully before use to ensure proper functionality and longevity of the product.

Develop Good Saving Habits



Image 1.1: A child and an adult engaging with the Highttoy Electronic Piggy Bank, illustrating its role in developing saving habits with coins and stacks of money.

2. PRODUCT OVERVIEW AND PARTS IDENTIFICATION

Familiarize yourself with the components of your electronic piggy bank:



Image 2.1: A detailed diagram of the electronic piggy bank, highlighting key features such as the coin slot, bill entrance, indicator lights, password keypad, door knob, and sound output. Dimensions are also shown.

- **Coin Entrance:** Slot on top for depositing coins.
- **Cash Entrance:** Slot on the front for automatic feeding of banknotes.
- **Indicator Light:** Displays status (e.g., green for open, red for password entry).
- **Password Button:** Numeric keypad for entering the security code.
- **Open the Door Knob:** Used to manually open the safe door after entering the correct password.
- **Sound:** Integrated speaker for audio feedback and voice prompts.
- **ABS Material:** The product is constructed from durable, environmentally friendly ABS plastic.

3. SETUP

3.1 Battery Installation

The Highttoy Electronic Piggy Bank requires 3 'AA' batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the safe.
2. Use a screwdriver to open the battery compartment cover.
3. Insert 3 'AA' batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image 3.1: Visual guide for battery installation and initial operation steps, including depositing money and opening the safe.

4. OPERATING INSTRUCTIONS

4.1 Depositing Money

- **For Coins:** Insert coins into the coin entrance slot located on the top of the safe.
- **For Banknotes:** Place banknotes into the cash entrance slot on the front. The safe will automatically draw the bill inside.



Image 4.1: A hand demonstrating how to insert a banknote into the automatic cash feeder of the electronic piggy bank.

4.2 Opening the Safe (Default Password)

The default password for the safe is **0000**.

1. Enter the four-digit password (0000) using the keypad.
2. The green indicator light will illuminate.
3. Within 10 seconds, turn the door knob clockwise to open the safe door.

4.3 Changing the Password

You can personalize your safe by changing the password:



Image 4.2: A step-by-step visual instruction on how to successfully change the security password for the electronic safe.

1. Enter the current four-digit password (default is 0000). The green light will illuminate. Turn the knob clockwise to open the door.
2. With the door open, press and hold the '*' button. The red light will flash. Keep holding the '*' button to prevent the door from closing.
3. While holding '*', enter your new 4-digit password within 15 seconds.
4. Press the '#' button to confirm the new password. The red light will stop flashing.
5. Release the '*' button. The password has been successfully changed. Close the safe door.

4.4 Sound Mode Options

The safe offers two sound modes:



Image 4.3: An illustration of the sound mode switch located inside the safe, detailing the 'Beep Sound' and 'Voice' options.

- **BEEP SOUND Mode:** Each button press is accompanied by a 'beep' sound.
- **VOICE Mode:** Each digit entered is followed by a voice prompt, such as 'password please', guiding the user to enter the next digit.

To switch between modes, open the safe door and locate the switch inside the door panel.

5. MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or immerse the product in water.

- Battery Replacement:** Replace batteries when the sound becomes faint or the lights dim. Always use new 'AA' batteries and dispose of old batteries responsibly.
- Storage:** Store the safe in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open.	Incorrect password entered. Batteries are low or dead.	Ensure the correct 4-digit password is entered. Replace batteries if necessary.
Banknotes are not drawn in automatically.	Banknote is folded or inserted incorrectly. Batteries are low.	Ensure banknotes are flat and inserted straight. Replace batteries.
No sound or faint sound.	Batteries are low or dead. Sound mode is off (if applicable).	Replace batteries. Check the sound mode switch inside the safe door.
Forgot password.	Password forgotten.	If the password is forgotten, the only way to reset it is to remove the batteries for a few minutes, which will revert the password to the default '0000'.

7. SPECIFICATIONS

- Model Number:** Money bank_5 extra Sheet
- Brand:** Highttoy
- Material:** Environmental ABS Plastic
- Power Source:** 3 x 'AA' Batteries (not included)
- Weight:** 650 grams
- Storage Capacity:** Approximately 600 coins or 100 banknotes

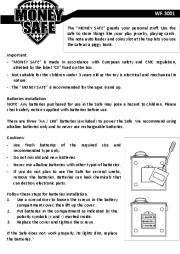
8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Highttoy customer service directly. Keep your purchase receipt as proof of purchase.

© 2025 Highttoy. All rights reserved.

Related Documents - Money bank_5 extra Sheet

	Electronic Piggy Bank with Password - Instruction Manual Comprehensive instruction manual for the electronic piggy bank, detailing setup, operation, and troubleshooting. Learn how to set a password, deposit money, and manage settings for this secure and fun savings tool.
---	--

	<p>Highttoy Musical Dinosaur Toy User Manual Instructions & Features</p> <p>User manual for the Highttoy Musical Dinosaur Toy. This guide provides instructions on features like detachable tail, universal wheel, power switch, and LED lights. Learn how to install batteries and operate the interactive musical dinosaur for children aged 1-4 years.</p>
	<p>Highttoy Memory Game Montessori Instruction Guide for Children</p> <p>This guide explains how to play the Highttoy Memory Game, a Montessori-inspired interactive board game for children aged 3-5. Learn to use the game board, pieces, cards, and hourglass for memory and pattern matching fun.</p>
	<p>Electronic Piggy Bank with Password - Instruction Manual</p> <p>Comprehensive instruction manual for the electronic piggy bank, detailing setup, operation, and troubleshooting. Learn how to set a password, deposit money, and manage settings for this secure and fun savings tool.</p>
	<p>ATM Safe Box & Piggy Bank Instructions: Features, Operation, and Safety</p> <p>Comprehensive guide to kelaton ATM Safe Boxes and Piggy Banks (Models 6909, 6913, 6708). Learn about features like fingerprint unlock, password protection, automatic money rolling, coin storage, and music playback. Includes operating instructions and safety warnings for children.</p>
	<p>Money Safe WF-3001 User Manual: Operation, Setup, and Security Guide</p> <p>Detailed instructions for the Money Safe WF-3001 electronic safe. Learn how to install batteries, set codes, use the auto note feeder, and understand safety precautions for this secure piggy bank.</p>