

[manuals.plus](#) /› [Logitech](#) /› [Logitech POP Mouse \(910-006545\) Wireless Mouse Instruction Manual](#)

Logitech POP Mouse (910-006545)

Logitech POP Mouse (910-006545) Wireless Mouse Instruction Manual

Model: 910-006545 | Brand: Logitech

INTRODUCTION

The Logitech POP Mouse is a compact, wireless mouse designed for enhanced productivity and personal expression. Featuring SilentTouch Technology for quiet clicks, a customizable top button for emojis or shortcuts, and a SmartWheel that shifts between precision and speed scrolling, it offers a versatile user experience. This mouse supports multi-device connectivity via Bluetooth, allowing seamless switching between up to three devices. It is built with durability in mind, offering up to 24 months of battery life and auto-sleep power-saving features.

WHAT'S IN THE BOX

- Logitech POP Mouse
- 1 x AA Battery (pre-installed)



MULTI-DEVICE FLOW PAIR UP TO 3 DEVICES

Image: The Logitech POP Mouse and an included AA battery, as typically found in the product packaging.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Gently slide the top cover of the mouse backward to remove it.
3. Insert the included AA battery, ensuring correct polarity (+/-).
4. Replace the top cover by aligning it and sliding it forward until it clicks into place.

2. Power On

- Flip the mouse over. Locate the On/Off switch on the bottom of the mouse.
- Slide the switch to the 'On' position (usually indicated by green color).

3. Device Pairing (Bluetooth)

1. On the bottom of the mouse, press and hold the Easy-Switch button (labeled with 1, 2, or 3) for 3 seconds until the LED light starts blinking rapidly. This indicates pairing mode.
2. On your computer, tablet, or phone, open your Bluetooth settings.

3. Select "Logitech POP Mouse" from the list of available devices.
4. Follow any on-screen prompts to complete the pairing process. The LED light on the mouse will turn solid for 5 seconds when connected.

4. Multi-Device Switching

- The POP Mouse can be paired with up to three devices. To switch between paired devices, simply press the Easy-Switch button on the bottom of the mouse. The corresponding LED (1, 2, or 3) will light up to indicate the active device.



Image: The Logitech POP Mouse can seamlessly connect and switch between up to three different devices, such as a tablet, desktop computer, and laptop.

OPERATING THE MOUSE

1. Basic Functions

- Left Click:** Primary selection and interaction.
- Right Click:** Accesses contextual menus.
- Scroll Wheel:** Scrolls vertically through documents and web pages.

2. SmartWheel Technology

- The SmartWheel automatically shifts between high-precision scrolling for detailed work and super-fast scrolling for quickly navigating long documents or web pages.




SMARTWHEEL SHIFTS FROM SPEED TO PRECISION

Image: The SmartWheel on the Logitech POP Mouse dynamically adjusts its scrolling mode for precision or speed.

3. SilentTouch Technology

- Enjoy a quiet working environment with SilentTouch Technology, which significantly reduces click noise without compromising tactile feedback.

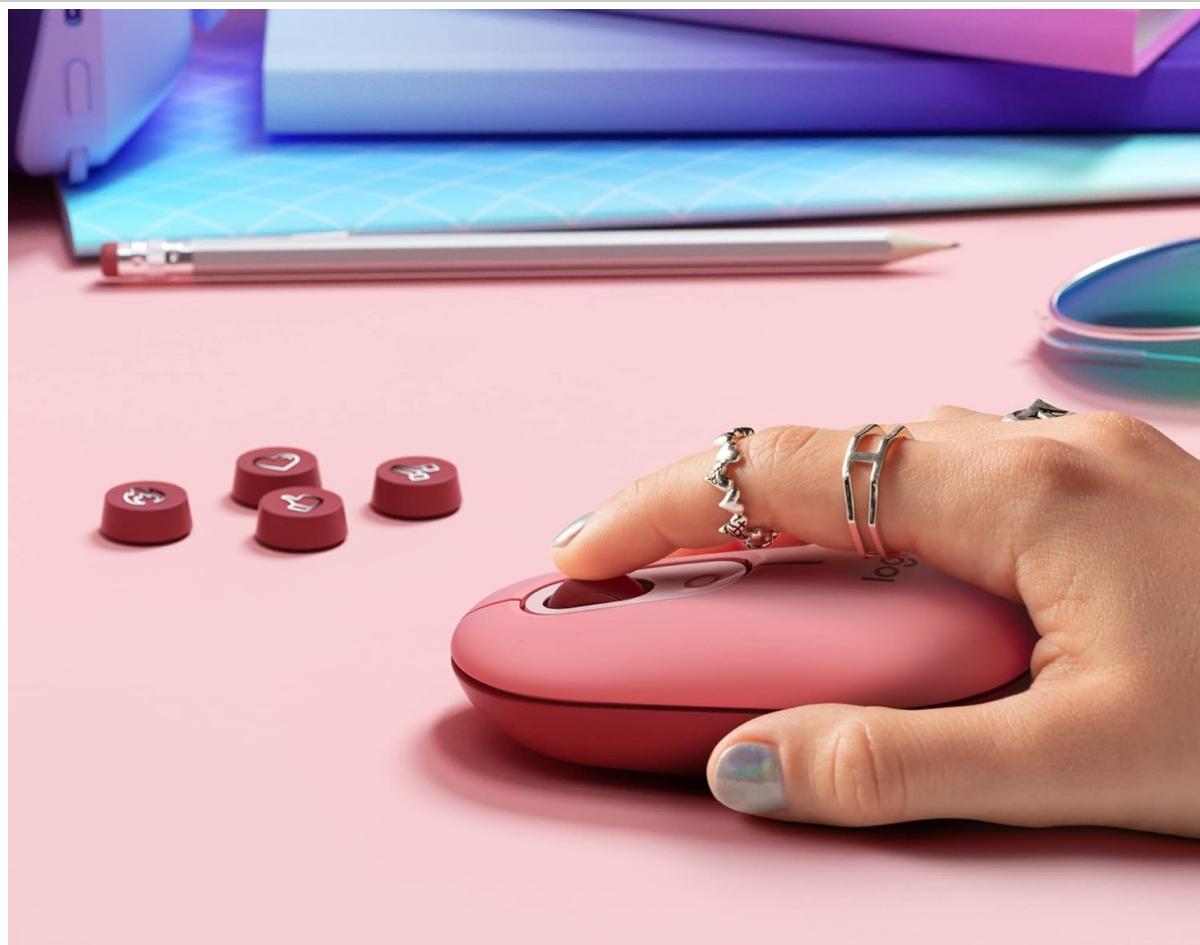


**CUTE. COMFY. QUIET.
FEELS AS GOOD AS IT LOOKS**

Image: SilentTouch Technology ensures a quiet and comfortable user experience.

CUSTOMIZATION

1. Customizable Top Button

- The top button, located below the scroll wheel, is customizable. By default, it opens an emoji menu for quick access to your favorite emojis.

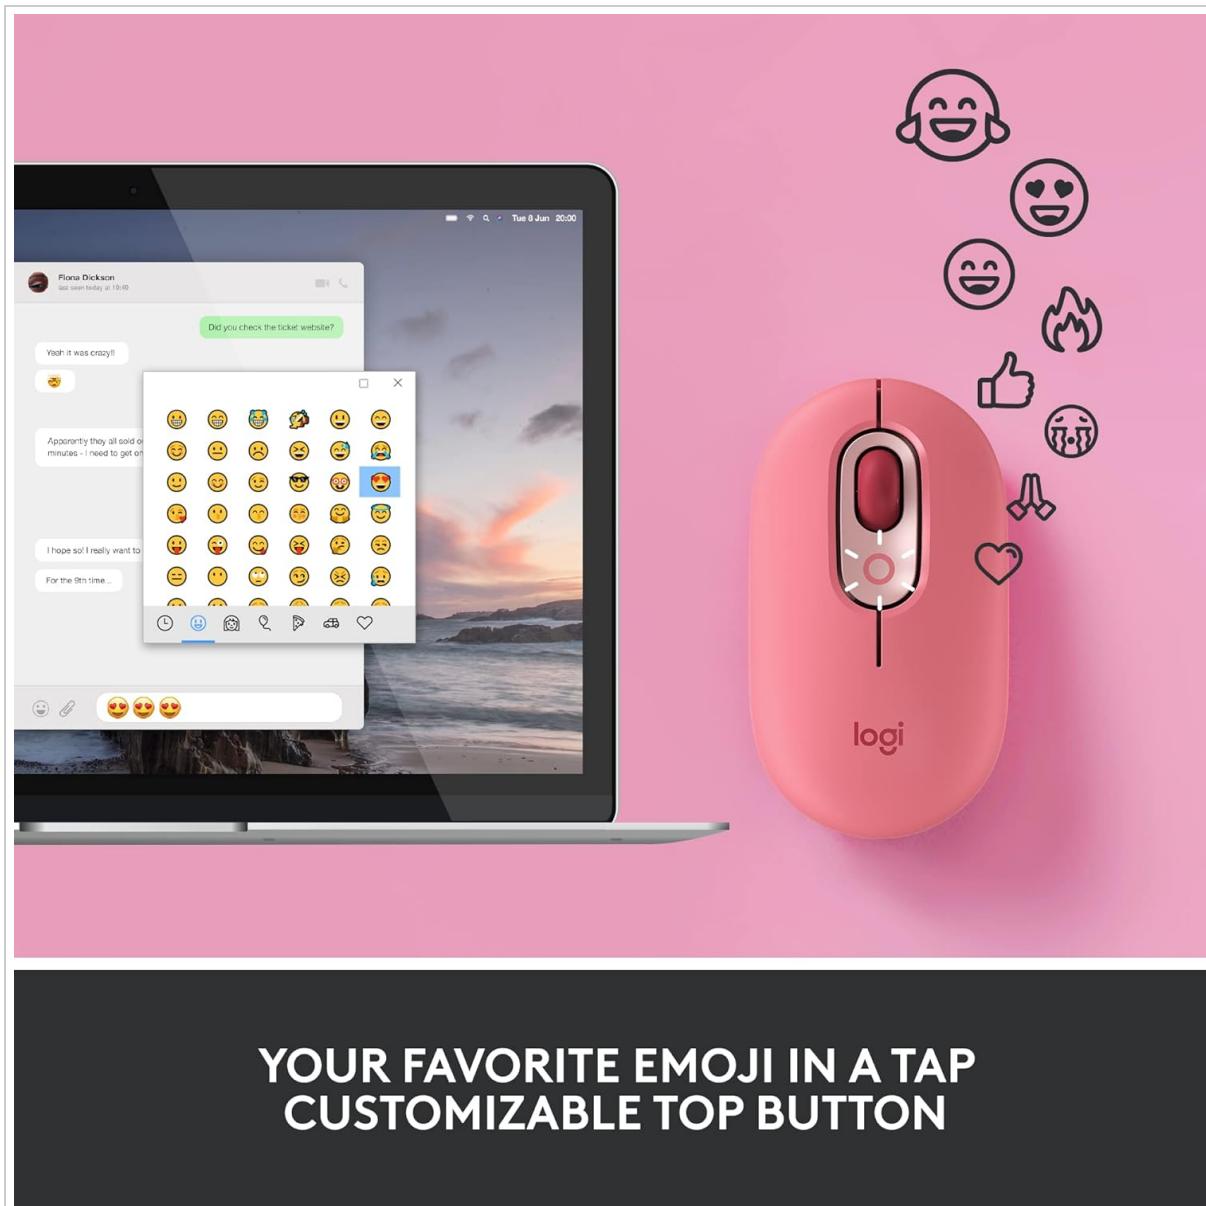

YOUR FAVORITE EMOJI IN A TAP CUSTOMIZABLE TOP BUTTON

Image: The customizable top button allows for quick access to an emoji menu on your screen.

2. Logi Options+ App

- Download the [Logi Options+ App](#) (Windows and macOS only) to personalize your POP Mouse.
- You can reassign the top button to perform various shortcuts, such as Snip Screen, Mic Mute, Voice-to-Text, or any other function you desire.
- The app also allows you to adjust pointer speed, scroll speed, and enable Flow for cross-computer control.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the exterior of the mouse. Avoid harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace the AA battery when the low battery indicator light appears.
- **Storage:** When not in use for extended periods, turn off the mouse using the On/Off switch to conserve battery life.

TROUBLESHOOTING

- **Mouse not connecting:** Ensure the mouse is powered on and within range of your device. Check your

device's Bluetooth settings to confirm it's enabled and the mouse is paired. Try re-pairing the mouse.

- **Lag or erratic movement:** Replace the battery if it's low. Ensure there are no obstructions between the mouse and your device. Avoid using the mouse on highly reflective or uneven surfaces.
- **Custom button not working:** Verify that the Logi Options+ App is installed and running on your computer. Check the button assignments within the app.

SPECIFICATIONS

Brand	Logitech
Model Number	910-006545
Connectivity Technology	Bluetooth 5.1
Wireless Range	32.81 ft (10 m)
Sensor Technology	Logitech High Precision Optical Tracking
Number of Buttons	4 (Left/Right click, Scroll wheel click, Top button)
Customizable Button	Yes (Top button, via Logi Options+ App)
Battery Type	1 x AA battery
Battery Life	Up to 24 months (may vary based on usage)
Operating System Compatibility	Windows 10 or later, macOS 10.15 or later, iPadOS, Chrome OS, Android
Item Weight	2.89 ounces
Product Dimensions (LxWxH)	4.3 x 2.6 x 1.7 inches
Material	Plastic parts include certified post-consumer recycled plastic (Heartbreaker Rose: 29%)

WARRANTY AND SUPPORT

For warranty information and technical support, please visit the official Logitech support website or refer to the warranty card included with your product. You can find detailed FAQs, troubleshooting guides, and contact options for customer service.

- **Online Support:** Visit support.logi.com
- **Product Registration:** Register your product to receive updates and support.