

[Manuals.plus](#) /

> [acer](#) /

> Acer GPHDS1100T Over-Ear Headset User Manual

**acer GP.HDS11.00T**

# Acer GPHDS1100T Over-Ear Headset User Manual

Model: GP.HDS11.00T

## INTRODUCTION

---

Thank you for choosing the Acer GPHDS1100T Over-Ear Headset. This manual provides essential information for setting up, operating, and maintaining your headset. Designed for comfort and clear communication, this headset features an omnidirectional microphone, 94 dB sensitivity, and a 3.5 mm jack for plug-and-play connectivity across various devices.



**Figure 1:** Acer GPHDS1100T Over-Ear Headset. This image shows the headset from a front-angled perspective, highlighting the over-ear design and the Acer logo on the earcup.

## PACKAGE CONTENTS

---

Ensure all items are present in the package:

- Acer GPHDS1100T Over-Ear Headset (with integrated cable)

## SETUP

---

1. **Connect the Headset:** Locate the 3.5 mm audio jack on your computer, laptop, tablet, or smartphone. Insert the headset's 3.5 mm plug firmly into the audio jack. This headset is designed for plug-and-play functionality, requiring no additional drivers for basic operation.
2. **Adjust the Headband:** Gently extend or retract the headband slides on both sides of the headset until the earcups rest comfortably over your ears.
3. **Position the Microphone:** The headset features a flexible, omnidirectional microphone. Adjust the microphone boom so that the microphone is positioned approximately 2-3 centimeters (1 inch) from your mouth for optimal voice clarity.



**Figure 2:** Side view of the Acer GPHDS1100T headset with the microphone extended, illustrating proper microphone

positioning.

## OPERATING INSTRUCTIONS

---

### Audio Playback

Once connected, your headset should automatically be recognized by your device. You can then play audio from any application. Adjust the volume using your device's system volume controls.

### Microphone Usage

The omnidirectional microphone is suitable for voice calls, online meetings, and gaming. Ensure the microphone is enabled in your device's sound settings if you experience issues. Some applications may have their own microphone volume settings.

### Touch Control (If Applicable)

While the specifications mention "Touch Control," specific functions are device-dependent. Refer to your device's audio settings or application documentation for details on how touch controls might interact with your system. Common touch controls on headsets may include volume adjustment or microphone mute/unmute.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to wipe the earcups and headband. For the leather material, a slightly damp cloth can be used, followed by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the headset in a clean, dry place away from extreme temperatures and direct sunlight. Avoid tangling the cable.
- **Cable Care:** Do not pull the cable forcefully or bend it sharply. This can damage the internal wiring. The cable is retractable, so ensure it retracts smoothly without kinks.



**Figure 3:** Top view of the Acer GPHDS1100T headset, showing the headband and earcup design, useful for understanding cleaning areas.

## TROUBLESHOOTING

---

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                | Possible Cause   | Solution   |
|------------------------|--|--|
| No sound from headset  | <ul style="list-style-type: none"> <li>Headset not fully plugged in.</li> <li>Device volume is too low or muted.</li> <li>Incorrect audio output device selected.</li> </ul>               | <ul style="list-style-type: none"> <li>Ensure the 3.5 mm jack is securely connected.</li> <li>Increase device volume and check for mute settings.</li> <li>Verify that the headset is selected as the default audio output device in your operating system's sound settings.</li> </ul>  |
| Microphone not working | <ul style="list-style-type: none"> <li>Microphone not positioned correctly.</li> <li>Microphone muted on device or application.</li> <li>Incorrect audio input device selected.</li> </ul> | <ul style="list-style-type: none"> <li>Adjust the microphone boom closer to your mouth.</li> <li>Check device and application settings to ensure the microphone is not muted and its volume is adequate.</li> <li>Verify that the headset microphone is selected as the default audio input device in your operating system's sound settings.</li> </ul> |
| Poor audio quality     | <ul style="list-style-type: none"> <li>Loose connection.</li> <li>Interference.</li> </ul>   | <ul style="list-style-type: none"> <li>Ensure the 3.5 mm jack is fully inserted.</li> <li>Try connecting the headset to a different audio port or device to rule out port issues.</li> </ul>   |

## SPECIFICATIONS

---

|                                |   |
|--------------------------------|---|
| <b>Brand</b>                   | acer  |
| <b>Model Number</b>            | GP.HDS11.00T  |
| <b>Ear Placement</b>           | Over Ear  |
| <b>Connectivity Technology</b> | Wired   |
| <b>Headphone Jack</b>          | 3.5 mm Jack   |
| <b>Microphone Type</b>         | Omnidirectional   |
| <b>Sensitivity</b>             | 94 dB   |
| <b>Frequency Response</b>      | 20 Hz - 20 kHz  |
| <b>Cable Length</b>            | 2.4 m   |
| <b>Noise Control</b>           | Active Noise Cancellation   |
| <b>Control Type</b>            | Touch Control   |
| <b>Material</b>                | Leather (earcups)   |
| <b>Compatible Devices</b>      | Laptops, Desktops, Tablets, Telephones, Smart Speaker, Television, Cellphones |



**Figure 4:** Angled view of the Acer GPHDS1100T headset, showcasing the overall design and the flexible microphone.

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the official Acer website or contact your retailer. Keep your purchase receipt for warranty claims.

Optional protection plans may be available for extended coverage. Please check with your retailer for details on available plans.