

INTECHING R101

INTECHING R101 Projector Remote Control User Manual

Model: R101

1. INTRODUCTION

This manual provides instructions for the INTECHING R101 Projector Remote Control. This remote is designed as a direct replacement and requires no programming or pairing for use with compatible Christie projector models.

Compatible Projector Models:

- Christie DHD851-Q
- Christie DHD951-Q
- Christie DHD1052-Q
- Christie DWU851-Q
- Christie DWU951-Q
- Christie DWX851-Q
- Christie DWX951-Q
- Christie DWU1052-Q
- Christie DXG1051-Q

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



・単3形乾電池を使用してください。
USE AA BATTERIES.

・電池は正しく正しく入れてください。
LOAD THE BATTERIES MAKING SURE
THE PLUS AND MINUS POLES CORRECT.

・新旧電池を混用しないでください。
DO NOT MIX NEW AND OLD BATTERIES.

・リモコンと電池の注意事項は取扱
説明書をお読みください。
SEE THE USER'S
MANUAL ABOUT
NOTICE FOR THE
REMOTE CONT-
ROLLER AND
THE BATTERIES.





Figure 1: Battery compartment with batteries inserted.





Figure 2: Battery compartment closed.

2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming, pairing, or additional setup is required. Point the remote directly at the projector to operate.

3. OPERATION

3.1 Basic Functionality

The INTECHING R101 remote control provides full functionality for your compatible Christie projector. Simply point the remote towards the projector and press the desired button.



Figure 3: Front view of the R101 remote control.



Figure 4: Angled view of the R101 remote control.

3.2 Important Considerations

- Ensure there are no physical obstacles between the remote control and the projector's infrared receiver.
- The maximum effective range for operation is approximately 10 meters (33 feet).
- Pressing any key will transmit the corresponding command to the projector.

4. MAINTENANCE

4.1 Battery Replacement

If the remote control becomes unresponsive or its range decreases, replace the batteries. Refer to Section 2.1 for battery installation instructions. Always replace both batteries simultaneously with new AA batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or immerse the remote in water.

5. TROUBLESHOOTING

5.1 Remote Control Not Responding

- **Check Batteries:** Ensure batteries are correctly installed with the correct polarity (+/-) and are not depleted. Replace with new AA batteries if necessary.
- **Line of Sight:** Verify that there are no obstructions between the remote control and the projector's infrared receiver.
- **Distance:** Confirm you are within the effective operating range (approximately 10 meters).
- **Projector Status:** Ensure the projector is powered on and functioning correctly.

6. SPECIFICATIONS

Feature	Specification
Brand	INTECHING
Model Name	R101
Model Number	R101
Color	White
Connectivity Technology	Infrared
Compatible Devices	Projector
Maximum Number of Supported Devices	1
Button Quantity	35
Maximum Range	10 Meters
Battery Type	AA
Number of Batteries Required	2
Item Weight	0.11 Kilograms
Country of Origin	China

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a warranty:

- **Refund:** Available within 30 days from the order date.
- **Replacement:** Available within 12 months from the order date.

7.2 Customer Support

For any questions, issues, or warranty claims, please contact INTECHING customer service. Messages are typically replied to by the support team within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question