

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MasterChef](#) /

› [MasterChef Digital Food Scale User Manual](#)

MasterChef Digital Food Scale

MasterChef Digital Food Scale User Manual

Model: Digital Food Scale

INTRODUCTION

Welcome to your new MasterChef Digital Food Scale. This manual provides comprehensive instructions for the proper setup, operation, maintenance, and troubleshooting of your device. Adhering to these guidelines will ensure optimal performance and extend the lifespan of your scale.

IMPORTANT SAFETY INFORMATION

- Do not immerse the scale in water or hold it under a running tap. This can cause electrical damage.
- Clean the scale with a soft, damp cloth and a mild washing liquid. Wipe dry immediately.
- Always place the scale on a hard, flat, and stable surface to ensure accurate measurements.
- Do not overload the scale beyond its maximum capacity of 11 lbs (5 kg) to prevent damage to the sensors.
- Keep the scale out of reach of children.

PRODUCT OVERVIEW

The MasterChef Digital Food Scale is engineered for precise measurement of ingredients, supporting multiple units including grams, kilograms, pounds, ounces, milliliters, and liters. It features a durable tempered glass surface, an easy-to-read LCD display, and intuitive touch-sensitive buttons.

Components

- **Tempered Glass Weighing Surface:** Provides a durable and easy-to-clean platform.
- **LCD Display:** Shows weight readings clearly.
- **UNIT Button:** Used to cycle through different measurement units.
- **TARE Button:** Resets the display to zero, allowing for measurement of multiple ingredients in one container.
- **OFF Button:** Manually turns off the scale.
- **Battery Compartment:** Located on the underside for battery installation.



This image shows the MasterChef Digital Food Scale from an angled top-down perspective. The scale is silver with a clear tempered glass weighing surface, featuring the MasterChef logo. The LCD display and the touch-sensitive UNIT, TARE, and OFF buttons are visible.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the required batteries (typically AAA, refer to packaging for specific type), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Initial Placement

Place the scale on a hard, flat, and stable surface. Uneven surfaces or soft materials can significantly affect measurement accuracy.

OPERATING INSTRUCTIONS

Turning On/Off

To turn on the scale, press the **ON/OFF** button. The display will illuminate and show "0" or "0.0" when it is ready for use. To turn off the scale, press and hold the **ON/OFF** button. The scale also features an automatic shut-off function, activating after approximately 2 minutes of inactivity to conserve battery life.

Changing Measurement Units

Press the **UNIT** button to cycle through the available measurement units. The scale supports grams (g), kilograms (kg), pounds (lb), ounces (oz), milliliters (ml), and liters (l).



This image illustrates the unit conversion feature. A finger is shown pressing the 'UNIT' button on the scale, which is surrounded by various ingredients. The image highlights the scale's ability to switch between different measurement units like grams, kilograms, liters, milliliters, ounces, and pounds.

Weighing Ingredients (Tare Function)

1. Place an empty container on the scale's weighing surface.
2. Press the **TARE** button. The display will reset to "0", effectively subtracting the weight of the container.
3. Add your ingredients to the container. The scale will display the net weight of the ingredients.
4. To weigh additional ingredients in the same container, press **TARE** again after adding each ingredient to reset the display to "0" before adding the next item.



This image demonstrates the tare function. A bowl filled with raspberries is placed on the scale, and a finger is shown pressing the 'TARE' button, which resets the display to zero, allowing for accurate measurement of subsequent ingredients.

Maximum Capacity

The scale has a maximum weight capacity of 11 lbs (5 kg). Exceeding this limit can damage the internal sensors and affect accuracy.

MAINTENANCE AND CARE

Cleaning

The tempered glass surface is designed for easy cleaning. Use a soft, damp cloth with a mild, non-abrasive detergent. Wipe the surface dry immediately after cleaning. **Do not use abrasive cleaners, harsh chemicals, or immerse the scale in water.**

Storage

Store the scale in a dry place at room temperature. Avoid exposing it to extreme temperatures, high humidity, or direct sunlight, which can affect its electronic components.

Battery Replacement

When the low battery indicator appears on the display, replace the batteries promptly to ensure continued accuracy and proper function of the scale.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on	Dead batteries or incorrect battery installation	Replace batteries, ensuring correct polarity (+/-).
Inaccurate readings	Uneven surface, overloaded scale, or low battery	Place the scale on a flat, stable surface. Do not exceed capacity. Replace batteries if low.
"Err" message on display	Scale overloaded	Remove items exceeding the 11 lbs (5 kg) capacity.
Display flickers or is dim	Low battery	Replace batteries.

SPECIFICATIONS

- **Model:** Digital Food Scale
- **Capacity:** 11 lbs (5 kg)
- **Accuracy:** 0.1 oz (1 g)
- **Units:** g, kg, lb, oz, ml, l
- **Display:** LCD
- **Surface Material:** Tempered Glass
- **Auto Shut-off:** Approximately 2 minutes
- **Power:** Battery operated (type not specified, typically AAA or CR2032)
- **Dimensions:** 7 x 5.5 x 1 inches (18 x 14 x 2.5 cm)



Kitchen Scales Measurements

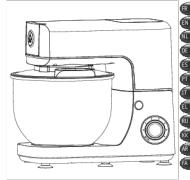


This image provides a clear top-down view of the MasterChef Digital Food Scale, with graphical overlays indicating its physical dimensions: 14 cm (5.5 inches) in width and 18 cm (7 inches) in length.

WARRANTY AND SUPPORT

For detailed warranty information or technical support, please refer to the documentation included with your purchase or visit the official MasterChef website. It is recommended to retain your proof of purchase for any warranty claims.

Online Support: For additional product information and support resources, you may visit the [MasterChef Store on Amazon](#).

 <p>USER MANUAL</p>	<p><u>MasterChef Digital Kitchen Scale User Manual</u></p> <p>User manual for the MasterChef Digital Kitchen Scale, detailing features, operation, safety guidelines, and warranty information for accurate kitchen weighing.</p>
 <p>USER MANUAL</p>	<p><u>MasterChef Essential Stand Mixer User Manual</u></p> <p>Comprehensive user manual for the MasterChef Essential stand mixer, covering setup, operation, cleaning, troubleshooting, and basic recipes. Includes detailed instructions for various attachments like the meat grinder and mini-chopper.</p>
 <p>USER MANUAL</p>	<p><u>MasterChef Hand Mixer VRD919102108 User Manual</u></p> <p>Comprehensive user manual for the MasterChef Hand Mixer (Model VRD919102108), covering important safeguards, operating instructions, cleaning, storage, and warranty information.</p>
 <p>USER MANUAL</p>	<p><u>MasterChef Digital Food Thermometer VRD919102100 User Manual</u></p> <p>Comprehensive user manual for the MasterChef Digital Food Thermometer (Model VRD919102100). Includes safety guidelines, operating instructions, technical specifications, disposal information, and warranty details.</p>
 <p>USER MANUAL</p>	<p><u>MasterChef Digital Kitchen Scale User Manual</u></p> <p>Comprehensive user manual for the MasterChef Digital Kitchen Scale (VRD919102106), covering safety precautions, operation, cleaning, storage, and warranty information.</p>
 <p>USER MANUAL</p>	<p><u>MasterChef VRD919102104 Digital Kitchen Scale User Manual</u></p> <p>Comprehensive user manual for the MasterChef VRD919102104 Digital Kitchen Scale, detailing safety precautions, features, operation, cleaning, storage, disposal, and warranty information. Includes instructions for use in English, French, and Spanish.</p>