

## MasterChef Digital Food Scale (B09DX2G6Q7)

# MasterChef Digital Food Scale User Manual

Model: Digital Food Scale (B09DX2G6Q7)

## 1. INTRODUCTION

Thank you for choosing the MasterChef Digital Food Scale. This high-precision kitchen scale is designed to provide accurate measurements for all your cooking and baking needs. Featuring a durable tempered glass surface and an easy-to-read LCD display, it offers convenience and reliability in your kitchen.



Figure 1: MasterChef Digital Food Scale

## 2. PRODUCT FEATURES

- **High Precision:** Equipped with high-precision sensors for exact weight measurements down to

0.1oz (1g).

- **Multiple Units:** Easily switch between 6 digital readings: Grams (G), Kilograms (KG), Liters (L), Milliliters (ML), Ounces (OZ), and Pounds:Ounces (LB:OZ).
- **Tempered Glass Surface:** Large, durable, and wear-resistant tempered glass measuring surface for maximum safety and easy cleaning.
- **LCD Display:** Clear and easy-to-read LCD display for quick measurement readings.
- **Auto Switch Off:** Automatically turns off after 2 minutes of inactivity to preserve battery life.
- **Tare Function:** Allows you to zero out the weight of a container or previous ingredients.



**High precision accurate to 0.1oz / 1g**



Figure 2: High precision measurement of ingredients.



### 6 Digital readings (g/kg/l/ml/oz/lb)



Figure 3: Switching between 6 digital measurement units.

## 3. SETUP

### 3.1. Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the required batteries (typically AAA, refer to packaging for exact type) ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### 3.2. Placement

Place the scale on a hard, flat, and stable surface to ensure accurate readings. Avoid placing it on soft or uneven surfaces, or near strong electromagnetic fields.

## 4. OPERATING INSTRUCTIONS

## 4.1. Turning On/Off

- To turn on the scale, gently press the center of the weighing surface or the 'TARE/OFF' button. The LCD display will show '0' or '0.0'.
- To turn off the scale, press and hold the 'TARE/OFF' button for a few seconds until the display turns off. The scale will also automatically turn off after 2 minutes of inactivity.

## 4.2. Changing Measurement Units

Press the 'UNIT' button to cycle through the available measurement units: G, KG, L, ML, OZ, LB:OZ. Select the desired unit before weighing.

## 4.3. Tare Function

The Tare function allows you to subtract the weight of a container or to weigh multiple ingredients consecutively without removing the previous one.

1. Place an empty container on the scale. The display will show its weight.
2. Press the 'TARE/OFF' button. The display will reset to '0'.
3. Add your ingredient to the container. The display will show only the weight of the ingredient.
4. Repeat step 2 and 3 for additional ingredients.



Figure 4: Utilizing the Tare function.

## 4.4. Weighing Ingredients

1. Ensure the scale is on and displaying '0'.
2. Place the item(s) to be weighed directly onto the tempered glass surface or in a container (using the Tare function).
3. Read the weight displayed on the LCD screen.



### Large safety glass surface



Figure 5: Large safety glass surface for weighing.

## 5. MAINTENANCE AND CARE

- **Cleaning:** After each use, wipe the scale with a soft, damp cloth and a mild washing liquid. Do not immerse the scale in water or hold it under a running tap, as this can damage the internal electronics.
- **Storage:** Store the scale in a dry place at room temperature. Avoid extreme temperatures or high humidity.
- **Handling:** Handle the scale with care. Avoid dropping it or subjecting it to strong impacts, which can affect its accuracy or damage the glass surface.
- **Battery Replacement:** Replace batteries when the display indicates low power (e.g., 'Lo' message).

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Scale does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity or replace batteries.
Display shows 'Lo'.	Low battery power.	Replace batteries.
Display shows 'Err' or 'O-Ld'.	Overload. Weight exceeds maximum capacity.	Remove item immediately. Do not exceed 11 lbs (5 kg).
Inaccurate readings.	Uneven surface, scale not tared, or external interference.	Place on a flat, stable surface. Tare the scale before use. Avoid strong vibrations or air currents.

## 7. SPECIFICATIONS

Feature	Detail
Brand	MasterChef
Model Number	Digital Food Scale
Color	Black
Material	Tempered Glass
Weight Limit	11 Pounds (approx. 5 kg)
Readout Accuracy	0.1 oz / 1 g
Display Type	LCD
Product Dimensions	7 x 5.5 x 1 inches
Item Weight	14.4 ounces
Special Features	Large Display, Non-Slip Platform, Auto Shut Off



## Kitchen Scale Measurements



Figure 6: Kitchen Scale Measurements.

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or visit the official MasterChef website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may contact MasterChef customer service through their official channels.

© 2024 MasterChef. All rights reserved.

## Related Documents - Digital Food Scale (B09DX2G6Q7)

 <p><b>USER MANUAL</b></p>	<p><a href="#"><b>MasterChef Digital Kitchen Scale User Manual</b></a></p> <p>User manual for the MasterChef Digital Kitchen Scale, detailing features, operation, safety guidelines, and warranty information for accurate kitchen weighing.</p>
 <p><b>MASTERCHEF ESSENTIAL</b></p>	<p><a href="#"><b>Masterchef Essential Stand Mixer User Manual</b></a></p> <p>Comprehensive user manual for the Masterchef Essential stand mixer, covering setup, operation, cleaning, troubleshooting, and basic recipes. Includes detailed instructions for various attachments like the meat grinder and mini-chopper.</p>
 <p><b>USER MANUAL</b></p>	<p><a href="#"><b>MasterChef Hand Mixer VRD919102108 User Manual</b></a></p> <p>Comprehensive user manual for the MasterChef Hand Mixer (Model VRD919102108), covering important safeguards, operating instructions, cleaning, storage, and warranty information.</p>
 <p><b>USER MANUAL</b></p>	<p><a href="#"><b>MasterChef Digital Food Thermometer VRD919102100 User Manual</b></a></p> <p>Comprehensive user manual for the MasterChef Digital Food Thermometer (Model VRD919102100). Includes safety guidelines, operating instructions, technical specifications, disposal information, and warranty details.</p>
 <p><b>USER MANUAL</b></p>	<p><a href="#"><b>MasterChef Digital Kitchen Scale User Manual</b></a></p> <p>Comprehensive user manual for the MasterChef Digital Kitchen Scale (VRD919102106), covering safety precautions, operation, cleaning, storage, and warranty information.</p>



## USER MANUAL

### [MasterChef VRD919102104 Digital Kitchen Scale User Manual](#)

Comprehensive user manual for the MasterChef VRD919102104 Digital Kitchen Scale, detailing safety precautions, features, operation, cleaning, storage, disposal, and warranty information. Includes instructions for use in English, French, and Spanish.