

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WENKEY](#) /

› [WENKEY E2 Bluetooth Earbuds User Manual](#)

WENKEY E2

WENKEY E2 Bluetooth Earbuds User Manual

Model: E2

1. GETTING STARTED

1.1 Package Contents

Please check the package for the following items:

- WENKEY E2 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Multiple Sizes of Ear Tips (XS, S, M, L, XL)
- User Manual

ERGONOMIC DESIGN

60 ° tilt angle fit, a single earbud only 4g,
sleep can also wear the earbuds



Image: All components included in the WENKEY E2 Earbuds package.

1.2 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case provides up to 5 full charges for the earbuds, extending total listening time to 30 hours.

- Place the earbuds into the charging case. Ensure they are correctly seated; the indicator lights on the earbuds

will illuminate.

- Connect the charging case to a USB power source using the provided USB cable.
- The LED indicators on the charging case will show the charging status. Four lights indicate a full charge.



Image: WENKEY E2 Earbuds seated in their charging case, ready for charging.



Image: Visual representation of the charging case's LED indicators and their battery level meanings.

1.3 Pairing with Your Device

The earbuds feature one-step pairing for convenience.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "WENKEY E2" in the list of available Bluetooth devices and select it to connect.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

The advanced Bluetooth 5.1 technology ensures a fast, stable connection with a range of up to 15 meters.

AUTOMATISCHE VERBINDUNG

Öffnen Sie bitte einfach das Gehäuse, um eine Verbindung herzustellen



Bluetooth 5.3



Solide Verbindung



Image: Automatic pairing process shown on a smartphone's Bluetooth settings.

2. OPERATING THE EARBUDS

2.1 Wearing the Earbuds

The WENKEY E2 earbuds are designed with an ergonomic 60-degree tilt angle for a secure and comfortable fit.

Choose the ear tips that best fit your ear canal for optimal sound quality and noise isolation.



Image: Ergonomic design of the earbuds for comfortable and secure wear.



Image: Selection of ear tip sizes for a customized and comfortable fit.

2.2 Touch Controls

The earbuds feature intuitive touch controls for managing media playback and calls.

Function	Action
Play/Pause	Double-tap either earbud
Next Track	Touch and hold the right earbud for 2 seconds
Previous Track	Touch and hold the left earbud for 2 seconds
Answer/End Call	Double-tap either earbud
Reject Call	Touch and hold either earbud for 2 seconds
Voice Assistant	Triple-tap either earbud

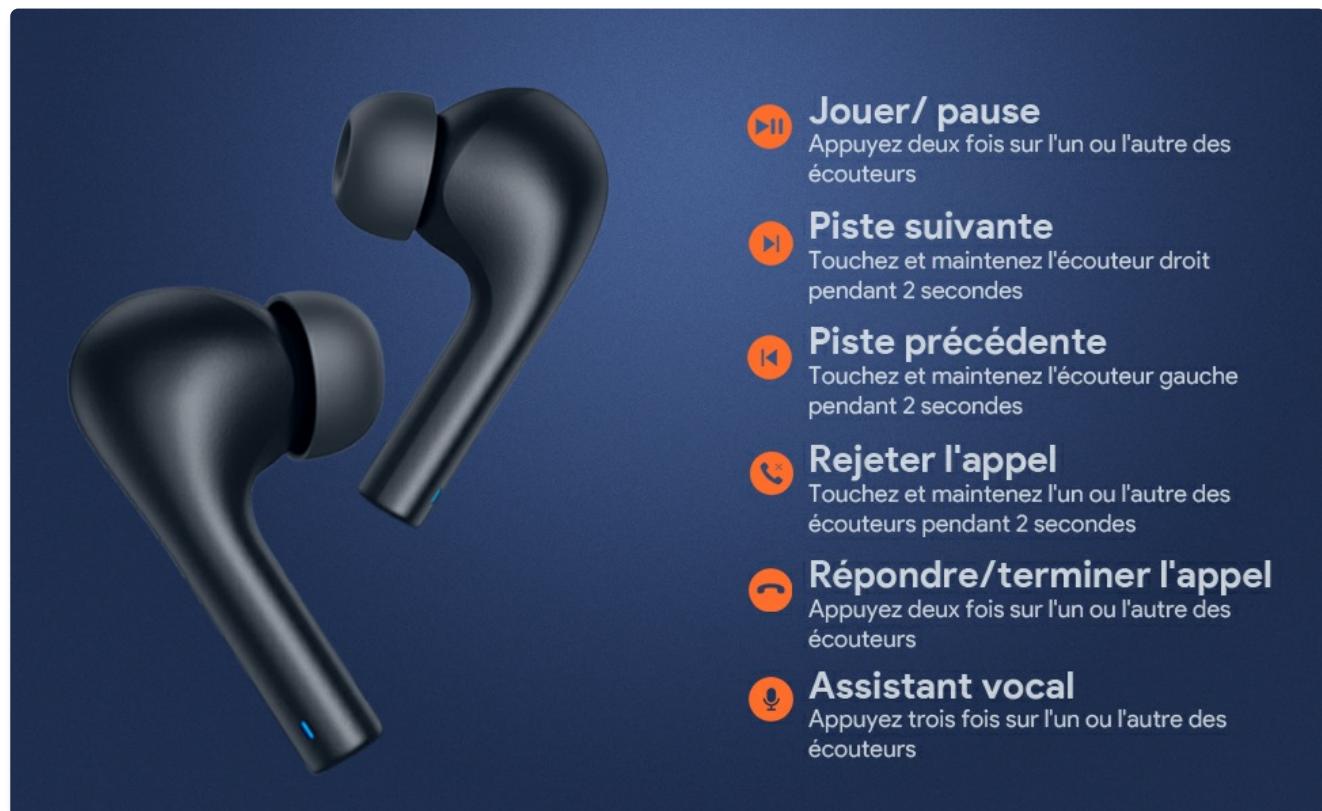


Image: Visual guide to the touch control functions on the earbuds.

2.3 Call Functions and Audio Quality

The earbuds feature ENC (Environmental Noise Cancellation) microphones, ensuring clear calls even in noisy environments. Experience Hi-Fi stereo sound with enhanced bass for an immersive audio experience.



Image: Explanation of the noise-canceling microphone technology for clear calls.

Audio haute fidélité


Les grands pilotes dynamiques de 10 mm offrent des basses plus claires et plus riches.



Image: Internal structure of the earbud driver, emphasizing high-fidelity audio.

2.4 Single Earbud Use

Either earbud can be used independently as a mono Bluetooth headset, allowing you to stay aware of your surroundings while enjoying audio or making calls.

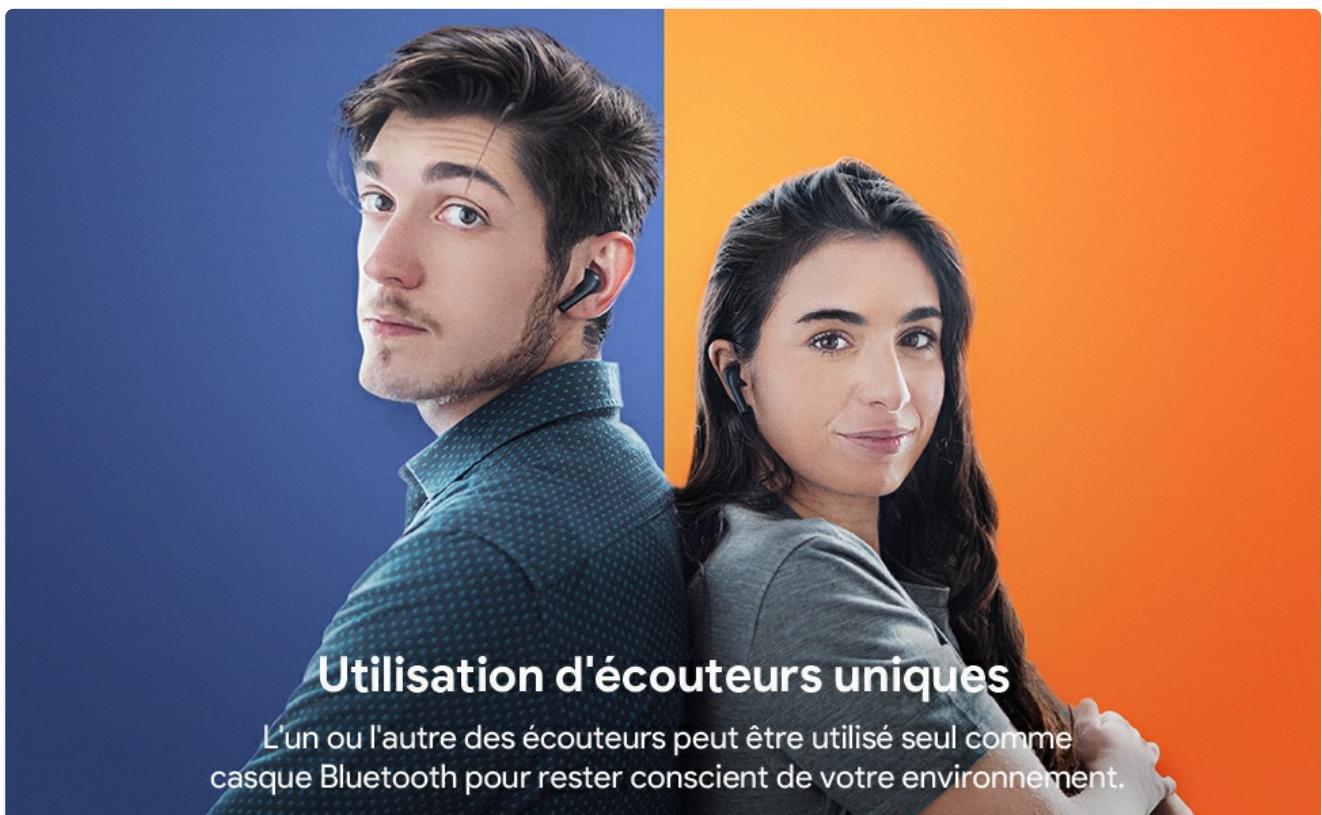

Utilisation d'écouteurs uniques

L'un ou l'autre des écouteurs peut être utilisé seul comme casque Bluetooth pour rester conscient de votre environnement.

Image: Demonstrating the flexibility of using a single earbud.

3. MAINTENANCE

3.1 Cleaning

To maintain optimal performance and hygiene, regularly clean your earbuds and charging case.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- Gently remove any earwax or debris from the ear tips and speaker mesh using a small, clean brush or cotton

swab.

- Do not use abrasive cleaners, alcohol, or chemical solvents.

3.2 Water Resistance (IPX6)

The WENKEY E2 earbuds are IPX6 waterproof, meaning they are resistant to sweat, water splashes, and rain. They are suitable for sports and outdoor activities.

Note: The charging case is not waterproof. Do not expose the charging case to liquids.



Image: Visual representation of the earbuds' IPX6 water resistance.

3.3 Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged.

4. TROUBLESHOOTING

If you encounter any issues with your WENKEY E2 earbuds, please refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing/connecting	<ul style="list-style-type: none">• Ensure earbuds are charged.• Turn off and on Bluetooth on your device.• Forget "WENKEY E2" from your device's Bluetooth list and re-pair.• Place earbuds back in the case, close, then open again to reset pairing mode.
No sound or low volume	<ul style="list-style-type: none">• Check device volume and earbud volume.• Ensure earbuds are properly seated in your ears.• Try different ear tip sizes for a better seal.• Reconnect the earbuds to your device.

Problem	Possible Solution
Intermittent connection/sound flickering	<ul style="list-style-type: none"> • Ensure you are within the 15-meter Bluetooth range. • Avoid strong electromagnetic interference. • Try moving your device closer to the earbuds. • Reset the earbuds by placing them in the case and closing it.
Earbuds not charging	<ul style="list-style-type: none"> • Ensure the charging cable is securely connected to both the case and power source. • Check if the charging case has power. • Clean the charging contacts on both the earbuds and the case. • Try a different USB cable or power adapter.

5. SPECIFICATIONS

Feature	Detail
Model Number	E2
Brand	WENKEY
Connectivity Technology	Wireless (Bluetooth 5.1)
Wireless Communication Technology	Bluetooth
Water Resistance Level	IPX6 (Sweatproof, Water-resistant)
Battery Life (Earbuds)	Up to 5 hours on a single charge
Total Playtime with Charging Case	Up to 30 hours
Special Features	Fast Charging, ENC Noise Cancellation, Hi-Fi Stereo Sound
Color	Black
Form Factor	In-Ear
Material	Plastic



Image: Illustration of the extended battery life with the charging case.



Image: Compatibility of WENKEY E2 earbuds with various operating systems.

6. WARRANTY AND SUPPORT

6.1 Warranty Information

Specific warranty details for the WENKEY E2 earbuds are not provided in the product data. Please refer to the warranty card included in your product packaging or contact the retailer/manufacturer directly for warranty terms and conditions.

6.2 Customer Support

For further assistance, technical support, or inquiries, please contact WENKEY customer service. Contact information is typically found on the product packaging, the official WENKEY website, or through your purchase platform.

7. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided data.

© 2023 WENKEY. All rights reserved.

Related Documents - E2

	<p>WENKEY E2 True Wireless Earbuds Quick Start Guide</p> <p>A concise guide to setting up and using WENKEY E2 True Wireless Earbuds, including pairing, fitting, and controls.</p>
	<p>WENKEY E2 True Wireless Earbuds User Manual</p> <p>User manual for WENKEY E2 True Wireless Earbuds, detailing specifications, setup, controls, troubleshooting, and warranty information.</p>
	<p>WENKEY E2 Wireless Earbuds User Manual</p> <p>User manual for the WENKEY E2 wireless earbuds, covering setup, operation, troubleshooting, and specifications.</p>