

[Manuals.plus](#) /

› [Havells](#) /

› Havells Duro Blend-S 300W Hand Blender Instruction Manual

Havells GHFHBDSE030

Havells Duro Blend-S 300W Hand Blender Instruction Manual

Model: GHFHBDSE030

INTRODUCTION

Thank you for choosing the Havells Duro Blend-S 300W Hand Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blades during operation to prevent injury and/or damage to the blender.
- Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Havells customer service for examination, repair, or adjustment.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not use attachments not recommended or sold by the manufacturer.
- Always ensure the appliance is properly assembled before use.
- Do not process extremely hot liquids to avoid splashing and potential burns. Allow hot liquids to cool slightly before

blending.

PRODUCT COMPONENTS

Your Havells Duro Blend-S Hand Blender includes the following parts:

- Motor Unit
- Detachable Stainless Steel Stem with Blades
- Instruction Manual



Image: The main motor unit and the detachable stainless steel blending stem, shown separated.



Image: Close-up view of the ergonomic motor unit with control buttons.



Image: The detachable stainless steel blending stem with its protective bell and sharp blades.

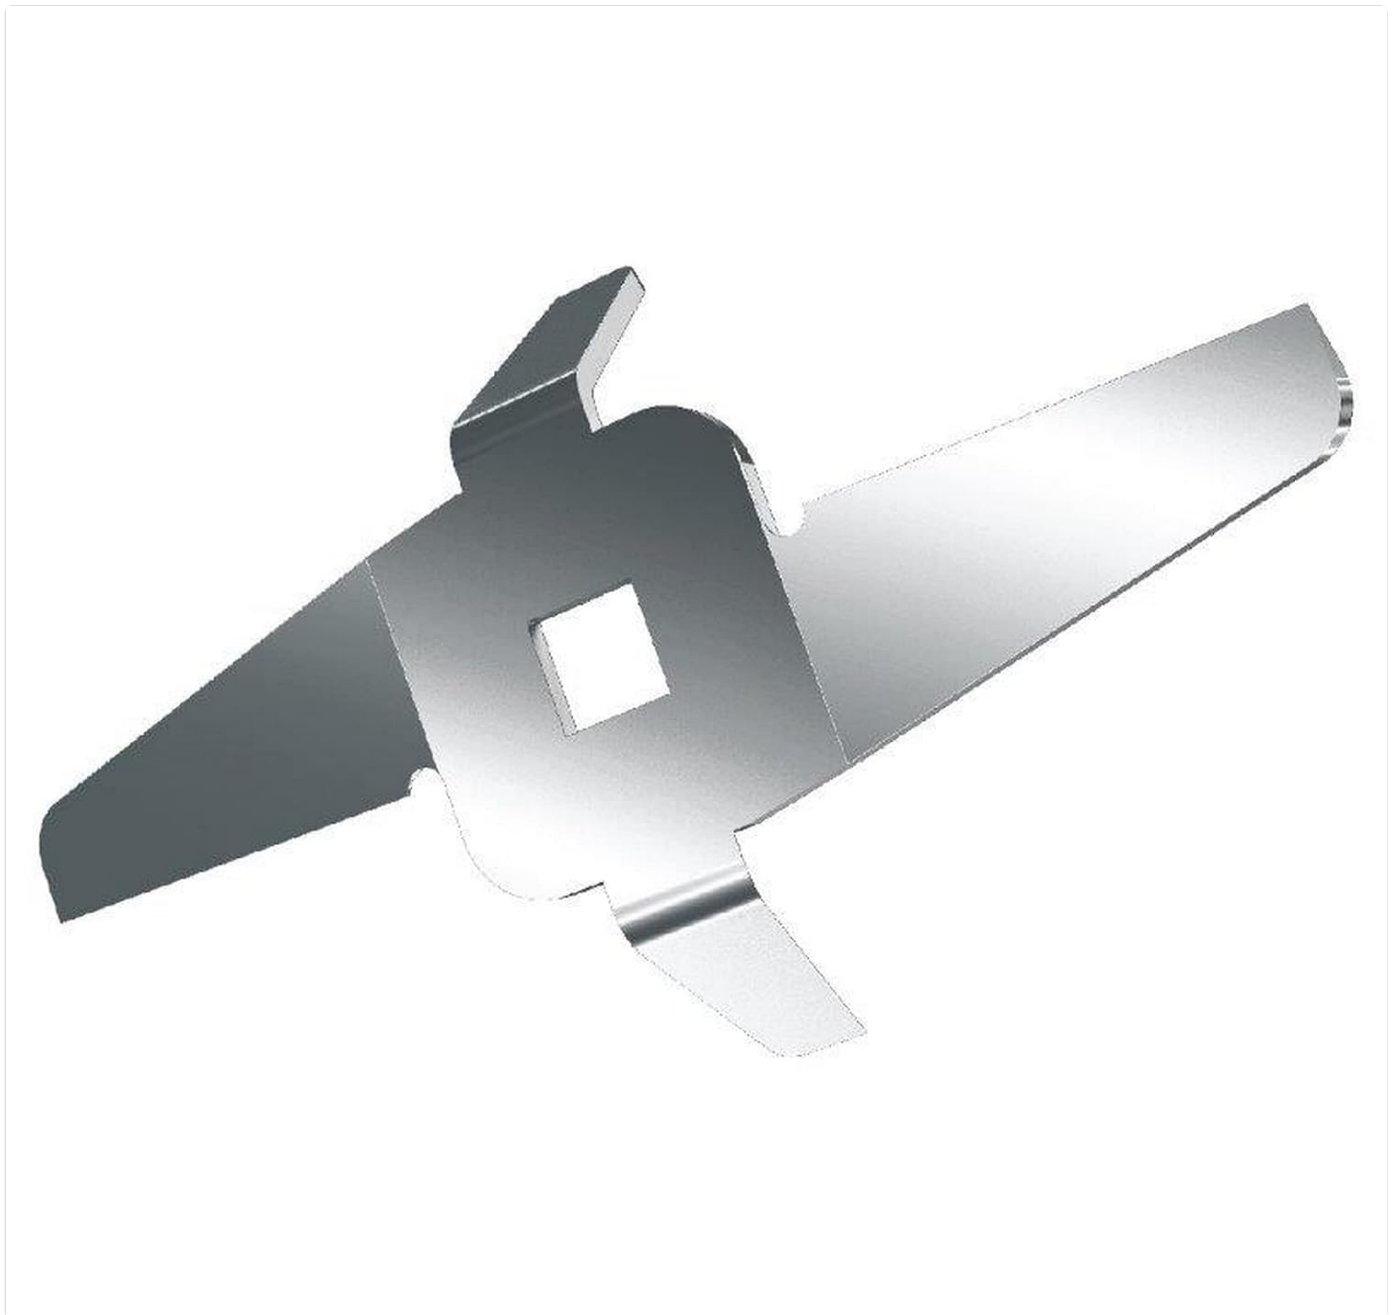


Image: Detailed view of the 304 stainless steel super sharp blades.

SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and the appliance is clean.

1. **Attach the Blending Stem:** Align the detachable stainless steel blending stem with the motor unit. Push and twist gently until it locks securely into place.
2. **Check Connection:** Ensure the stem is firmly attached to prevent detachment during operation.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet.





Image: The Havells Duro Blend-S Hand Blender fully assembled, ready for use.

OPERATING INSTRUCTIONS

The Havells Duro Blend-S Hand Blender is designed for blending, pureeing, and mixing various ingredients.

1. **Prepare Ingredients:** Cut larger ingredients into smaller pieces for easier blending. Place ingredients into a suitable container (e.g., a tall beaker or pot).
2. **Immerse Blender:** Immerse the blending stem into the ingredients before switching on the appliance. Ensure the liquid level is below the maximum fill line of your container to prevent splashing.
3. **Select Speed:** Your blender features 2 speed options. Press the desired speed button on the motor unit to start blending.
 - **Speed 1:** For lighter blending tasks and softer ingredients.
 - **Speed 2:** For faster blending and tougher ingredients.
4. **Blend:** Move the blender gently up and down and in circular motions to ensure even blending. Do not operate continuously for more than 1 minute to prevent overheating. Allow the appliance to cool down for a few minutes between cycles.
5. **Finish Blending:** Once desired consistency is achieved, release the speed button and wait for the blades to stop completely before removing the blending stem from the ingredients.
6. **Unplug:** Always unplug the appliance from the power outlet after use.



Image: Demonstrates the ergonomic design of the hand blender for comfortable grip during operation.



Image: The stainless steel blades blending ingredients in a container.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your hand blender.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Detach Stem:** Twist and pull the blending stem to detach it from the motor unit.
3. **Clean Blending Stem:** The detachable stainless steel stem is dishwasher safe. Alternatively, wash it under running water with a mild detergent. Be extremely careful when handling the sharp blades.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. **Never immerse the motor unit in water or any other liquid.**
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** Store the hand blender in a dry place, out of reach of children.



Image: The detachable blending stem separated from the motor unit, highlighting the ease of cleaning.

TROUBLESHOOTING

If you encounter issues with your hand blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outage; faulty outlet; motor unit not properly connected to stem.	Ensure the plug is securely in the outlet. Check the power supply. Try a different outlet. Re-attach the blending stem securely.
Blender stops during operation.	Overheating due to continuous use; ingredients too tough or quantity too large.	Unplug and allow the motor to cool down for at least 15-20 minutes. Reduce ingredient quantity or cut into smaller pieces. Do not operate continuously for more than 1 minute.
Poor blending results.	Insufficient liquid; ingredients too large; blades are dull or damaged.	Add more liquid to cover the blades. Cut ingredients into smaller, uniform pieces. If blades are dull or damaged, contact customer service.
Excessive vibration or noise.	Blending stem not properly attached; foreign object caught in blades.	Unplug and re-attach the blending stem. Unplug and carefully check for any obstructions around the blades.

If the problem persists after trying these solutions, please contact Havells customer service.

SPECIFICATIONS

Brand	Havells
Model Number	GHFHBDSE030
Wattage	300 Watts
Number of Speeds	2
Motor Type	Low Noise DC Motor, Copper Motor
Blade Material	304 Stainless Steel
Body Material	Acrylonitrile Butadiene Styrene (ABS)
Special Features	Detachable Stem, Ergonomic Design, Double Bush
Item Weight	760 Grams
Dimensions (D x W x H)	33D x 25.5W x 26H Centimeters (Note: These dimensions might refer to packaging or a larger set, not the blender itself.)
Dishwasher Safe	Yes (for detachable stem)
Included Components	1 N motor unit, 1 N Stem, 1 N Instruction Manual

WARRANTY AND CUSTOMER SUPPORT

Your Havells Duro Blend-S Hand Blender comes with a **2 Year Comprehensive Warranty** from the date of purchase. For warranty claims, technical assistance, or any product-related inquiries, please contact Havells customer service. Keep your purchase receipt as proof of purchase for warranty validation.

Manufacturer: Havells India Limited

Packer Contact Information: Plot No. 2 & 2A, Sector-12, IIE, Sidcul Industrial Area, Haridwar - 249403, Uttarakhand, INDIA.