

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SF SUNFUNY](#) /

› [SF SUNFUNY Cordless Food Processor Electric Chopper 1.2L User Manual](#)

SF SUNFUNY 1.2L

SF SUNFUNY Cordless Food Processor Electric Chopper 1.2L User Manual

Model: 1.2L

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is fully assembled before operation.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by children. Keep out of reach of children.
- Do not process extremely hard foods like un-shelled nuts, coffee beans, or frozen foods unless specified.
- Ensure the lid is securely locked in place before operating.
- Unplug the appliance before cleaning or when not in use.
- Do not operate the appliance if any part is damaged. Contact customer support for assistance.
- The appliance cannot be used while charging.

2. PRODUCT OVERVIEW AND COMPONENTS

The SF SUNFUNY Cordless Food Processor is designed for efficient food preparation. It features a powerful motor, sharp blades, and a durable glass bowl.



Image: The main unit of the SF SUNFUNY Cordless Food Processor, showing the motor unit, glass bowl, blade assembly, and a USB charging cable. Raw meat and garlic are shown as examples of ingredients.

Packing List:

Packing List

① Motor

② Glass Bowl

③ Bowl Lid

④ User Manual

⑤ Chopping Blade Set

⑥ Silicone Ring Mat

⑦ usb cable

⑧ Scraper



Image: A visual representation of all included components: Motor, Glass Bowl, Bowl Lid, User Manual, Chopping Blade Set, Silicone Ring Mat, USB Cable, and Scraper.

1. **Motor Unit:** Contains the rechargeable battery and control buttons.
2. **Glass Bowl (1.2L):** Durable, transparent bowl for processing food.
3. **Bowl Lid:** Secures the bowl and motor unit during operation.
4. **Chopping Blade Set:** Four sharp stainless steel blades for efficient chopping.
5. **USB Cable:** For charging the motor unit.
6. **Scraper:** For easy removal of processed food.
7. **Silicone Ring Mat:** Provides stability and prevents slipping.
8. **User Manual:** This document.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge the food processor. The built-in 6000mAh battery provides extended cordless operation.



USB Rechargeable, Cordless Use

Used for more than **90** times after a full charge

6000mAh battery

Power Bank

Computer

USB Charger

* The machine cannot be used during charging.

Image: The food processor motor unit being charged via USB. Illustrations show charging from a power bank, computer, and USB wall charger. The battery indicator lights are visible.

- Connect the provided USB cable to the charging port on the motor unit.
- Plug the other end into a USB power source (e.g., USB charger, power bank, laptop).
- The blue indicator lights on the motor unit will illuminate during charging. A full charge typically takes approximately 4 hours.
- Once fully charged, the lights will indicate full battery. The appliance cannot be used while plugged in and charging.

3.2 Assembly

Assemble the components before adding food.

Make sure to wear protection while assembling.

① Put them together



② Push it down and rotate it clockwise till it is properly locked in the slot



Image: A two-step diagram showing how to assemble the chopping blade onto its shaft and then how to properly lock it into the slot by pushing down and rotating clockwise.

1. Place the silicone ring mat on a stable, flat surface.
2. Position the glass bowl onto the silicone mat.
3. Carefully place the chopping blade set onto the central pin inside the glass bowl. **Warning: Blades are sharp. Handle with extreme care.**
4. Add your ingredients to the glass bowl. Do not overfill.
5. Place the bowl lid onto the glass bowl, ensuring it is properly aligned.
6. Place the motor unit onto the lid, aligning the drive shaft with the blade assembly. Push down and rotate clockwise until it is properly locked in the slot.

4. OPERATING INSTRUCTIONS

The food processor features two speed levels for versatile food preparation.



Image: A user operating the food processor, demonstrating the two speed buttons. Examples of foods suitable for low speed (garlic, celery, chili) and high speed (meat, carrot, ice cube) are shown with recommended processing times.

1. Ensure the unit is correctly assembled and charged.
2. Press the desired speed button on top of the motor unit to start processing.
 - **Speed I (Low Speed):** Ideal for softer ingredients like garlic, celery, and chili. Process for 5-10 seconds.
 - **Speed II (High Speed):** Suitable for harder ingredients such as meat, carrots, and ice cubes. Process for 15-20 seconds.
3. Release the button to stop operation.
4. Check the consistency of the food. If further processing is needed, repeat the steps.

Note: Do not chop large chunks of frozen meat or vegetables. Always defrost first and cut into small pieces for optimal results and to prevent damage to the blades or motor.

4 Sharp Cross Blades

Fast and effective to chop food in seconds



Image: A detailed view of the four sharp cross blades, illustrating their effectiveness for various tasks such as chopping onions, whipping cream, mixing ingredients, blending sauces, and stirring meat.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your food processor.



Image: A split image demonstrating hand washing the glass bowl under running water and the glass bowl and blades being placed in a dishwasher. The motor unit is shown with a 'Wipe Only' label, and the lid with 'Hand Wash Only'.

- Always unplug the motor unit from the charging cable before cleaning.
- Disassemble all parts: motor unit, lid, blade set, and glass bowl.
- **Motor Unit:** Wipe clean with a damp cloth. Do not immerse in water.
- **Glass Bowl and Chopping Blade Set:** These parts are dishwasher safe. Alternatively, they can be hand-washed

with warm, soapy water. **Handle blades with extreme caution.**

- **Lid and Silicone Ring Mat:** Hand wash with warm, soapy water.
- Ensure all parts are thoroughly dry before reassembling or storing.

6. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Low battery or not charged. Improper assembly.	Charge the unit fully. Ensure the motor unit is correctly locked onto the lid and bowl.
Food is not chopped evenly.	Overfilling the bowl. Ingredients are too large.	Reduce the amount of food. Cut ingredients into smaller, uniform pieces. Use appropriate speed setting.
Blades are stuck or motor struggles.	Too much food or ingredients are too hard.	Remove some food. Cut hard ingredients into smaller pieces. Ensure frozen items are defrosted.
Unit stops during operation.	Overload protection activated. Low battery.	Remove some food, let the unit cool down for a few minutes, then restart. Recharge the battery.
Battery does not hold charge.	Battery degradation or charging issue.	Ensure the USB cable and power source are functioning correctly. If the issue persists, contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the SF SUNFUNY Cordless Food Processor.

Feature	Specification
Brand	SF SUNFUNY
Model	1.2L
Special Features	Adjustable Speed Control, Auto Shut Off, Safety Lock, USB Rechargeable, Wireless Cordless Operation
Product Dimensions	5.5"D x 7.5"W x 9.5"H
Color	White
Bowl Capacity	1.2 Liters (5 cups)
Recommended Uses	Blend, Chop, Grind, Mince, Slice
Number of Speeds	2
Product Care Instructions	Dishwasher Safe (bowl and blades), Hand Wash (lid), Wipe Only (motor)
Included Components	Chopping Blade, Lid, Mini Scraper, USB Cable
Blade Material	Stainless Steel
Power Source	Battery Powered
Battery Type	3 Lithium Ion batteries (included)

Feature	Specification
Item Weight	3 pounds

8. WARRANTY AND SUPPORT

SF SUNFUNY provides a warranty and customer support for this product.

- **Warranty:** This product includes a 1-year guarantee from the date of purchase.
- **Customer Support:** For any problems, questions, or warranty claims, please contact SF SUNFUNY customer service. Refer to your purchase documentation for specific contact details or visit the official SF SUNFUNY store page on Amazon.