

Andis 74100

Andis 74100 GTX-EXO Professional Cord/Cordless Lithium-ion Electric Beard & Hair Trimmer

Instruction Manual

1. PRODUCT OVERVIEW

The Andis GTX-EXO Trimmer is a professional-grade cord/cordless lithium-ion electric tool designed for beard and hair trimming. It features retooled GTX-Z blades for closer cutting, enhanced visibility for precision detailing, and consistent power delivery through Constant Speed Technology.

- **Professional Trimmer:** Equipped with retooled GTX-Z blades designed for closer cuts and zero-gapping without modification.
- **Precision:** The intuitive shape of the GTX-EXO Trimmer provides extreme visibility for detailed outlining, shaving, and fading at any angle.
- **Powerful:** A high-capacity lithium-ion battery ensures consistent power for over 100 minutes of continuous operation.
- **Constant Speed Technology:** Delivers consistent cutting performance at 7,200 strokes per minute (spm) across all hair types, ensuring smooth trimming for total body grooming.
- **Carbon-Steel Blade:** The durable GTX-Z blades are made from carbon-steel, retooled for precision and finished in gold.



Figure 1: Front view of the Andis 74100 GTX-EXO Trimmer, showcasing its sleek black design and gold-finished blade.

2. SAFETY INFORMATION

Please read all instructions carefully before using the Andis GTX-EXO Trimmer to ensure safe operation

and prevent injury.

- Always unplug the trimmer when not in use.
- Do not use the trimmer near water sources, such as bathtubs, showers, or sinks.
- Keep the trimmer out of reach of children and infants.
- Always keep the trimmer blades away from your eyes and sensitive skin areas.
- Follow all recommended cleaning and maintenance procedures to ensure longevity and safe operation.

3. SETUP

3.1 Initial Charging

Before initial use, fully charge the trimmer. The lithium-ion battery provides over 100 minutes of consistent power when fully charged.

1. Connect the charging adapter to the charging stand.
2. Place the trimmer onto the charging stand. Ensure the trimmer is securely seated.
3. The indicator light on the trimmer will illuminate to show it is charging.



Figure 2: The Andis 74100 GTX-EXO Trimmer placed on its charging stand, with the indicator light illuminated.

3.2 Blade Adjustment (Zero-Gapping)

The GTX-Z blades are retooled to cut closer and can be zero-gapped without modification. Refer to the included 'Replacing Blade Yoke' pamphlet for detailed instructions on blade adjustment if necessary.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To power on the trimmer, slide the power switch to the 'I' position. To power off, slide the switch to the 'O'

position.



Figure 3: Front view of the trimmer, highlighting the power switch for easy operation.

4.2 Cord/Cordless Operation

The GTX-EXO Trimmer offers both corded and cordless flexibility. Use it cordless for maximum mobility or

plug it in for continuous power during extended use.

- **Cordless:** Ensure the trimmer is fully charged for optimal performance.
- **Corded:** Connect the power cord directly to the trimmer and a suitable power outlet.





Figure 4: The trimmer shown with its detachable power cord, illustrating the corded operation option.

4.3 Trimming Techniques

Utilize the trimmer on the desired hair or beard area. The precision design allows for extreme visibility, making it ideal for detailed work.

- For outlining, hold the trimmer at a slight angle against the skin and create clean lines.
- For fading, use a gentle, sweeping motion, gradually moving the trimmer away from the skin.
- The Constant Speed Technology ensures consistent cutting performance through all hair types, preventing dragging or stalling.



Figure 5: A graphic highlighting key features of the GTX-EXO Trimmer, including its durable gold blade, iconic T-Outliner shape, high-speed performance, and cord/cordless flexibility.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. After each use, brush off any loose hair from the blades using the provided cleaning brush.

2. For a more thorough clean, detach the blade assembly if necessary (refer to blade replacement instructions).
3. Wipe the trimmer body with a clean, dry cloth. Do not immerse the trimmer in water.

5.2 Lubrication

Apply a few drops of lubricating oil to the blades before and after each use to maintain cutting efficiency and prevent rust.

1. Turn the trimmer on.
2. Apply 2-3 drops of lubricating oil across the top of the blades.
3. Allow the trimmer to run for a few seconds to distribute the oil evenly.
4. Turn the trimmer off and wipe off any excess oil.

5.3 Blade Replacement

If the blades become dull or damaged, they can be replaced. Refer to the 'Replacing Blade Yoke' pamphlet included with your product for detailed instructions.

6. TROUBLESHOOTING

If you encounter any issues with your Andis GTX-EXO Trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the trimmer is fully charged or connected to a power source. Check the power switch position.
- **Blades pulling hair:** Clean the blades thoroughly and apply lubricating oil. If the issue persists, the blades may be dull and require replacement or adjustment.
- **Reduced power/speed:** Recharge the trimmer. If using corded, ensure the power cord is securely connected and the outlet is functional.

For further assistance, please contact Andis customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	74100
Brand	Andis
Power Source	Battery Powered (Lithium-ion)
Run Time	Over 100 minutes
Blade Type	Carbon-Steel GTX-Z Blade (Gold Finish)
Motor Speed	7,200 spm (Constant Speed Technology)
Item Weight	2 Pounds
Color	Black
Recommended Uses	Beard, Head (Total Body Grooming)

UPC	040102741005
-----	--------------

8. WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Andis website. You can also visit the [Andis Store on Amazon](#) for more product information and support resources.