

[manuals.plus](#) /

› [LuxenHome](#) /

› [LuxenHome Rustic Wood Nightstand and Side Table Instruction Manual](#)

LuxenHome Rustic Wood Nightstand

LuxenHome Rustic Wood Nightstand and Side Table Instruction Manual

Model: Rustic Wood Nightstand | UPC: 810053166154 | ASIN: B09F61FGY9

1. INTRODUCTION

This manual provides essential information for the assembly, use, and maintenance of your LuxenHome Rustic Wood Nightstand and Side Table. Please read these instructions carefully before assembly and retain them for future reference. This product is designed for indoor use as a storage cabinet, nightstand, or end table.



Image 1.1: Front view of the LuxenHome Rustic Wood Nightstand, featuring a distressed multi-color finish, a single drawer, and a cabinet door.

2. SAFETY INFORMATION

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload the drawer or cabinet. Distribute weight evenly.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not stand or climb on the unit.
- Place the unit on a level surface to prevent tipping.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Main Cabinet Body (Pre-assembled)
- Drawer Pull Knob (1)
- Cabinet Door Knob (1)
- Assembly Hardware (Screws for knobs)
- Instruction Manual (This document)



Image 3.1: Diagram showing the dimensions of the nightstand, including the drawer and cabinet interior. Overall dimensions are approximately 15.75" W x 18.9" D x 29.9" H.

4. SETUP AND ASSEMBLY

This unit comes largely pre-assembled. Only minimal assembly is required.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent damage.
2. **Attach Drawer Knob:** Locate the drawer knob and the corresponding screw. Insert the screw from the inside of the drawer front through the pre-drilled hole, then thread the knob onto the screw from the outside. Tighten securely by hand.
3. **Attach Cabinet Door Knob:** Locate the cabinet door knob and its screw. Insert the screw from the inside of the cabinet door through the pre-drilled hole, then thread the knob onto the screw from the outside. Tighten securely by hand.
4. **Position the Unit:** Carefully lift the assembled nightstand and place it in your desired location. Ensure it is on a stable, level surface.

Note: If the cabinet door magnet is not attached, or if there are no pre-drilled holes for it, contact customer support for assistance. Do not attempt to drill new holes without proper guidance.

5. OPERATING INSTRUCTIONS

The LuxenHome Rustic Wood Nightstand and Side Table is designed for convenient storage and display.

- **Drawer Use:** The top drawer provides enclosed storage for smaller items. Pull the knob to open and push to close.
- **Cabinet Use:** The lower cabinet offers larger storage space. Pull the knob to open the door and push to close.
- **Top Surface:** The sturdy top surface can be used to place lamps, books, decorative items, or beverages.



Image 5.1: The nightstand positioned in a living room, demonstrating its use as a side table next to a chair.

6. MAINTENANCE AND CARE

To ensure the longevity and appearance of your nightstand, follow these care instructions:

- **Cleaning:** Wipe with a dry cloth to remove dust and debris. Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the distressed finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Stability Check:** Periodically check all connections and tighten any loose screws to maintain stability.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit is wobbly.	Uneven floor or loose connections.	Ensure the unit is on a level surface. Check and tighten all screws.
Drawer sticks or does not slide smoothly.	Obstruction in the drawer glides or misaligned drawer.	Empty the drawer and check for any obstructions. Ensure the drawer is properly seated on its glides.
Cabinet door does not close properly.	Misaligned hinges or magnet.	Check hinge alignment. If a magnet is present, ensure it is securely attached and aligned with the strike plate.

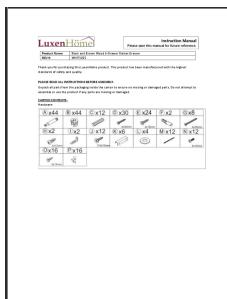
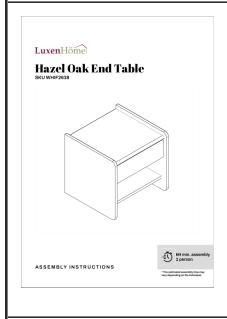
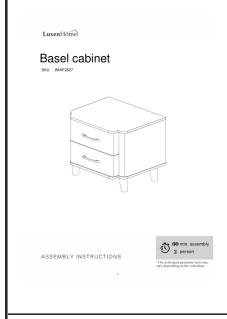
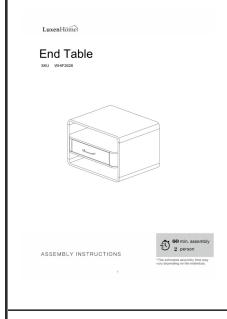
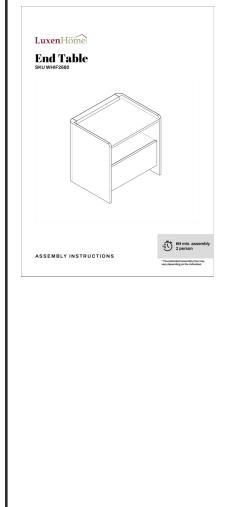
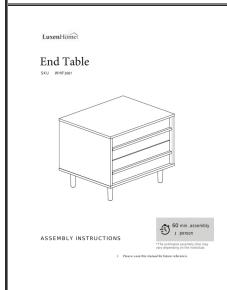
8. SPECIFICATIONS

Brand:	LuxenHome
Model:	Rustic Wood Nightstand and Side Table
Dimensions (W x D x H):	15.75 x 18.9 x 29.9 inches
Color:	Blue, Brown (Distressed Finish)
Material:	Wood
Number of Drawers:	1
Assembly Required:	Yes (Minimal)
Product Care:	Wipe with Dry Cloth
UPC:	810053166154
ASIN:	B09F61FGY9

9. WARRANTY AND SUPPORT

LuxenHome products are manufactured with quality and care. For any questions regarding assembly, missing parts, or product defects, please contact LuxenHome customer support through the retailer's platform or the official LuxenHome website. Please have your purchase details and product model information ready when contacting support.

For more information, visit the [LuxenHome Store on Amazon](#).

	<p>LuxenHome Black and Brown Wood 6-Drawer Rattan Dresser Assembly Instructions</p> <p>Comprehensive assembly instructions for the LuxenHome Black and Brown Wood 6-Drawer Rattan Dresser (SKU: WHIF1825). Includes a list of all parts, hardware, and step-by-step guidance for assembly.</p>
	<p>LuxenHome Hazel Oak End Table Assembly Instructions - Model WHIF2638</p> <p>Comprehensive assembly instructions for the LuxenHome Hazel Oak End Table (SKU WHIF2638). Learn how to assemble your new end table with clear steps, parts list, and hardware details. Estimated assembly time: 60 minutes for 2 people.</p>
	<p>LuxenHome Basel Cabinet WHIF2627 Assembly Instructions</p> <p>Comprehensive assembly guide for the LuxenHome Basel cabinet (SKU WHIF2627). Includes a detailed parts list, hardware inventory, step-by-step instructions, and safety warnings.</p>
	<p>LuxenHome End Table Assembly Instructions (SKU WHIF2628)</p> <p>Comprehensive assembly instructions for the LuxenHome End Table (SKU WHIF2628). Includes a detailed parts list, hardware guide, step-by-step assembly process, safety warnings, and customer support information.</p>
	<p>LuxenHome End Table Assembly Instructions WHIF2680</p> <p>Step-by-step assembly instructions for the LuxenHome End Table (SKU WHIF2680). Includes tools required, parts list, hardware details, and support information.</p>
	<p>LuxenHome WHIF 2681 End Table Assembly Instructions and User Manual</p> <p>Comprehensive assembly instructions and user manual for the LuxenHöme WHIF 2681 End Table. Includes parts list, hardware details, step-by-step assembly guide, safety warnings, and support contact information.</p>

