

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GENIANI](#) /
- › [GENIANI Electric Spin Scrubber \(Model G-ELSPS\) Instruction Manual](#)

GENIANI G-ELSPS

GENIANI Electric Spin Scrubber (Model G-ELSPS) Instruction Manual

Brand: GENIANI | Model: G-ELSPS

PRODUCT OVERVIEW

The GENIANI Electric Spin Scrubber is a cordless cleaning device designed for efficient and versatile use across various household surfaces. Featuring a powerful motor and multiple interchangeable brush heads, it simplifies cleaning tasks in bathrooms, kitchens, and other areas.



Image: The main unit of the GENIANI Electric Spin Scrubber, showcasing its ergonomic design and brush attachment point.

PACKAGE CONTENTS

- Main Scrubber Unit
- Adjustable Extension Handle (multiple sections)
- Large Flat Brush Head
- Corner Brush Head
- Dome Brush Head
- USB-C Charging Cable
- Wall Mount Holder (with screws)

HIGH-POWER SCRUBBER FOR DEEP CLEANING



Clean Any Dirt

300
r/min

Spin Speed



Cordless
and Powerful



Image: All components of the GENIANI Electric Spin Scrubber package, including the main unit, extension handle, various brush heads, and charging cable.

SETUP AND ASSEMBLY

Assembling the Handle

1. Connect the desired extension handle sections by twisting them securely.
2. Attach the assembled handle to the main scrubber unit by aligning the connection points and pushing until it clicks into place.
3. To adjust the length, press the release button on the handle and slide to the desired length (25, 40, or 45 inches).

Attaching Brush Heads

1. Align the central shaft of the desired brush head with the attachment point on the main scrubber unit.
2. Push the brush head firmly onto the unit until it is securely seated.
3. To remove a brush head, simply pull it off the unit.

Video: Demonstration of how to install and remove the brush heads on the electric spin scrubber.

CHARGING THE DEVICE

The GENIANI Electric Spin Scrubber is powered by a 2500mAh Lithium Ion battery. Ensure the device is fully charged before first use for optimal performance.

1. Locate the charging port on the main scrubber unit.
2. Connect the provided USB-C charging cable to the port.
3. Plug the other end of the USB-C cable into a compatible USB power adapter (not included).
4. A full charge typically takes approximately 3.5 hours. The battery indicator lights will show the charging status.

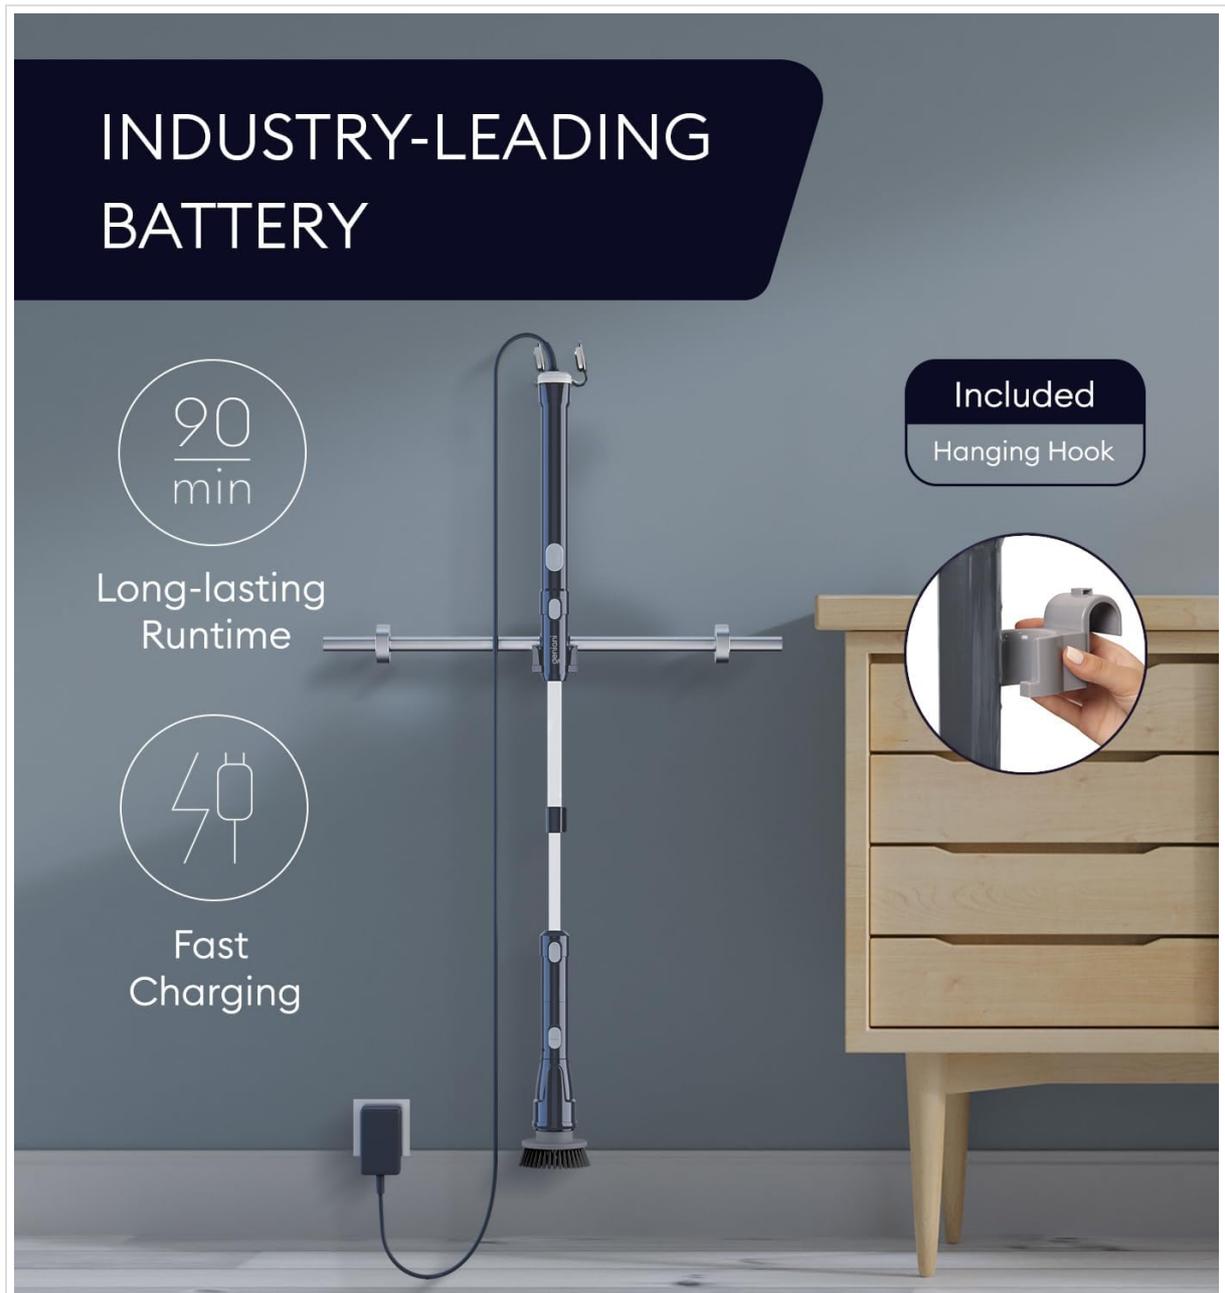


Image: The electric spin scrubber connected to its charging cable, illustrating the charging process.

OPERATING INSTRUCTIONS

Powering On/Off and Speed Modes

- Press the power button once to turn on the scrubber at the default speed (280 RPM).
- Press the power button again to switch to the higher speed mode (380 RPM).
- Press the power button a third time to turn off the device.
- The LED indicator lights on the handle display the current battery level.

Using the Extension Handle

The retractable stainless-steel handle allows for adjustable lengths of 25, 40, or 45 inches. This feature is ideal for reaching high areas, low spots, or tight corners without excessive bending or stretching.



Image: The electric spin scrubber demonstrating its adjustable handle, showing different lengths for various cleaning tasks.

BRUSH HEAD USAGE GUIDE

Select the appropriate brush head for your specific cleaning task:

Large Flat Brush

Perfect for cleaning concave surfaces such as showers, tubs, bathtubs, sinks, baseboards, or toilets.

Corner Brush

Excellent for cleaning tile grout, edges, corners, crannies, and other tight, hard-to-reach places.

Dome Brush

Designed to cover large flat surfaces, including floors, tiles, walls, doors, windows, furniture, pools, stoves, carpets, and ceramic surfaces.



Image: Close-up view of the large flat brush, corner brush, and dome brush, highlighting their distinct shapes and bristle patterns.

MAINTENANCE AND CARE

- **Cleaning Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water to remove any cleaning solution or debris. Allow to air dry completely before storing.
- **Cleaning the Main Unit:** The scrubber features a sealed design for water resistance. Wipe the main unit with a damp cloth to clean. **Do not submerge the main unit in water.**
- **Storage:** Store the scrubber and its accessories in a dry place away from direct sunlight. The included wall mount can be used for convenient storage.

TROUBLESHOOTING

- **Device Not Turning On:** Ensure the battery is fully charged. Connect the charging cable and allow sufficient time for charging.
- **Brush Not Spinning Effectively:** Check that the brush head is securely attached. Apply light pressure during cleaning; excessive force may slow down the motor. Ensure the battery has sufficient charge.
- **Unusual Noise:** Disassemble the unit and check for any debris or obstructions in the brush head or motor area. Reassemble securely.

SPECIFICATIONS

- **Brand:** GENIANI
- **Model:** G-ELSPS
- **Battery:** 2500mAh Lithium Ion
- **Runtime:** Up to 90 minutes
- **Charging Time:** Approximately 3.5 hours
- **Operation Modes:** 2 speeds (380 RPM & 280 RPM)
- **Handle Material:** Stainless Steel
- **Adjustable Handle Lengths:** 25, 40, 45 inches
- **Noise Level:** <70dB
- **Waterproof:** Sealed design (resistant to splashes, not for submersion)
- **Item Weight:** 3.54 Pounds

WARRANTY AND SUPPORT

The GENIANI Electric Spin Scrubber (Model G-ELSPS) comes with a 1-year quality warranty. For any issues, questions, or to initiate a hassle-free replacement process, please contact GENIANI customer support. Refer to the product packaging or the official GENIANI website for contact information.