

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [All-Clad](#) /

› [All-Clad Electric Stainless Steel 4-Slice Waffle Maker \(Model 10942227021\) Instruction Manual](#)

### All-Clad 10942227021

## All-Clad Electric Stainless Steel 4-Slice Waffle Maker

Model: 10942227021

### INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your All-Clad Electric Stainless Steel 4-Slice Waffle Maker. Please read all instructions carefully before first use and retain this manual for future reference.



*The All-Clad Electric Stainless Steel 4-Slice Waffle Maker, featuring a sleek design and digital controls.*

### IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW

The All-Clad Waffle Maker is designed to produce up to four deep-pocketed, square-shaped Belgian waffles. It features a digital screen, audible alerts, and multiple browning levels for customized results.

### Key Features:

- **4-Slice Capacity:** Makes four square waffles, approximately 4.5 inches wide and 1 inch thick.
- **Digital Control Panel:** Features an LCD screen for selecting waffle types and browning levels.
- **7 Browning Levels:** Adjustable settings to achieve desired waffle crispness.
- **6 Recipe Settings:** Includes Classic, Belgian, Berry, Chocolate, Buttermilk, and Gluten-Free options.
- **Audible Alerts:** Beeps when ready to pour batter and when waffles are done.
- **Steam-Release System:** Multiple vents release excess moisture for crispy exteriors and fluffy interiors.
- **Removable, Nonstick Plates:** PFOA-free nonstick plates are easy to clean and dishwasher-safe.
- **Overflow Tray:** Catches excess batter for easier cleanup.
- **Vertical Storage:** Designed for space-saving upright storage.

### Product Visuals:



Makes 4 square waffles about  
4 1/2 inches wide & 1 inch thick

Four square waffles cooking in the maker, each approximately 4.5 inches wide and 1 inch thick.



**Extra-deep pockets to hold more toppings**

Waffles with extra-deep pockets, ideal for holding various toppings.




**Safe, PFOA-free nonstick coating for easy release**

Waffle easily releasing from the PFOA-free nonstick cooking surface.




**LED lights & audible beep when ready to bake & eat**

The digital screen showing settings and an audible beep alert for readiness.

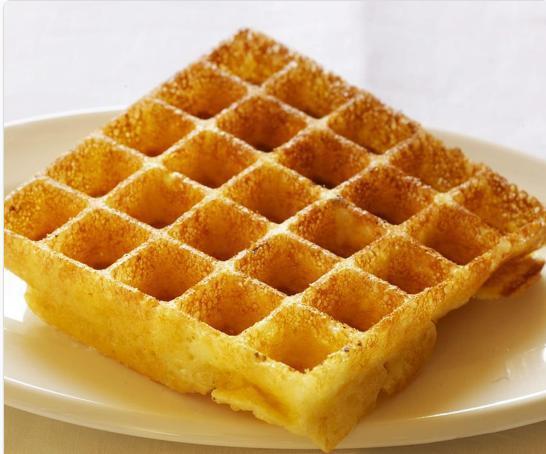

### 6 adjustable browning levels

A perfectly cooked waffle, demonstrating one of the 7 adjustable browning levels.

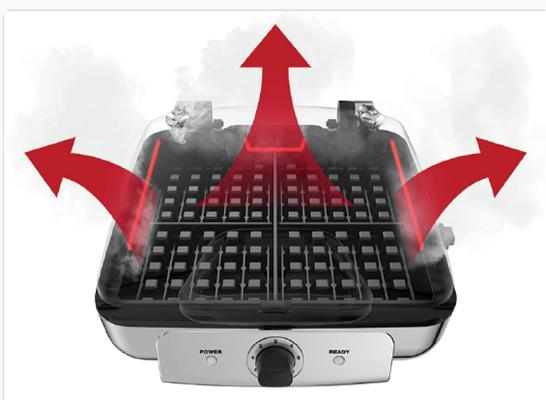

### Steam vents release excess moisture for crispy outsides & fluffy inside

Steam vents actively releasing moisture, ensuring crispy waffles.

## Product Video:

Your browser does not support the video tag.

Official product overview of the All-Clad Digital Home Waffle Maker, demonstrating its features and operation.

## SETUP


- 1. Unpack:** Carefully remove all packaging materials and promotional labels from your waffle maker.
- 2. Clean Plates:** Before first use, wash the removable waffle plates and overflow tray in warm, soapy water, rinse thoroughly, and dry.
- 3. Install Plates:** Ensure the waffle maker is unplugged and cool. Insert the bottom plate first, aligning the notches with the silver metal elements at the back and ensuring the overflow piece is correctly positioned. Gently press down until it clicks into place. Repeat for the top plate, ensuring it hooks into the corresponding knobs. The plates should sit securely.
- 4. Position:** Place the waffle maker on a clean, dry, flat, heat-resistant surface.
- 5. Plug In:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

## OPERATING INSTRUCTIONS

- Power On:** Turn the 'SELECT' knob from 'OFF' to choose your desired waffle type (Classic, Belgian, Berry, Chocolate, Buttermilk, or Gluten-Free). The selected option will be highlighted on the LCD screen.
- Select Browning Level:** Use the 'SHADE' knob to select your preferred browning level from 1 (lightest) to 7 (darkest).
- Preheat:** The waffle maker will begin preheating. The digital display will show a circular progress indicator and 'PREHEAT'. Do not open the lid during preheating.
- Add Batter:** Once preheating is complete, an audible beep will sound, and 'READY' will appear on the display. Carefully open the lid and pour your waffle batter onto the bottom plate. Close the lid.
- Cooking:** The waffle maker will begin cooking. The display will show a countdown timer.
- Waffles Done:** When cooking is complete, an audible beep will sound, and 'DONE' will appear on the display. Carefully open the lid and remove the waffles using a heat-resistant, non-metallic utensil.
- Reheat Function:** If you wish to reheat a previously cooked waffle, place it back in the maker, close the lid, and press the 'REHEAT' button. The display will show 'REHEAT' and a progress indicator.  
Note: The reheat function is limited to a specific duration to prevent overcooking.
- Extra Time:** If your waffles require additional cooking time after the cycle finishes, press the '+TIME' button to add a short extension.

## CLEANING AND MAINTENANCE

- Cool Down:** Always unplug the waffle maker and allow it to cool completely before cleaning.
- Remove Plates:** To remove the waffle plates, locate the release buttons on the sides of the appliance. Press these buttons to release the plates, which will pop up slightly. Carefully lift them out.
- Clean Plates:** The removable nonstick plates are dishwasher-safe for convenient cleaning. Alternatively, they can be hand-washed with warm, soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads to protect the nonstick coating.
- Clean Overflow Tray:** Remove the overflow tray from the back of the unit and wash it with warm, soapy water.
- Clean Exterior:** Wipe the exterior of the waffle maker with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- Reinstall Plates:** Ensure plates are completely dry before reinstalling them for storage or next use.

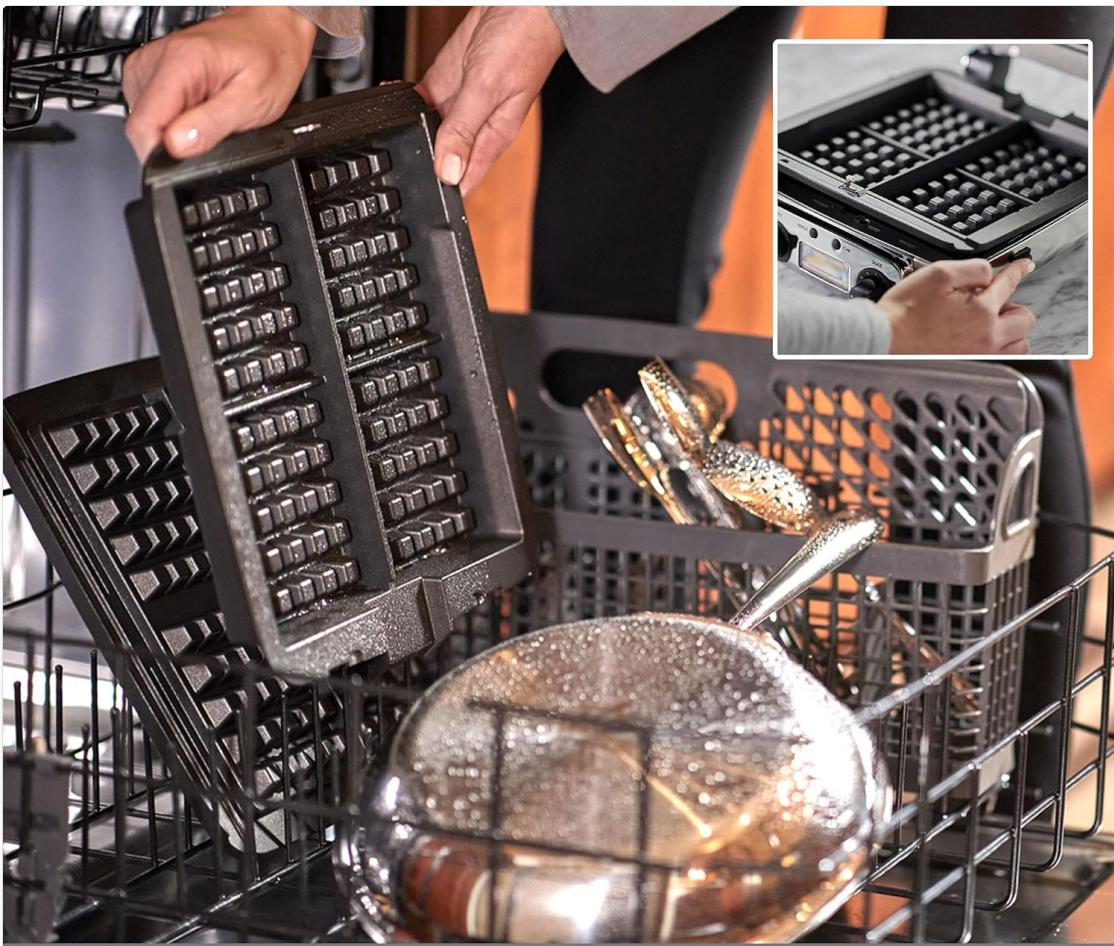

## Removable, dishwasher-safe plates for the easiest cleanup ever

Removable, dishwasher-safe plates for easy cleaning.

### STORAGE

The All-Clad Waffle Maker is designed for compact, vertical storage to save counter or cabinet space.

- Ensure the appliance is completely cool and clean before storing.
- Close the lid and engage the locking mechanism on the handle.
- The waffle maker can be stored upright on its feet.
- The power cord can be wrapped around the legs for tidy storage.

### TROUBLESHOOTING

| Problem   | Possible Cause  | Solution   |
|---|---|--|
| Waffle maker does not turn on.                          | Not plugged in, power outage, faulty outlet.  | Ensure the unit is securely plugged into a working outlet. Check circuit breaker.                          |
| Waffles are not cooking evenly or to desired crispness. | Incorrect browning level selected, uneven batter distribution, lid opened during preheat. | Adjust the 'SHADE' setting. Ensure batter is evenly spread. Allow full preheat cycle before adding batter. |

| Problem   | Possible Cause   | Solution   |
|---|--|--|
| 'E' (Error) message on display.                   | Lid opened prematurely during preheat or cooking cycle.          | Close the lid and allow the cycle to complete or reset the unit. Avoid opening the lid until prompted.                                   |
| Waffle plates are difficult to remove or install. | Plates not aligned correctly, release buttons not fully pressed. | Ensure plates are aligned with the guides and release buttons are fully depressed. Do not force.   |
| Unit trips GFCI breaker.                          | High wattage appliance on a sensitive circuit.                   | Try plugging into a different GFCI outlet or a non-GFCI outlet if available and safe to do so. Consult an electrician if issues persist. |

## SPECIFICATIONS

- Model Number:** 10942227021
- ASIN:** B09F74MPCL
- Special Feature:** Programmable
- Color:** Silver
- Material:** Stainless Steel
- Product Dimensions:** 15.59"D x 10.75"W x 5.94"H
- Wattage:** 1600 watts
- Item Weight:** 17.75 pounds
- Voltage:** 110V
- Number of Settings:** 6 recipe settings, 7 browning levels
- Included Components:** Recipe Booklet





Visual representation of the waffle maker's dimensions.

## WARRANTY AND SUPPORT

This All-Clad Waffle Maker comes with a Limited Warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official All-Clad website.

For customer support, service, or replacement parts, please contact All-Clad customer service through their official channels.

## Related Documents - 10942227021
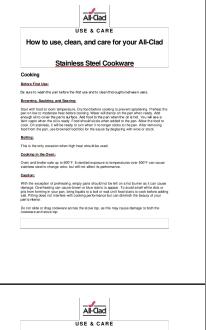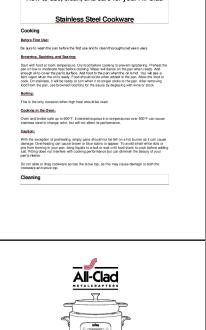
|   |   |
|---|---|
|   | <p><a href="#"><u>All-Clad D5 Stainless Cookware: Cooking and Care Guide</u></a></p> <p>Discover the All-Clad D5 Stainless cookware collection, featuring patented 5-ply bonding for superior heat distribution. Learn about cooking techniques, oven safety, and easy cleaning for lasting performance. Made in the USA.</p>                                     |
|  | <p><a href="#"><u>All-Clad Cookware: Comprehensive Use, Cleaning, and Care Guide</u></a></p> <p>Detailed instructions for using, cleaning, and maintaining All-Clad cookware, including stainless steel, nonstick, hard anodized, cast iron, forged knives, copper, wood tools, trivets, and bakeware. Covers cooking techniques, stain removal, and storage.</p> |
|  | <p><a href="#"><u>All-Clad Cookware: Comprehensive Use, Cleaning, and Care Guide</u></a></p> <p>Learn how to properly use, clean, and care for your All-Clad stainless steel, nonstick, hard anodized, cast iron cookware, forged knives, copper, wood tools, trivets, and bakeware for lasting performance and beauty.</p>                                       |
|  | <p><a href="#"><u>All-Clad 5Qt Electric Dutch Oven Owner's Guide SD922D51</u></a></p> <p>User manual and guide for the All-Clad 5Qt. Electric Dutch Oven (Model SD922D51). Covers safety, operation, cleaning, troubleshooting, and recipes for this versatile kitchen appliance.</p>   |

|   |   |
|---|---|
|  <p>All-Clad Gourmet 7Qt Plus Multi-cooker Owner's Guide and Instructions</p>        | <p>Detailed owner's guide and instructions for the All-Clad Gourmet 7Qt Plus Multi-cooker (Model SD800D51), covering setup, usage, cooking functions, cleaning, troubleshooting, and warranty information.</p>  |
|  <p>All-Clad Fondue Pot with Cast Aluminum Insert Owner's Guide and Instructions</p> | <p><a href="#">All-Clad Fondue Pot with Cast Aluminum Insert: Safety, Usage, and Care Guide</a></p> <p>Comprehensive guide to using and caring for your All-Clad Fondue Pot with Cast Aluminum Insert, including safety instructions, cleaning tips, and usage recommendations for various fondues.</p> |