

## acer GP.ACC11.00X

# Acer Wireless Keyboard & Mouse Bundle User Manual

Model: GP.ACC11.00X

### Sections:

[Introduction](#) [Product](#)

[Overview](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. INTRODUCTION

This user manual provides detailed instructions for the Acer Wireless Keyboard & Mouse Bundle (Model: GP.ACC11.00X). This bundle includes an RF Wireless Optical Mouse and an RF Wireless Keyboard, designed for reliable and responsive control. The compact and slim design offers a clutter-free desk and a comfortable, quiet typing experience. Please read this manual thoroughly before using the product to ensure proper setup and operation.

## 2. PRODUCT OVERVIEW

The Acer Wireless Keyboard and Mouse Bundle offers essential peripherals for your computing needs. Key features include:

- **Mouse:** Slim Mouse with Smooth, Silent Clicks and Soft Side Grips.
- **Mouse Buttons:** 3 | Mouse Resolution: 1600dpi.
- **Keyboard:** Space-Saving Layout with 74 Keys (11 Hot Keys).
- **Connectivity:** 2.4GHz Wireless Technology (Up to 32 feet).
- Goes into sleep mode when keyboard or mouse is not being used.
- Plug and Play Design.

### Product Components



Figure 2.1: The Acer Wireless Keyboard and Mouse Bundle, showcasing both devices in a compact design.



Figure 2.2: Top-down view of the Acer Wireless Keyboard, highlighting its compact layout and function keys.



Figure 2.3: Angled view of the Acer Wireless Keyboard, showing its slim profile and key arrangement.



Figure 2.4: Top-down view of the Acer Wireless Mouse, featuring its ergonomic shape and scroll wheel.



Figure 2.5: Angled view of the Acer Wireless Mouse, highlighting its side grips and overall design.

### 3. SETUP

The Acer Wireless Keyboard and Mouse Bundle is designed for quick and easy setup. Follow these steps to get started:

#### 1. Install Batteries:

- For the mouse: Open the battery compartment on the underside of the mouse. Insert one AA battery, ensuring correct polarity (+/-). Close the compartment.
- For the keyboard: Open the battery compartment on the underside of the keyboard. Insert two AAA batteries, ensuring correct polarity (+/-). Close the compartment.



Figure 3.1: Underside of the Acer Wireless Mouse, showing the battery compartment and USB receiver storage.

- #### 2. Connect USB Receiver:
- Locate the small USB receiver, typically stored within the mouse's battery

compartment. Plug this receiver into an available USB port on your computer.

3. **Power On:** Ensure both the keyboard and mouse have their power switches (usually on the underside) set to the "ON" position.
4. **Automatic Connection:** The devices are plug-and-play and should automatically connect to your computer within a few seconds. No additional drivers are typically required.

*Note: If connection issues occur, try plugging the USB receiver into a different USB port or re-inserting the batteries.*

## 4. OPERATING INSTRUCTIONS

### 4.1. Keyboard Usage

The Acer Wireless Keyboard features a compact layout with standard QWERTY keys and 11 hot keys for quick access to common functions. These hot keys may vary slightly in function depending on your operating system (e.g., Chrome OS).

- **Typing:** Use the keys as you would a standard keyboard. The keys are designed for a comfortable and quiet typing experience.
- **Hot Keys:** Utilize the dedicated hot keys for functions such as volume control, media playback, and browser navigation. Refer to your operating system's documentation for specific hot key functionalities.



Figure 4.1: Close-up of the Acer Wireless Keyboard keys, showing the layout and function icons.

## 4.2. Mouse Usage

The Acer Wireless Optical Mouse provides precise and responsive cursor control.

- **Left Click:** Primary button for selecting items, opening files, etc.
- **Right Click:** Secondary button for context menus and additional options.
- **Scroll Wheel:** Scroll through documents and web pages. The scroll wheel also functions as a clickable middle button.
- **DPI:** The mouse operates at 1600 DPI, offering a good balance of speed and precision for general

use.



Figure 4.2: Top view of the Acer Wireless Mouse, indicating its 1600 DPI resolution.

### 4.3. Power Saving Mode

Both the keyboard and mouse are designed to enter a sleep mode automatically when not in use to conserve battery life. To wake them up, simply move the mouse or press any key on the keyboard.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your Acer Wireless Keyboard and Mouse Bundle, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when performance degrades or the low battery indicator (if present) illuminates. Always use fresh, high-quality batteries of the specified type (AA for mouse, AAA for keyboard).
- **Storage:** When not in use for extended periods, turn off both devices to conserve battery life. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the devices to liquids. Spills can cause permanent damage.

## 6. TROUBLESHOOTING

If you encounter issues with your Acer Wireless Keyboard and Mouse Bundle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Devices not responding	Low or dead batteries; USB receiver not connected; devices not powered on.	Replace batteries; ensure USB receiver is securely plugged into a working USB port; turn on both devices.
Intermittent connection or lag	Interference from other wireless devices; distance from receiver; low battery.	Move devices closer to the USB receiver; remove other wireless devices causing interference; replace batteries.
Mouse cursor erratic or not moving smoothly	Dirty optical sensor; unsuitable surface; low battery.	Clean the optical sensor on the underside of the mouse; use on a clean, non-reflective surface or mouse pad; replace batteries.

Problem	Possible Cause	Solution
Keyboard keys not registering	Low battery; connection issue.	Replace batteries; ensure USB receiver is properly connected.

If the problem persists after trying these solutions, please contact Acer customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Acer
Model Number	GP.ACC11.00X
Connectivity Technology	2.4GHz RF Wireless (USB Receiver)
Mouse Resolution	1600 DPI
Mouse Buttons	3
Keyboard Keys	74 (including 11 Hot Keys)
Operating System Compatibility	Chrome OS (and generally compatible with Windows, macOS)
Power Source	Battery Powered (1 AA for mouse, 2 AAA for keyboard)
Item Weight	1.3 pounds (approx.)
Product Dimensions (LxWxH)	15 x 6 x 2 inches (approx.)
Color	Gray

## 8. WARRANTY AND SUPPORT

Acer products come with a standard manufacturer's warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Acer support website.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Acer Customer Service:

- **Online Support:** Visit the [official Acer Store on Amazon](#) or the main Acer support website.
- **Phone Support:** Check your product packaging or Acer's official website for regional contact numbers.

*Please have your product model number (GP.ACC11.00X) and serial number ready when contacting support.*

