

[Manuals.plus](#) /

› [Instant Pot](#) /

› Instant Pot Omni 19QT/18L Toaster Oven Air Fryer User Manual

## Instant Pot 140-4003-01

# Instant Pot Omni 19QT/18L Toaster Oven Air Fryer User Manual

Brand: Instant Pot | Model: 140-4003-01

## PRODUCT OVERVIEW

The Instant Pot Omni 19QT/18L Toaster Oven Air Fryer is a versatile 7-in-1 appliance designed to simplify your cooking. It combines the functionalities of an air fryer and a toaster oven, offering a wide range of cooking methods including air frying, baking, broiling, roasting, toasting, warming, and convection baking. Its EvenCrisp Technology ensures perfectly crispy results with significantly less oil.



Image: The Instant Pot Omni Toaster Oven Air Fryer, showcasing its sleek black design and a roasted chicken being cooked inside.

## Key Features

- **7 Cooking Functions:** Air fry, bake, broil, roast, toast, warm, and convection bake, all in one easy appliance with little to no preheating time.
- **EvenCrisp Technology:** Achieve the perfect crunch with 95% less oil than traditional deep frying.
- **Just How You Like It:** Three toast levels provide everyone with their preferred finish.
- **Family-Sized Capacity:** Space for 6 slices of bread, or a 12" pizza lets you feed the whole family.
- **Purposeful Precision:** Adjustable temperature range from 170°F to 450°F.
- **Quick Cleanup:** The dishwasher-safe enamel tray and air frying basket make clean-up a breeze.
- **Power Packed Performance:** 1800 watts, 120V/60Hz, UL & ULC Listed.
- **A Little Extra:** Includes an enamel baking tray, stainless-steel oven rack, and air frying basket.

## SETUP

Before first use, carefully unpack the Instant Pot Omni and remove all packaging materials, including any protective films or inserts. Place the appliance on a stable, level, heat-resistant surface, ensuring adequate clearance from walls and other appliances for proper ventilation. It is recommended to clean all accessories and the interior of the oven with warm, soapy water before initial use, then wipe dry.

## Included Accessories

- Enamel Baking Tray
- Stainless-Steel Oven Rack
- Air Frying Basket

# Countertop do-it-all

**Includes 3 accessories to get the most out of your Omni® oven:**



Image: The Instant Pot Omni Toaster Oven Air Fryer displayed alongside its three primary accessories: the air fry basket, stainless-steel oven rack, and enamel baking tray.

## OPERATING INSTRUCTIONS

The Instant Pot Omni offers intuitive controls for its multiple cooking functions. Familiarize yourself with the control panel, which typically includes a digital display, a control knob for temperature and time adjustments, and buttons for Start, Cancel, and light control.

### Cooking Functions

Select your desired cooking function using the control knob or dedicated buttons. The temperature can be adjusted from 170°F to 450°F, and cooking time can be set as needed. The appliance heats up quickly, often requiring little to no preheating.

- **Air Fry:** Ideal for achieving crispy textures with minimal oil. Use the air frying basket for best results.
- **Bake:** Perfect for cakes, cookies, and casseroles. Use the enamel baking tray or your own oven-safe bakeware.
- **Broil:** For browning the top of dishes or cooking thin cuts of meat.

- **Roast:** Great for vegetables, meats, and poultry.
- **Toast:** Customize your toast with three available toast levels.
- **Warm:** Keeps food at a serving temperature without overcooking.
- **Convection Bake:** Utilizes a fan to circulate hot air for faster and more even cooking, similar to a full-sized oven.


## 7-in-1 Functionality

**Air Fry, bake, toast, broil, roast and MORE!**



Image: The Instant Pot Omni Toaster Oven Air Fryer with a basket of golden french fries, illustrating its versatile 7-in-1 cooking capabilities.

# Fast, crispy results using superior cooking technology

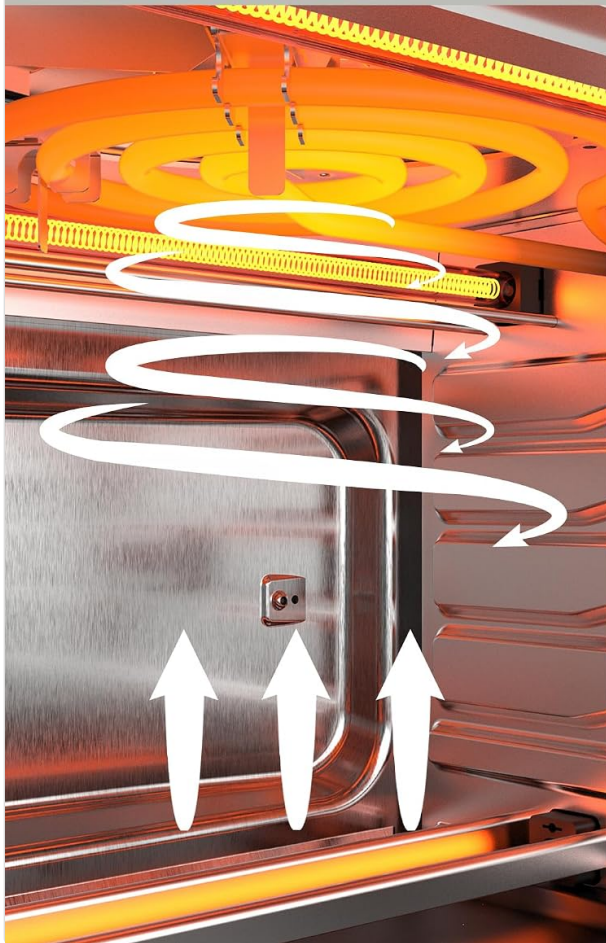

## **EVENCRISP™ AIR FRYING**

Circulates super-hot air from the top down for the ultimate crisp

## **QUARTZ INFRARED**

Radiant heat pre-heats fast and cooks efficiently

Image: A diagram illustrating the EvenCrisp Technology, showing how super-hot air circulates for crisping, and the Quartz Infrared elements for fast, efficient heating.

For recipe inspiration and detailed cooking guides, refer to the 100+ in-app recipes available through the Instant Pot app.

## **MAINTENANCE AND CLEANING**

Regular cleaning ensures the longevity and optimal performance of your Instant Pot Omni. Always unplug the appliance and allow it to cool completely before cleaning.

- **Interior:** The stainless-steel interior can be wiped clean with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- **Accessories:** The enamel baking tray and air frying basket are dishwasher-safe for convenient cleaning. The stainless-steel oven rack can be hand-washed.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not immerse the appliance in water.

# Simple clean-up

Clean up fast with the stainless-steel interior and dishwasher safe accessories



Image: A hand wiping the interior of the Instant Pot Omni Toaster Oven Air Fryer, demonstrating the ease of cleaning its stainless-steel surfaces.

## TROUBLESHOOTING

If you encounter issues with your Instant Pot Omni, refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a functioning electrical outlet. Check your home's circuit breaker.
- **Food not cooking evenly or crisping:** Ensure the appliance is not overcrowded. For air frying, use the air fry basket and ensure proper air circulation around food. Adjust cooking time and temperature as needed.
- **Smoke or unusual odor:** A slight odor may occur during first use. If excessive smoke occurs, unplug the unit immediately and contact customer support. Ensure the crumb tray is clean and free of food debris.
- **Display errors:** Refer to the full user manual (link provided in Support section) for specific error codes and their resolutions.

For more detailed troubleshooting, please consult the official user manual PDF.

## SPECIFICATIONS

| Feature               | Detail                            |
|-----------------------|-----------------------------------|
| Product Dimensions    | 16.53"D x 15.55"W x 13.89"H       |
| Color                 | Black                             |
| Capacity              | 18 Liters (19QT)                  |
| Material              | Stainless Steel                   |
| Output Wattage        | 1500 Watts                        |
| Item Weight           | 25.9 Pounds                       |
| Wattage               | 1800 watts                        |
| Control Method        | App                               |
| Model Name            | 18L Omni Toaster Oven             |
| Dishwasher Safe Parts | Yes (Enamel Tray, Air Fry Basket) |
| Cable Length          | 12 Inches                         |
| Manufacture Year      | 2021                              |
| UPC                   | 810028581913                      |
| Item Model Number     | 140-4003-01                       |

## WARRANTY AND SUPPORT

The Instant Pot Omni 19QT/18L Toaster Oven Air Fryer comes with a standard manufacturer's warranty. For detailed information regarding warranty coverage and terms, please refer to the official warranty documentation included with your purchase or available through the links below.

### Official Documentation

- [Installation Manual \(PDF\)](#)
- [User Manual \(PDF\)](#)

For additional support, product registration, or to explore more Instant Pot products, visit the official Instant Pot Store:

[Visit the Instant Pot Store](#)