

Inscabin M60

Inscabin M60 Portable DAB/DAB+ FM Radio with Bluetooth Speaker User Manual

Model: M60

[Instructions](#) [Introduction](#) [Safety Instructions](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Inscabin M60 Portable DAB/DAB+ FM Radio with Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

Package Contents

- Inscabin M60 Portable Radio
- USB Charging Cable
- User Manual



Figure 1: Package contents including the Inscabin M60 radio, USB charging cable, and user manual.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not disassemble or attempt to repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the device away from heat sources such as radiators, stoves, or other heat-producing appliances.
- Use only the specified charging cable and power adapter (if applicable) to charge the device.
- Ensure proper ventilation around the device during operation.
- Dispose of batteries responsibly according to local regulations.

3. SETUP

3.1 Charging the Battery

The Inscabin M60 features an integrated 1800 mAh rechargeable Lithium-polymer battery. Before first use, fully charge the device.

1. Connect the small end of the USB charging cable to the charging port on the radio.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's

USB port.

3. The charging indicator will illuminate. Once fully charged, the indicator may change color or turn off.

A full charge provides approximately 3 to 6 hours of playback, depending on volume and mode of operation.

3.2 Initial Power On and Antenna Positioning

1. Extend the telescopic antenna for optimal radio reception.
2. Press and hold the Power button to turn on the radio.
3. Upon first power-on, the radio may automatically initiate a DAB/DAB+ scan to find available stations.



Figure 2: Front view of the Inscabin M60 Portable DAB/DAB+ FM Radio.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Volume Control

- **Power On/Off:** Press and hold the Power button to turn the unit on or off.
- **Volume:** Rotate the volume knob (or use dedicated buttons if present) to adjust the audio level.

4.2 Mode Selection

Press the 'Mode' button to cycle through available modes: DAB/DAB+, FM, Bluetooth, Aux-in, USB, Micro SD.



Figure 3: Connectivity options of the Inscabin M60.

4.3 DAB/DAB+ Radio Operation

1. Select DAB mode using the 'Mode' button.
2. If no stations are found or you wish to rescan, initiate an auto-scan (refer to on-screen menu or specific button, e.g., 'Scan'). The radio will search for available digital stations.
3. Use the 'Tune' or navigation buttons to browse through the list of found stations.
4. Press 'Enter' or 'Select' to listen to a station.

4.4 FM Radio Operation

1. Select FM mode using the 'Mode' button.
2. **Auto Scan:** Press the 'Scan' button to automatically search for and store available FM stations.
3. **Manual Tuning:** Use the 'Tune' or navigation buttons to manually adjust the frequency.
4. Use the 'Tune' or navigation buttons to select a stored station.

4.5 Bluetooth Mode

1. Select Bluetooth mode using the 'Mode' button. The display will show "Bluetooth Pairing" or similar.
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "Inscabin M60" from the list of devices to pair.
4. Once paired, you can stream audio from your device to the radio.

4.6 Aux-in Mode

1. Select Aux-in mode using the 'Mode' button.
2. Connect an external audio device (e.g., MP3 player) to the 3.5mm AUX input port on the radio using a 3.5mm audio cable (not included).
3. Audio from the external device will now play through the radio.

4.7 USB/Micro SD Playback

1. Insert a USB drive or Micro SD card into the respective port on the radio.
2. Select USB or Micro SD mode using the 'Mode' button.
3. The radio will automatically detect and play compatible audio files. Use navigation buttons to select tracks.

4.8 Alarm Clock and Sleep Timer

- **Setting Alarms:** Access the 'Alarm' settings via the menu. You can set dual alarms with various durations and sound sources (e.g., buzzer, DAB, FM).
- **Sleep Timer:** Access the 'Sleep Timer' settings via the menu. Set a duration (e.g., 15, 30, 60 minutes) after which the radio will automatically power off.
- **Snooze:** When an alarm sounds, press the 'Snooze' button to temporarily silence it for a short period.

4.9 Language Settings

The Inscabin M60 supports a multi-language system (nine languages). To change the display language, navigate to the 'Settings' or 'System' menu and select 'Language'.

5. MAINTENANCE

5.1 Cleaning

- Wipe the exterior of the radio with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid spraying liquids directly onto the device.

5.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If the device will not be used for an extended period, charge it to approximately 50% and store it in a cool, dry place. Recharge every few months to prevent deep discharge.

6. TROUBLESHOOTING

If you encounter issues with your Inscabin M60, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery is discharged.	Charge the battery using the provided USB cable.
Poor radio reception	Antenna not extended or poor signal area.	Fully extend the telescopic antenna. Try repositioning the radio or moving to a different location.
Bluetooth device cannot pair	Radio not in pairing mode, or device too far.	Ensure the radio is in Bluetooth mode and visible. Move your Bluetooth device closer to the radio. Restart both devices.
No sound from USB/Micro SD	Incorrect file format, or media not properly inserted.	Ensure audio files are in a compatible format. Reinsert the USB drive/Micro SD card. Check if the radio is in the correct playback mode.
Alarm does not sound	Alarm not set correctly or volume too low.	Verify alarm settings (time, source, enabled). Increase the volume.

7. SPECIFICATIONS

Technical specifications for the Inscabin M60 Portable DAB/DAB+ FM Radio:



Figure 4: Dimensions of the Inscabin M60 radio.

Feature	Detail
Model Number	M60
Brand	Inscabin
Connectivity Technology	Bluetooth
Special Features	Portable, Rechargeable, Wireless
Product Dimensions (L x W x H)	16 x 9.6 x 6 centimeters
Tuning Technology	DAB/DAB+, FM
Power Source	Battery Powered
Battery Type	1 Lithium-polymer battery (1800 mAh)
Max Product Power	1.5 Watts
Voltage	7.4 Volts
Audio Output Mode	Stereo
Display Type	LCD

Feature	Detail
Hardware Interface	3.5 mm Audio
Compatible Devices	Smartphone, Tablet
Internal Material	Plastic
Recommended Uses	Music
UPC	054114293674, 707025910597

8. WARRANTY & SUPPORT

Inscabin products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact Inscabin customer support.

Customer Support

If you have any questions, require technical assistance, or experience issues not covered in this manual, please contact Inscabin customer support through the retailer where the product was purchased or visit the official Inscabin website for contact details.