

[Manuals.plus](#) /

› [LEXiBOOK](#) /

› Lexibook Educational and Bilingual Laptop User Manual

## LEXiBOOK JC598i2

# User Manual: Lexibook Educational and Bilingual Laptop

Model: JC598i2 | Brand: LEXiBOOK

## PRODUCT OVERVIEW

---

The Lexibook Educational and Bilingual Laptop, model JC598i2, is designed to provide an engaging and educational experience for children.

Key features include:

- **Educational Activities:** Covers English and Spanish language learning, mathematics, dactylography (typing), general knowledge, logic, music, and clock reading.
- **Knowledge Testing:** Fun activities with different levels of difficulty to learn, test, and improve knowledge.
- **Games:** Entertaining games designed to challenge logic, memory, and speed.
- **Realistic Design:** Ergonomics inspired by real laptops, featuring a realistic mouse and keyboard for an authentic learning experience.
- **Portable:** Slim, elegant design with a convenient size for easy handling by young users.
- **Interactive Display:** LCD screen with engaging animations.



Figure 1: The Lexibook Educational and Bilingual Laptop, showcasing its open design, interactive screen, and connected mouse.

## SETUP

---

### 1. Battery Installation

The Lexibook laptop requires **2 AA batteries** for operation. Ensure batteries are inserted with correct polarity (+/-) as indicated inside the battery compartment.

1. Locate the battery compartment on the underside of the laptop.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 new AA batteries, matching the polarity markings.
4. Replace the battery compartment cover and secure it with the screw.

### 2. Connecting the Mouse

The laptop comes with a wired mouse. Plug the mouse connector into the designated port on the side of the laptop.

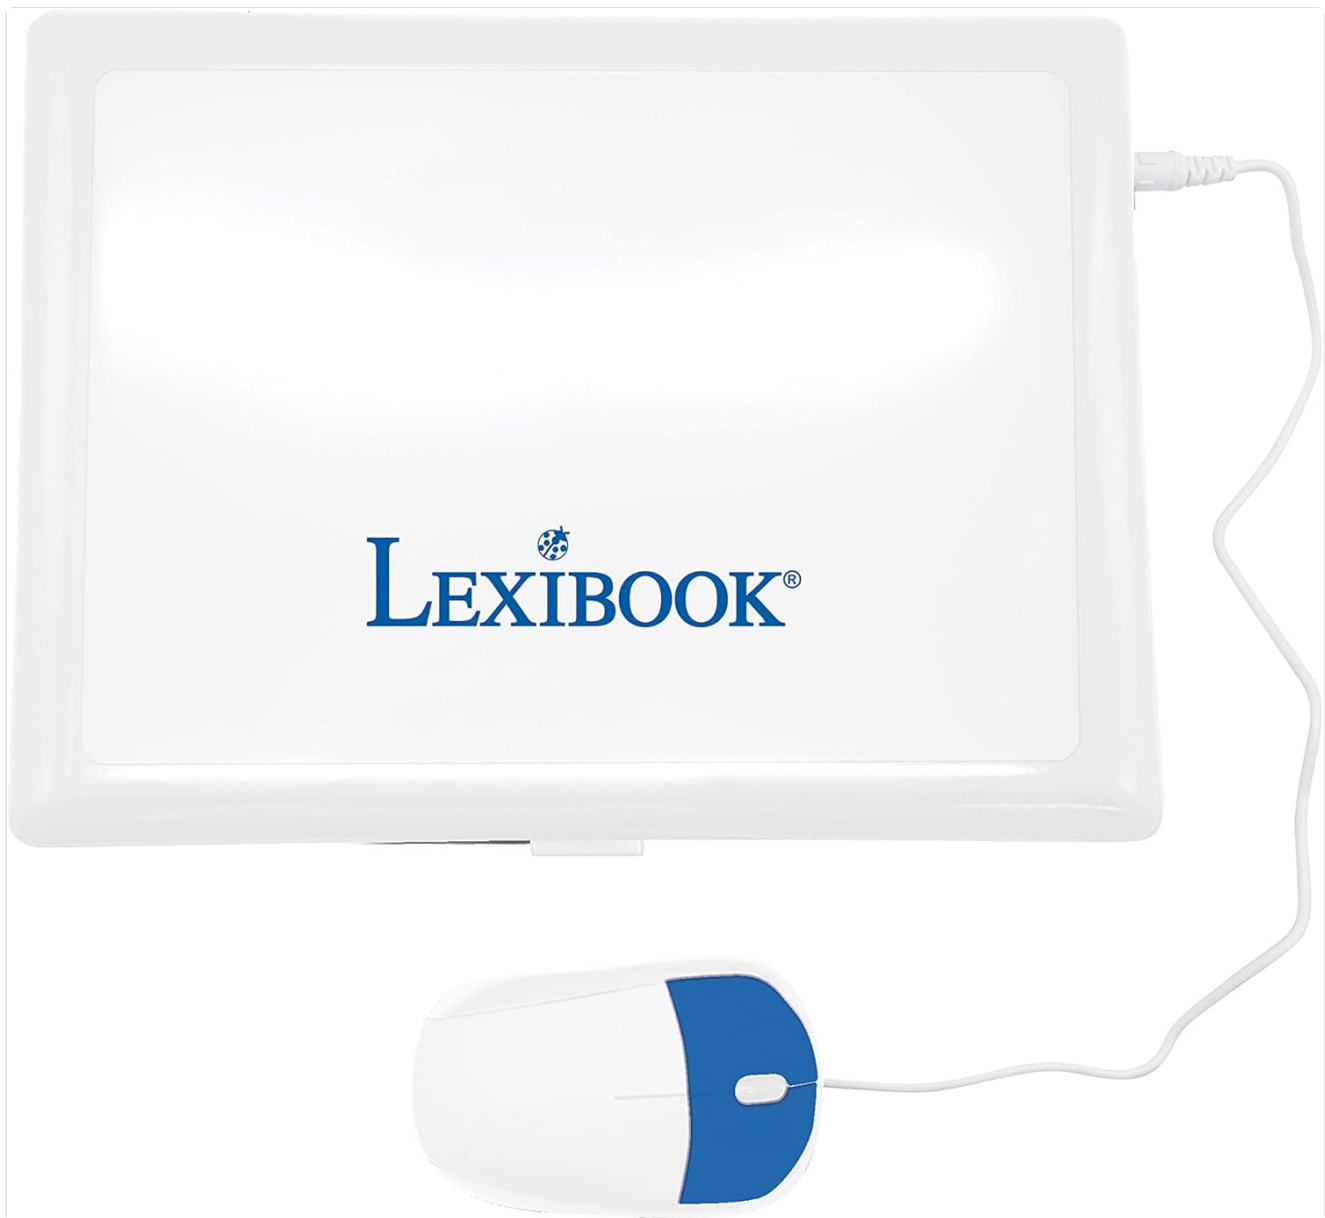


Figure 2: Rear view of the laptop, showing the Lexibook branding and the connected mouse cable.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press the **"On/Off"** button located on the keyboard to turn the laptop on or off.

### 2. Language Selection

To switch between English and Spanish, press the **"Language"** button on the keyboard. The current language will be displayed on the screen.

### 3. Activity Selection

The laptop offers 124 activities categorized for easy navigation. Use the arrow keys (↑ ↓ ← →) to browse through the categories and activities displayed on the screen. Press **"Enter"** to select an activity.

Main activity categories include:

- Mathematics
- Language (English/Spanish)
- Typing (Dactylography)

- General Knowledge
- Logic
- Music
- Clock Reading
- Games

#### 4. Volume Control

Adjust the volume using the "Vol +" and "Vol -" buttons on the keyboard.

#### 5. Using the Keyboard and Mouse

Interact with activities and games using the realistic keyboard for typing answers or navigating. The connected mouse can be used for selection and interaction in compatible activities.



Figure 3: Child engaging with the Lexibook laptop, demonstrating its user-friendly design.

## MAINTENANCE

---

### 1. Cleaning

To clean the laptop, use a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water. Keep the screen free from dust and fingerprints for optimal visibility.

### 2. Storage

Store the laptop in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, remove the batteries to prevent leakage and damage.

### 3. Battery Replacement

Replace batteries when the screen dims, sounds become distorted, or the device stops responding. Follow the

battery installation steps outlined in the "Setup" section.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Laptop does not turn on.	Low or dead batteries; incorrect battery installation.	Check battery polarity. Replace with new AA batteries.
Screen is dim or flickering.	Low battery power.	Replace batteries.
Keys or mouse not responding.	Loose mouse connection; software glitch; low battery.	Ensure mouse is securely plugged in. Turn the laptop off and on again. Replace batteries.
Sound is distorted or absent.	Volume too low; low battery; speaker issue.	Increase volume using "Vol +" button. Replace batteries. If problem persists, contact support.

## SPECIFICATIONS

---

**Model Number:** JC598i2

**Product Dimensions:** 9.4 x 7.1 x 0.1 inches

**Item Weight:** 1.14 pounds

**Manufacturer:** Lexibook

**Country of Origin:** China

**Recommended Age:** 3 years and up

**Batteries:** 2 AA batteries required (not included)

## WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the official Lexibook website or the documentation included with your purchase. You may also find additional resources and FAQs on the [product page](#) where this item was purchased.

A PDF version of the user manual is available for download: [User Manual \(PDF\)](#).