

[Manuals.plus](#) /

> [MangoKit](#) /

> MangoKit MP1 Pocket DAB/DAB+ and FM Digital Radio User Manual

MangoKit MGK-MP1BLK-001

MangoKit MP1 Pocket DAB/DAB+ and FM Digital Radio User Manual

Model: MGK-MP1BLK-001

PRODUCT OVERVIEW

The MangoKit MP1 is a compact and portable digital radio designed for personal listening. It supports both DAB/DAB+ and FM radio bands, offering a wide range of stations. Its lightweight design and long-lasting rechargeable battery make it ideal for on-the-go use.



Image: Front view of the MangoKit MP1 Pocket DAB/DAB+ and FM Digital Radio with included earphones.

Key Features

- **DAB/DAB+ and FM Radio:** Access a wide range of digital and analog radio stations.
- **Portable Design:** Compact and lightweight (65g) for easy carrying.
- **Rechargeable Battery:** Built-in 1000mAh battery provides up to 12 hours of playback.
- **Earphone Use:** Designed for personal listening with included stereo headphones, which also act as the antenna.
- **Lockable Buttons:** Prevents accidental changes to settings or stations during activity.
- **20 Station Presets:** Store up to 10 DAB and 10 FM favorite stations for quick access.
- **High Brightness LCD Display:** Clear and easy-to-read display for navigation.

WHAT'S IN THE BOX

- MangoKit MP1 Digital Radio
- USB Charging Cable

- Stereo Earphones (with built-in antenna)
- User Manual (this document)

SETUP

Charging the Battery

Before first use, fully charge the radio's built-in 1000mAh rechargeable battery. Use the provided micro USB cable to connect the radio to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will show the charging status. A full charge provides up to 12 hours of playback time.



Built-in Rechargeable Battery

Built-in 1,000mAh rechargeable battery gives up to 10 hours playback.

Image: The MangoKit MP1 radio placed on a wooden surface outdoors, illustrating its portability and rechargeable battery feature.

Connecting Earphones

The included stereo earphones serve as both audio output and the radio's antenna. Insert the earphone jack firmly into the 3.5mm earphone port on the radio. Ensure the earphones are properly connected for optimal signal reception in both

DAB/DAB+ and FM modes.



Mini DAB/DAB+ & FM Radio

Easy-to-use mini DAB/FM radio. Offers you crisp and clear audio quality and 20 favorite stations.

Image: The MangoKit MP1 radio with earphones, positioned on a wooden table next to a coffee cup, highlighting its compact size and personal use.

OPERATING INSTRUCTIONS

Power On/Off

To power on the radio, slide the power switch located on the side of the device. To power off, slide the switch back to the off position.

Automatic Station Scan (First Use)

Upon first power-on, the radio will automatically perform a scan for available DAB/DAB+ stations. This process may take a few moments. Once complete, the radio will tune to the first available station.

To manually initiate a scan:

1. Press the **SCAN** button.
2. The radio will begin scanning for available stations and update its station list.

Switching Between DAB/DAB+ and FM Modes

Press the **DAB/FM** button to toggle between DAB/DAB+ digital radio mode and FM analog radio mode.

Tuning Stations

- In DAB/DAB+ mode, use the **Up (^)** and **Down (v)** arrow buttons to navigate through the list of available stations. Press **SELECT** to tune to the desired station.
- In FM mode, use the **Up (^)** and **Down (v)** arrow buttons to manually tune the frequency. Alternatively, press the **SCAN** button to automatically scan for the next available FM station.

Adjusting Volume

Use the **VOL+** button to increase the volume and the **VOL-** button to decrease the volume.

Storing and Recalling Preset Stations

The radio allows you to store up to 10 DAB/DAB+ and 10 FM stations as presets for quick access.

To Store a Station:

Store Your Favourite Stations in 4 Easy Steps

Step 1

Select the station you would like to store as a favourite

Step 2

Press & hold PRESETS button to store the station

Step 3

Shows a list of the Preset stores then press 'SELECT' to store the station

Step 4

The screen will then indicate that your station has been stored

Image: A visual guide demonstrating the four steps to store a favorite radio station on the MangoKit MP1 radio.

1. Tune to the desired station you wish to store.
2. Press and hold the **PRESETS** button for approximately 2 seconds until "Preset Store" appears on the display.
3. Use the **Up (^)** and **Down (v)** arrow buttons to select the desired preset number (1-10).
4. Press the **SELECT** button to confirm and save the station to the chosen preset number. The display will indicate that the station has been stored.

To Recall a Stored Station:

1. Press the **PRESETS** button briefly (do not hold).
2. Use the **Up (^)** and **Down (v)** arrow buttons to scroll through the stored preset stations.
3. Press the **SELECT** button to tune to the desired preset station.

Locking Buttons

To prevent accidental button presses, especially during physical activity, you can lock the radio's controls. Slide the key icon button on the side of the radio downwards to activate the lock function. Slide it upwards to unlock.



Image: A person running with the MangoKit MP1 radio in an armband, highlighting the lock button feature to prevent accidental operation.



Pocket Size for Travel

The perfect size pocket radio ideal travel companion when you are on the go.

Image: The MangoKit MP1 radio placed in a back pocket, demonstrating its compact size and portability for travel.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the radio's surface. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the radio regularly, even if not in constant use.
- **Water Exposure:** This radio is not waterproof. Avoid exposing it to water, rain, or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power / Radio does not turn on.	Battery is depleted.	Charge the radio using the provided USB cable.
No sound or low volume.	Volume is too low; Earphones not connected properly; Earphones faulty.	Increase volume using VOL+ button; Ensure earphones are fully plugged in; Try different earphones if available.
Poor reception / Static.	Weak signal area; Earphones not acting as antenna; Interference.	Move to an area with better signal; Ensure earphones are fully plugged in and extended; Avoid sources of electronic interference.
Cannot find DAB/DAB+ stations.	Out of DAB coverage area; Scan not performed.	Perform a full scan for DAB stations; Check local DAB coverage; Move to a different location.
Buttons are unresponsive.	Key lock is activated.	Slide the key icon button on the side upwards to unlock the controls.

SPECIFICATIONS

Feature	Detail
Model Number	MGK-MP1BLK-001
Dimensions (L x W x H)	8.7 x 4.8 x 1.5 cm
Weight	65 g
Radio Bands	DAB/DAB+, FM
Battery Type	1000mAh Lithium Ion (Rechargeable)
Playback Time	Up to 12 hours (approximate)
Connectivity	USB (for charging)
Included Components	USB cable, User Manual, Earphone

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official MangoKit website. Keep your proof of purchase for any warranty claims.

Note: The email address and website on some older instructions may not work. Please refer to the latest information provided by the seller or on the product's official Amazon listing for current support channels.

