

EvoFox 579

EvoFox Elite Ops Wireless Gamepad User Manual

Model: 579

Brand: EvoFox

INTRODUCTION

Welcome to the user manual for your EvoFox Elite Ops Wireless Gamepad. This guide provides detailed instructions on setting up, operating, and maintaining your gamepad to ensure an optimal gaming experience across various platforms including Android TV, Google TV, Windows PC, and PS3.

SAFETY INFORMATION

- Keep the device away from water and excessive moisture.
- Do not expose the gamepad to extreme temperatures or direct sunlight.
- Avoid dropping or subjecting the gamepad to strong impacts.
- Do not attempt to disassemble, modify, or repair the device yourself. This will void the warranty.
- Use only the provided charging cable and compatible power sources.

PACKAGE CONTENTS

Your EvoFox Elite Ops Wireless Gamepad package should include the following items:

- EvoFox Elite Ops Wireless Gamepad
- USB Charging Cable (Type-C)
- USB Dongle (Wireless Receiver)
- User Manual

PRODUCT OVERVIEW

The EvoFox Elite Ops Wireless Gamepad is ergonomically designed for comfortable and precise gaming. Familiarize yourself with its key components and controls.



Figure 1: EvoFox Elite Ops Wireless Gamepad (Dusk Grey)

ZERO LAG CONNECTIVITY

with Accurate & Precise Controls



Figure 2: Key features and controls of the EvoFox Elite Ops Gamepad, highlighting Digital Triggers, USB-C Charging Port, Action Buttons, Turbo Button, Ultra Precise Direction Keys, High Precision Analog Joysticks, and LED Indicators.

Controls and Buttons

- **Digital Triggers:** For precise input in games.
- **USB-C Charging Port:** Located on the top edge for convenient charging.
- **Action Buttons (A, B, X, Y):** Standard gamepad action buttons for in-game commands.
- **Turbo Button:** Activates turbo mode for rapid button presses.
- **Ultra Precise Direction Keys (D-Pad):** For accurate directional input.
- **High Precision Analog Joysticks:** For smooth and accurate movement control.
- **LED Indicators:** Display connection status and battery level.
- **Select/Back Button:** Used for menu navigation and in-game functions.
- **Start/Menu Button:** Used for pausing games and accessing menus.

SETUP

Connecting to Android TV / Google TV

The EvoFox Elite Ops Wireless Gamepad is optimized for Android TV and Google TV for a seamless

gaming experience.

1. Insert the provided USB Dongle into an available USB port on your Android TV or Google TV.
2. For optimal wireless performance and to ensure a clear line of sight, use the included USB Extender Cable if the USB port is not easily accessible or is obstructed. This helps maintain stable connectivity up to 12 feet.
3. Power on the gamepad. The gamepad should automatically connect to the USB dongle. The LED indicators on the gamepad will confirm a successful connection.



Figure 3: Connecting the EvoFox Elite Ops Gamepad to an Android TV using the USB Extender Cable for improved signal and range.

Connecting to PC (Windows)

The gamepad supports Windows operating systems with both X-input and D-input modes, offering broad compatibility.

1. Insert the USB Dongle into an available USB port on your PC.
2. Power on the gamepad. The gamepad will automatically detect your system and switch to the appropriate mode (X-input or D-input).
3. No additional drivers are typically required for Plug and Play functionality.

Connecting to PS3

The gamepad is compatible with PS3 consoles for an enhanced gaming experience.

1. Insert the USB Dongle into an available USB port on your PS3.
2. Power on the gamepad. The gamepad will automatically connect to the console.

OPERATING INSTRUCTIONS

General Usage

Once connected, the gamepad functions as a standard controller for navigation within menus and gameplay. The precise analog joysticks and responsive buttons ensure accurate control.

Turbo Mode

The gamepad features an easy-to-use Turbo Mode for rapid firing of specific buttons, useful in certain game genres.

- **To activate Turbo for a button:** Press and hold the **Turbo** button, then press the desired action button (e.g., A, B, X, Y). The button will now rapidly repeat its input when held down.
- **To deactivate Turbo for a button:** Press and hold the **Turbo** button again, then press the same action button. The turbo function for that button will be turned off.

Vibration Feedback

The gamepad includes dual rumble vibration motors for immersive feedback during gameplay.

- Vibration feedback is supported on PC and PS3 platforms, enhancing the gaming experience with tactile responses.
- *Note: Android TV games may not have built-in vibration support, so this feature might not function on all Android TV titles.*

CHARGING AND BATTERY

The EvoFox Elite Ops Wireless Gamepad is equipped with a 400mAh rechargeable Lithium Ion battery, providing extended gameplay sessions.

- To charge the gamepad, connect the provided Type-C charging cable to the gamepad's USB-C port and a standard USB power source (e.g., computer USB port, USB wall adapter).
- The LED indicators on the gamepad will display the charging status.
- A full charge typically provides up to 8 hours of continuous gameplay, depending on usage and vibration intensity.

8 HOURS OF GAMING

With USB-C Charging Port



Figure 4: The EvoFox Elite Ops Gamepad offers up to 8 hours of gameplay on a single charge via its convenient USB-C port.

TROUBLESHOOTING

Gamepad not connecting:

- Ensure the USB Dongle is securely inserted into an active USB port on your device.
- For Android TV, try using the USB Extender Cable to improve signal reception and line of sight.
- Check if the gamepad battery is sufficiently charged.
- Try connecting the dongle to a different USB port on your device.
- Restart the gamepad by turning it off and on again.

Lag or Disconnections:

- Ensure there are no major physical obstructions (e.g., furniture, walls) between the gamepad and the USB dongle.
- Stay within the effective wireless range of up to 12 feet.
- Reduce interference from other wireless devices operating on the same frequency (e.g., Wi-Fi routers, other 2.4GHz devices).

- Ensure the gamepad is fully charged.

Vibration not working on Android TV:

- Vibration feedback is primarily supported on PC and PS3 platforms. Many Android TV games do not have built-in vibration support, which is a limitation of the game or platform, not the gamepad.

Buttons not responding correctly:

- Ensure the gamepad is fully charged.
- Restart the gamepad and the connected device (TV, PC, PS3).
- If using on PC, ensure the game's settings are configured to recognize gamepad input.

SPECIFICATIONS

Feature	Detail
Model Number	579
Product Dimensions	15.3 x 10.6 x 5.3 cm
Item Weight	190 g
Battery Type	1 Lithium Ion (included)
Battery Capacity	400mAh
Estimated Play Time	Up to 8 hours
Charging Port	USB Type-C
Connectivity	Wireless (2.4GHz USB Dongle)
Wireless Range	Up to 12 feet
Compatibility	Android TV, Google TV, Windows PC (X-input & D-input), PS3
Included Components	Gamepad, Charging Cable, USB Dongle, User Manual
Manufacturer	Allied Electronics & Magnetics Pvt. Ltd.
Release Date	14 October 2021

WARRANTY AND SUPPORT

Warranty Information

The EvoFox Elite Ops Wireless Gamepad comes with a **1-Year Manufacturing Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any assistance, technical support, or warranty-related inquiries, please contact EvoFox customer

support. Contact details are typically provided in the product packaging or on the official EvoFox brand website.