

Manuals.plus /

› Afoddon /

› Afoddon Detachable Large Battery for A200 Series Cordless Vacuum User Manual

## Afoddon A200Pro

# Afoddon Detachable Large Battery for A200 Series Cordless Vacuum User Manual

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and effective use of your Afoddon Detachable Large Battery, designed for the A200 and A200Pro series cordless vacuum cleaners. Please read this manual thoroughly before installation and operation to ensure optimal performance and longevity of the battery.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This battery contains Lithium-Ion cells. Improper use can result in fire, explosion, or chemical burns.

- Do not disassemble, open, or shred the battery pack.
- Do not expose the battery pack to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- Do not remove a battery pack from its original packaging until required for use.
- Do not subject battery packs to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not use any charger other than that specifically provided for use with the equipment.
- Keep battery packs out of the reach of children.
- Seek medical advice immediately if a battery pack has been swallowed.
- Keep battery packs clean and dry.

- Do not use any battery pack that is not designed for use with the equipment.
- Recharge only with the charger specified by the manufacturer.
- Observe the plus (+) and minus (-) marks on the battery and equipment and ensure correct use.

### 3. PRODUCT OVERVIEW

---

The Afoddon Detachable Large Battery is a high-capacity power source designed to extend the runtime of your Afoddon A200 and A200Pro series cordless vacuum cleaners. It features multiple protection mechanisms to ensure safe and reliable operation.



Image 1: Front view of the Afoddon Detachable Large Battery. It is a cylindrical white unit with a blue 'MAX' button on top and four indicator lights.



Image 2: Angled view of the Afoddon Detachable Large Battery, showing its cylindrical shape and connection points.



Image 3: Rear view of the Afoddon Detachable Large Battery, highlighting the 'MAX' button and indicator lights.

## 4. COMPATIBILITY

---

This detachable battery is specifically designed for use with the following Afoddon cordless vacuum cleaner models:

- Afoddon A200 Cordless Vacuum Cleaner
- Afoddon A200Pro Cordless Vacuum Cleaner

**Note:** This battery is not compatible with other vacuum cleaner models or brands. Using an incompatible battery may cause damage to the vacuum or the battery itself.

## 5. SETUP AND INSTALLATION

---

Follow these steps to install the detachable battery into your Afoddon A200 or A200Pro cordless vacuum cleaner.

1. **Power Off:** Ensure your vacuum cleaner is turned off and disconnected from any charging source before attempting to install or remove the battery.
2. **Locate Battery Compartment:** Identify the battery compartment on your Afoddon A200 or A200Pro vacuum cleaner. This is typically located near the handle or main body of the vacuum.

3. **Align Battery:** Align the battery with the compartment, ensuring the connectors on the battery match the terminals in the vacuum.
4. **Insert Battery:** Gently slide the battery into the compartment until it clicks securely into place. Do not force the battery. If it does not slide in easily, re-check the alignment.
5. **Verify Installation:** Once installed, gently tug on the battery to ensure it is firmly seated and will not detach during use.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Initial Charge

Before first use, fully charge the battery. This helps to condition the battery for optimal performance.

### 6.2 Charging the Battery

The battery can be charged while installed in the vacuum or separately, depending on your vacuum model's design. Use only the original Afoddon charger provided with your vacuum cleaner.

- Connect the charger to a power outlet.
- Connect the charger cable to the charging port on the vacuum cleaner or directly to the battery if charging separately.
- The battery indicator lights will illuminate to show the charging status.
- A full charge typically takes approximately 4.5 hours. The indicator lights will show a steady full charge when complete.

### 6.3 Battery Runtime

A fully charged battery provides approximately 40 minutes of cord-free cleaning time, depending on the power mode selected and the type of surface being cleaned.

## 7. MAINTENANCE

---

Proper maintenance ensures the longevity and performance of your battery.

- **Storage:** Store the battery in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to store the battery with a partial charge (around 50%).
- **Cleaning:** Wipe the battery exterior with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the charging contacts are clean and free of debris.
- **Disposal:** Do not dispose of the battery in household waste. Lithium-Ion batteries must be recycled or disposed of according to local regulations. Contact your local waste management authority for information on battery recycling options.

## 8. TROUBLESHOOTING

---

If you encounter issues with your battery, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Battery not charging	Charger not connected properly; Faulty charger or outlet; Battery too hot/cold; Battery fault.	Ensure charger is securely connected to both battery/vacuum and power outlet. Try a different outlet. Allow battery to reach room temperature. If problem persists, contact customer support.
Short runtime after full charge	Battery degradation; High power mode usage; Obstruction in vacuum.	Battery capacity naturally decreases over time. Use standard power mode for longer runtime. Check vacuum for blockages that increase motor strain.
Battery indicator lights not working	Battery not properly installed; Battery fault.	Re-install the battery, ensuring it clicks into place. If lights still do not function, contact customer support.

## 9. SPECIFICATIONS

The following are the technical specifications for the Afoddon Detachable Large Battery:

- **Model Number:** A200Pro
- **Battery Cell Composition:** Lithium Ion
- **Battery Capacity:** 2200 Milliamp Hours (mAh)
- **Number of Cells:** 9 (included)
- **Approximate Charging Time:** 4.5 hours
- **Approximate Runtime:** 40 minutes (depending on usage)
- **Item Weight:** 14 ounces (approximately 397 grams)
- **Package Dimensions:** 4.38 x 3.5 x 3.25 inches
- **Recommended Use:** Cordless Vacuum Cleaner (Afoddon A200/A200Pro series)

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your original Afoddon A200 or A200Pro cordless vacuum cleaner, or visit the official Afoddon website. Keep your purchase receipt as proof of purchase for warranty claims.