

Manuals.plus /

› Philips /

› Philips DVT1120 VoiceTracer Audio Recorder User Manual

Philips DVT1120

Philips DVT1120 VoiceTracer Audio Recorder User Manual

Model: DVT1120

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Philips DVT1120 VoiceTracer Audio Recorder. Please read this manual thoroughly before using the device and retain it for future reference. The Philips DVT1120 is designed for clear audio recording with 8 GB of built-in memory and an extra-long battery life.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Philips DVT1120 VoiceTracer Audio Recorder
- USB Cable
- 2 x AAA Batteries
- Quick Start Guide





Figure 3.1: Front view of the Philips DVT1120 VoiceTracer.

3.1 Controls and Functions

- **Display Screen:** Shows recording status, battery level, time, and file information. Note: This model does not feature a backlight.
- **Record Button (Red Dot):** Press to start recording.
- **Stop Button (Square):** Press to stop recording or playback.
- **Play/Pause Button (Triangle/Two Vertical Bars):** Press to start or pause playback.
- **Skip Forward/Backward Buttons:** Navigate between recordings or fast forward/rewind during playback.
- **Folder Button:** Access different recording folders (A, B, C, D).
- **Delete Button (Trash Can):** Erase selected recordings.
- **Menu Button:** Access device settings.
- **Volume Buttons (+/-):** Adjust playback volume.
- **USB Port:** Connect to a computer for file transfer.
- **Headphone Jack (3.5mm):** Connect headphones for private listening.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the device.
2. Slide the battery compartment cover open.
3. Insert the two AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

Note: The Philips DVT1120 uses disposable AAA batteries and is not rechargeable. Ensure you have fresh batteries for optimal performance.

4.2 Powering On/Off

- **To Power On:** Press and hold the Play/Pause button for a few seconds until the display illuminates.
- **To Power Off:** Press and hold the Stop button for a few seconds until the display turns off.

5. OPERATING INSTRUCTIONS

5.1 Recording Audio

1. Ensure the device is powered on.
2. Press the **Record** button (red dot) once to begin recording. The recording indicator will illuminate.
3. To pause recording, press the **Play/Pause** button. Press it again to resume.
4. To stop recording, press the **Stop** button. The recording will be saved automatically with a time stamp.



Figure 5.1: One-touch recording feature.



Figure 5.2: Recordings are automatically time-stamped.

5.2 Playback

1. Navigate to the desired recording using the **Skip Forward/Backward** buttons.
2. Press the **Play/Pause** button to start playback.
3. Adjust the volume using the **Volume +/-** buttons on the side of the device.
4. To stop playback, press the **Stop** button.

5.3 File Management

The DVT1120 organizes recordings into four folders: A, B, C, and D. You can switch between these folders using the **Folder** button.

5.3.1 Deleting Recordings

1. During playback or when a recording is selected, press the **Delete** button (trash can icon).
2. Confirm your selection if prompted.

5.3.2 Connecting to a Computer

The device features 8 GB of built-in memory for storing numerous recordings.



Figure 5.3: 8 GB built-in memory.

1. Connect the VoiceTracer to your computer using the supplied USB cable.
2. The device will be recognized as a removable storage device (USB drive).
3. You can then drag and drop files to and from the device.



Figure 5.4: PC connection for plug & play file transfer.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use abrasive cleaners or solvents.
- **Battery Care:** Remove batteries if the device will not be used for an extended period to prevent leakage.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|---|
| Device does not power on. | Batteries are depleted or incorrectly inserted. | Replace batteries with new AAA batteries and ensure correct polarity. |
| Screen is difficult to read in low light. | The device does not have a backlight. | Use the device in adequately lit environments. |
| Cannot delete recordings. | Incorrect deletion procedure. | Refer to Section 5.3.1 for detailed deletion instructions. |
| Device not recognized by computer. | Faulty USB cable or connection. | Try a different USB port or cable. Ensure the device is powered on when connected. |
| Poor recording quality. | Microphone obstructed or recording in a noisy environment. | Ensure the microphone is clear. Record in a quieter environment. Check menu settings for recording quality options. |

8. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|---|
| Model | DVT1120 |
| Built-in Memory | 8 GB |
| Recording Format | Multiple Formats (e.g., WAV) |
| Battery Type | 2 x AAA batteries (included) |
| Interface | USB 2.0 |
| Headphones Jack | 3.5 mm |
| Microphone | Built-in |
| Product Dimensions (L x W x H) | 4.25" x 1.34" x 0.75" (10.8 x 3.4 x 1.9 cm) |
| Item Weight | 1.62 ounces (46 grams) |

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Philips website. Keep your proof of purchase for warranty claims.